



**PRONAR Sp. z o.o.**

17-210 NAREW, UL. MICKIEWICZA 101A, WOJ. PODLASKIE, POLAND

Phone.: +48 085 681 63 29

+48 085 681 64 29

+48 085 681 63 81

+48 085 681 63 82

Fax: +48 085 681 63 83

+48 085 682 71 10

[www.pronar.pl](http://www.pronar.pl)


# **OPERATOR'S MANUAL**

## **TRAILER**

### **PRONAR T663/4**

### **PRONAR 663/4 SILO**

TRANSLATION OF THE ORIGINAL DOCUMENT

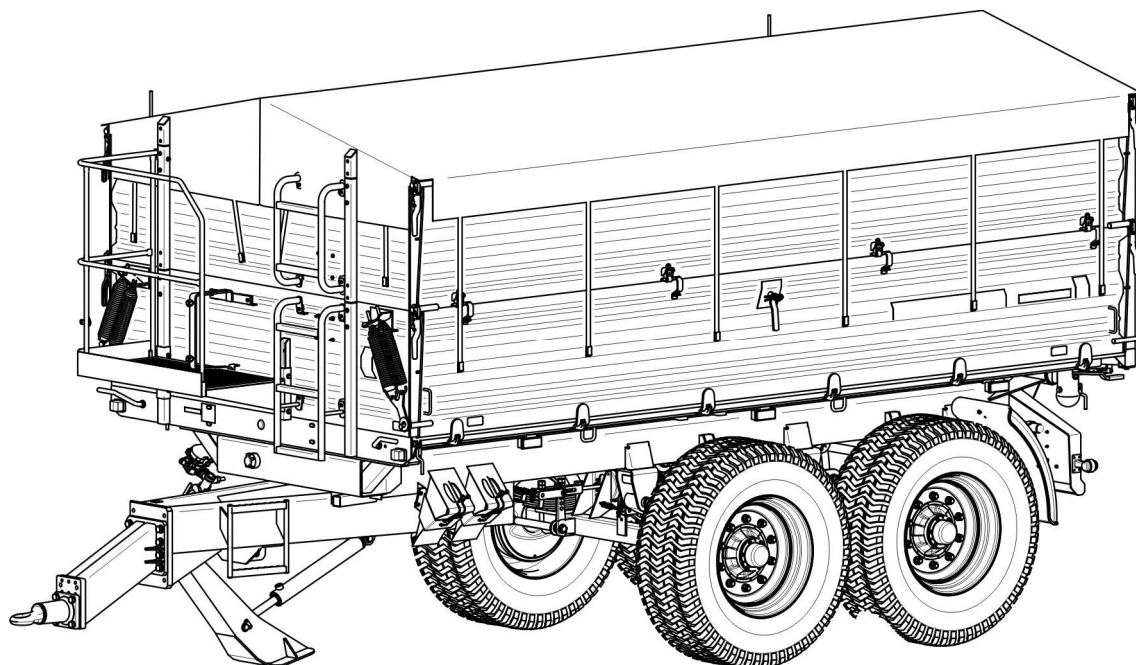

ISSUE 1B-11-2011

PUBLICATION NO. 177N-00000000-UM

EN



# INTRODUCTION

Information contained herein is current as of the date of its publication. As a result of improvements, some numerical values and illustrations contained in this publication may not correspond to the factual specification of the machine delivered to the user. The manufacturer reserves the right to introduce design changes in manufactured machines that facilitate operation and improve the quality of their work, without making amendments to this Operator's Manual.

This Operator's Manual is an integral part of the machine. Before using the machine, the user must carefully read this Operator's Manual and observe all recommendations. This guarantees safe operation and ensures malfunction-free work of the machine. The machine is designed to meet obligatory standards, documents and legal regulations currently in force.

The manual describes the basic safety and operation rules of Pronar T663/4, T663/4 SILO trailer.

If the information contained in the Operator's Manual needs clarification, the user should refer for assistance to the sale point where the machine was purchased or to the manufacturer.

## MANUFACTURER'S ADDRESS

*PRONAR Sp. z o.o.  
ul. Mickiewicza 101A  
17-210 Narew, Poland*

## PHONE NUMBERS

<i>+48 085 681 63 29</i>	<i>+48 085 681 64 29</i>
<i>+48 085 681 63 81</i>	<i>+48 085 681 63 82</i>

## SYMBOLS USED IN THIS MANUAL

Information, descriptions of danger, precautions, recommendations and orders associated with user safety instructions are indicated as follows:



and preceded by the word "**DANGER**". Failure to observe the instructions may endanger the machine operator's or other person's health or life.

Particularly important information and instructions, the observance of which is essential, are indicated with the sign:



and preceded by the word "**ATTENTION**". Failure to observe the instructions may lead to damage to the machine as a result of improper operation, adjustment or use.

In order to focus the user's attention on the need to perform periodical maintenance, the relevant section of the Operator's Manual is indicated with the sign:



Additional tips contained in this document refer to helpful information on the machine operation and are indicated as follows:



and preceded by the word "**TIP**".

## **DETERMINING THE DIRECTIONS FOR THE MANUAL'S NEEDS**

Left side — a left hand side of the person facing the machine's forward travel direction.

Right side — a right hand side of the person facing the machine's forward travel direction.

## **SCOPE OF OPERATION STEPS**

Operation steps are indicated with the following sign: ➡

The result of an operation/adjustment task or any notes on execution of the tasks performed is indicated with the sign ⇒

**PRONAR Sp. z o.o.**

ul. Mickiewicza 101 A

17-210 Narew, Polska

tel./fax (+48 85) 681 63 29, 681 63 81, 681 63 82,  
681 63 84, 681 64 29

fax (+48 85) 681 63 83

<http://www.pronar.pl>e-mail: [pronar@pronar.pl](mailto:pronar@pronar.pl)

## EC DECLARATION OF CONFORMITY OF THE MACHINERY

PRONAR Sp. z o.o. declares with full responsibility, that the machine:

Description and identification of the machinery	
Generic denomination and function:	<b>AGRICULTURAL TRAILER</b>
Type:	<b>T663/4</b>
Model:	-----
Serial number:	
Commercial name:	<b>AGRICULTURAL TRAILER PRONAR T663/4</b>

to which this declaration relates, fulfills all the relevant provisions of the Directive **2006/42/EC** of The European Parliament and of The Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (Official Journal of the EU, L 157/24 of 09.06.2006).

The person authorized to compile the technical file is the Head of Research and Development Department at PRONAR Sp. z o.o., 17-210 Narew, ul. Mickiewicza 101A, Poland.

This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user.

Narew, the 2014 -08- 28

Place and date

Z-CA DYREKTORA  
d/s technicznych  
czynności zarządu  
*Roman Omelianiuk*

Full name of the empowered person  
position, signature

# TABLE OF CONTENTS

<b>1</b>	<b>BASIC INFORMATION</b>	<b>1.1</b>
1.1	IDENTIFICATION	1.2
1.1.1	TRAILER IDENTIFICATION	1.2
1.1.2	AXLE IDENTIFICATION	1.3
1.1.3	LIST OF FACTORY NUMBERS	1.4
1.2	PROPER USE	1.4
1.3	EQUIPMENT	1.8
1.4	WARRANTY TERMS	1.9
1.5	TRANSPORT	1.10
1.5.1	TRANSPORT ON VEHICLE.	1.11
1.5.2	INDEPENDENT TRANSPORT BY THE USER.	1.13
1.6	ENVIRONMENTAL HAZARDS	1.13
1.7	WITHDRAWAL FROM USE	1.14
<b>2</b>	<b>SAFETY ADVICE</b>	<b>2.1</b>
2.1	BASIC SAFETY RULES	2.2
2.1.1	USE OF TRAILER	2.2
2.1.2	HITCHING AND DISCONNECTING FROM TRACTOR	2.3
2.1.3	HITCHING AND UNHITCHING THE SECOND TRAILER	2.3
2.1.4	HYDRAULIC AND PNEUMATIC SYSTEMS	2.4
2.1.5	LOADING AND UNLOADING	2.5
2.1.6	TRANSPORTING THE MACHINE	2.7
2.1.7	TYRES	2.10
2.1.8	MAINTENANCE	2.11
2.2	RESIDUAL RISK	2.13
2.3	INFORMATION AND WARNING DECALS	2.14

<b>3</b>	<b>DESIGN AND OPERATION</b>	<b>3.1</b>
3.1	TECHNICAL SPECIFICATION	3.2
3.2	TRAILER CONSTRUCTION	3.3
3.2.1	CHASSIS	3.3
3.2.2	LOAD BOX	3.5
3.2.3	MAIN BRAKE	3.9
3.2.4	HYDRAULIC TIPPER SYSTEM	3.14
3.2.5	SUPPORT HYDRAULIC SYSTEM	3.16
3.2.6	HYDRAULIC SYSTEM OF SILO ATTACHMENT	3.18
3.2.7	PARKING BRAKE	3.19
3.2.8	LIGHTING SYSTEM	3.20
<b>4</b>	<b>CORRECT USE</b>	<b>4.1</b>
4.1	PREPARING FOR WORK BEFORE THE FIRST USE	4.2
4.1.1	CHECKING THE TRAILER AFTER DELIVERY	4.2
4.1.2	PREPARING THE TRAILER FOR THE FIRST HITCHING TO TRACTOR	4.3
4.2	HITCHING AND UNHITCHING THE TRAILER FROM TRACTOR	4.5
4.3	HITCHING AND UNHITCHING THE SECOND TRAILER	4.9
4.4	LOADING AND SECURING LOAD	4.11
4.4.1	GENERAL INFORMATION ABOUT LOADING	4.11
4.5	TRANSPORTING LOAD	4.19
4.6	UNLOADING	4.20
4.7	PROPER USE AND MAINTENANCE OF TYRES	4.26
<b>5</b>	<b>MAINTENANCE</b>	<b>5.1</b>
5.1	PRELIMINARY INFORMATION	5.2
5.2	MAINTENANCE OF BRAKES AND AXLES	5.2
5.2.1	PRELIMINARY INFORMATION	5.2
5.2.2	INITIAL INSPECTION OF AXLE BRAKES,	5.3



5.2.3	CHECK WHEEL AXLE BEARINGS FOR SLACKNESS	5.4
5.2.4	ADJUSTMENT OF AXLE BEARING SLACKNESS	5.6
5.2.5	MOUNTING AND DISMOUNTING WHEEL, INSPECTION OF WHEEL NUT TIGHTENING	5.7
5.2.6	CHECKING AIR PRESSURE IN TYRES, EVALUATING TECHNICAL CONDITION OF TYRES AND STEEL WHEELS	5.9
5.2.7	ADJUSTMENT OF MECHANICAL BRAKES	5.10
5.2.8	CHANGE OF PARKING BRAKE CABLES AND ADJUSTMENT OF CABLE TENSION.	5.12
5.3	PNEUMATIC SYSTEM MAINTENANCE	5.15
5.3.1	PRELIMINARY INFORMATION	5.15
5.3.2	CHECKING AIR TIGHTNESS AND VISUAL INSPECTION OF PNEUMATIC SYSTEM	5.15
5.3.3	CLEANING THE AIR FILTERS	5.17
5.3.4	DRAINING WATER FROM AIR TANK	5.18
5.3.5	CLEANING THE DRAIN VALVE	5.19
5.3.6	CLEANING AND MAINTAINING PNEUMATIC CONDUIT CONNECTIONS AND PNEUMATIC SOCKETS	5.20
5.3.7	REPLACEMENT OF PNEUMATIC CONDUIT	5.21
5.4	HYDRAULIC SYSTEM MAINTENANCE	5.22
5.4.1	PRELIMINARY INFORMATION	5.22
5.4.2	CHECKING HYDRAULIC SYSTEM TIGHTNESS	5.22
5.4.3	CHECKING TECHNICAL CONDITION OF HYDRAULIC COUPLERS AND SOCKETS.	5.23
5.4.4	REPLACEMENT OF HYDRAULIC CONDUITS	5.23
5.5	MAINTENANCE OF ELECTRICAL SYSTEM AND WARNING ELEMENTS	5.24
5.5.1	PRELIMINARY INFORMATION	5.24
5.5.2	REPLACEMENT OF BULBS	5.25
5.6	TRAILER LUBRICATION	5.25
5.7	CONSUMABLES	5.31

5.7.1	HYDRAULIC OIL	5.31
5.7.2	LUBRICANTS	5.32
5.8	CLEANING THE TRAILER	5.33
5.9	STORAGE	5.35
5.10	TIGHTENING TORQUE FOR NUT AND BOLT CONNECTIONS	5.35
5.11	INSTALLATION AND DISMOUNTING OF WALL EXTENSIONS	5.37
5.12	ADJUSTMENT OF DRAWBAR POSITION	5.37
5.13	TROUBLESHOOTING	5.39

***SECTION***


**1**

---

**BASIC INFORMATION**

# 1.1 IDENTIFICATION

## 1.1.1 TRAILER IDENTIFICATION

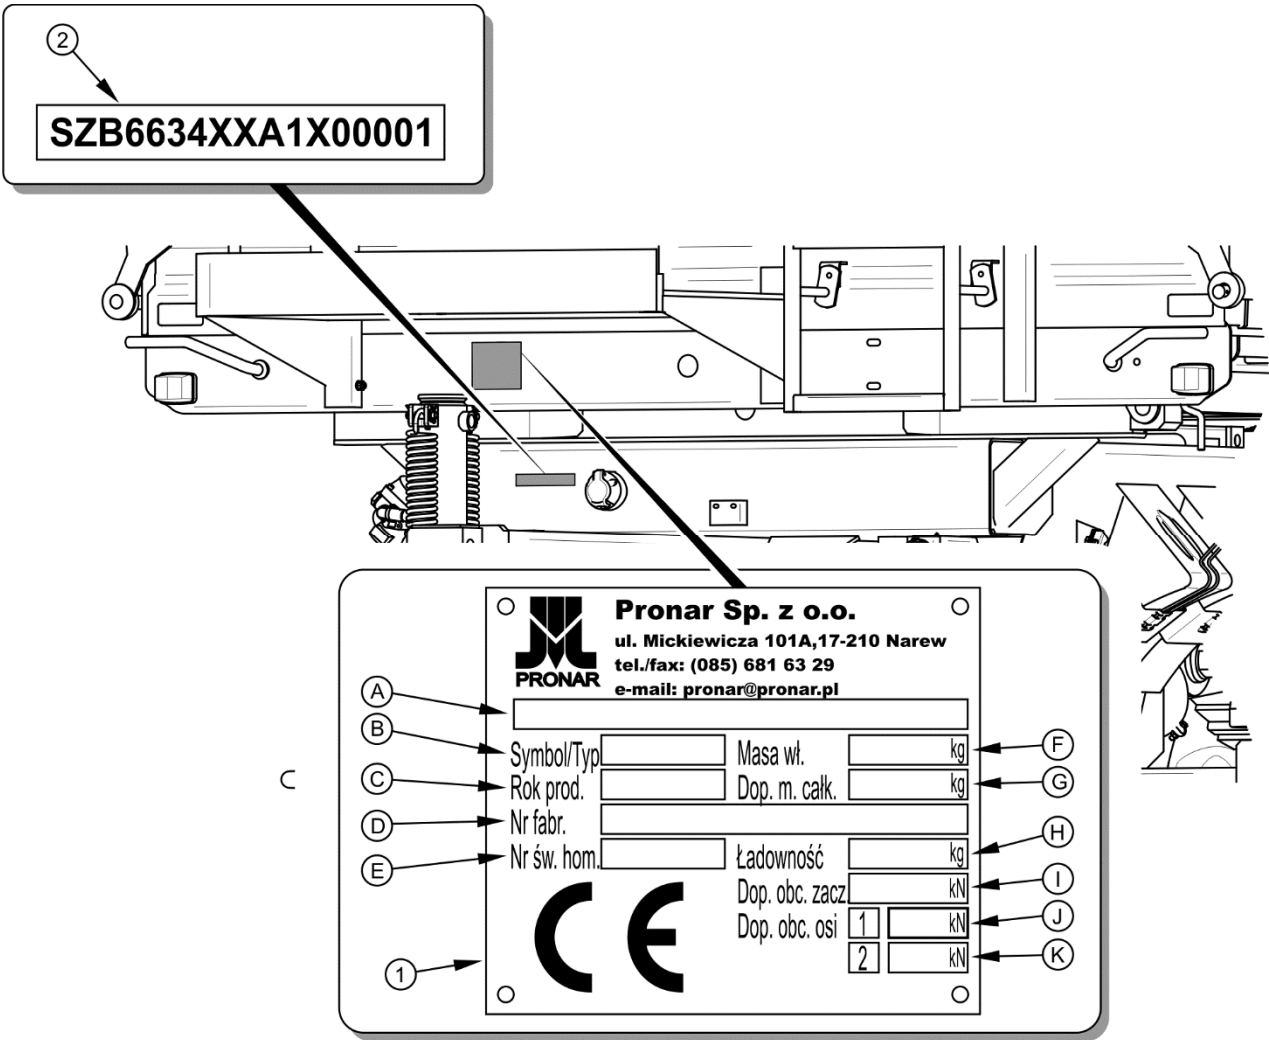


**FIGURE 1.1**      Location of the data plate and serial number

(1) data plate, (2) serial number

The trailer is marked with the data plate (1), and the factory number (2) located on a gold painted rectangle. The data plate is located on the front beam of the main frame and the serial number is stamped into the front beam of the chassis frame – figure (1.1). When buying the trailer check that the serial numbers on the machine agree with the number written in the *WARRANTY BOOK*, in the sales documents and in the *OPERATOR'S MANUAL*. The meanings of the individual fields found on the data plate are presented in the table below:

**TABLE 1.1 Markings on data plate**

ITEM	MARKING
<b>A</b>	General description and purpose
<b>B</b>	Symbol / type of trailer
<b>C</b>	Trailer year of manufacture
<b>D</b>	Seventeen digit vehicle identification number (VIN)
<b>E</b>	Official certificate number
<b>F</b>	Tare weight
<b>G</b>	Maximum gross weight
<b>H</b>	Carrying capacity
<b>I</b>	Permissible hitching system loading
<b>J</b>	Permissible axle 1 load
<b>K</b>	Permissible axle 2 load

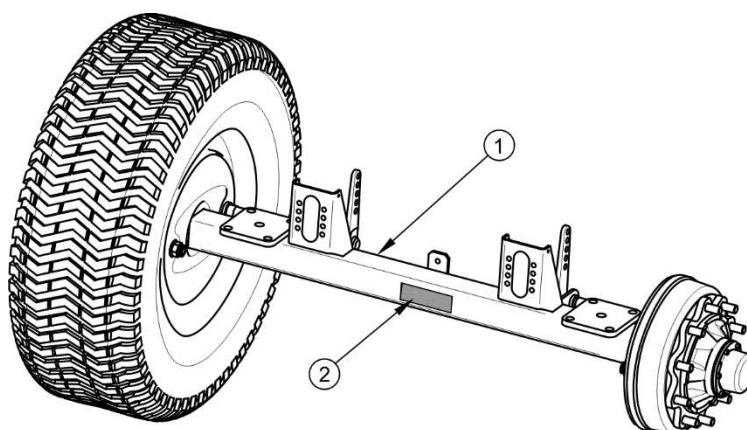**1.1.2 AXLE IDENTIFICATION****FIGURE 1.2 Location of the axle data plate**

(1) axle, (2) data plate

The factory number of the axle shaft and its type are stamped onto the data plate (2) secured to the axle shaft beam (1) – figure (1.2).

### 1.1.3 LIST OF FACTORY NUMBERS

#### VIN

S	Z	B	6	6	3	4	X	X			X					
---	---	---	---	---	---	---	---	---	--	--	---	--	--	--	--	--

#### FRONT AXLE FACTORY NUMBER

#### REAR AXLE FACTORY NUMBER



#### TIP

In the event of ordering a replacement part or in the case of the appearance of problems it is often essential to give the factory numbers of parts or the VIN number of the trailer, therefore it is recommended that these numbers are inscribed in the spaces above.

## 1.2 PROPER USE

The trailer is designed for transport of harvested crops and agricultural products as well as loose, bulk and long load materials at the farm and on public roads. It is acceptable to transport construction materials, mineral fertilisers and other loads, if fulfilling conditions indicated in section 4. Non-compliance with the recommendations concerning the carriage and loading of goods described by the Manufacturer and the road transport regulations in force in the country in which the trailer is used shall void the warranty and is regarded as the use of the machine contrary to its intended purpose.

The trailer is not intended or designed for transporting people, animals or goods classified as dangerous materials.

The trailer is constructed according to current safety requirements and engineering standards. The brake system and the light and indicator system meet the requirements of road traffic regulations. The maximum speed of the trailer on public roads in Poland is 30 km/h (pursuant to Traffic Law Act of June 20th 1997, article 20). In the countries where the trailer is used, the limits stipulated by the road traffic legislation in force in a given country must be observed. The trailer speed must not, however, be greater than the maximum design speed of 30 km/h.

## ATTENTION

The trailer must not be used for purposes other than those for which it is intended. The user **MUST NOT**:



- transport people, animals, hazardous materials, chemically aggressive loads that will corrode the construction elements of the trailer (causing corrosion of steel, destruction of paint coat, dissolving plastic elements and destruction of rubber elements etc.),
- transport incorrectly secured load, which during travel may cause contamination of the road and natural environment,
- transport incorrectly secured load, which during travel may change position in load box or fall out of the load box,
- transport loads, whose centre of gravity may destabilise the trailer,
- transport loads, which have uneven load distribution and/or overload axles and suspension elements.

Using it as intended also involves all actions connected with the safe and proper operation and maintenance of the machine. Due to the above, the user is obliged to:

- carefully read the *OPERATOR'S MANUAL* of the trailer and the *WARRANTY BOOK* and conform with the recommendations contained in these documents,
- understand the trailer's operating principle and how to operate it safely and correctly,
- adhere to the established maintenance and adjustment plans,
- comply with general safety regulations while working,
- prevent accidents,
- comply with the road traffic regulations and transport regulations in force in a given country, in which the trailer is used,
- carefully read the Operator's Manual and comply with its recommendations,
- only hitch the trailer to an agricultural tractor, which fulfils all the requirements made by the trailer's Manufacturer.

The trailer may only be used by persons, who:

- are familiar with the contents of this publication and with the contents of the agricultural tractor Operator's Manual,
- have been trained in trailer operation and safe operation,
- have the required authorisation to drive and are familiar with the road traffic regulations and transport regulations.

**TABLE 1.2     Agricultural tractor's requirements**

CONTENTS	UNIT	REQUIREMENTS
<b>Brake system - sockets</b>		
Pneumatic system 1 conduit	-	according to ISO 1728
Double conduit pneumatic system	-	according to ISO 1728
Hydraulic system	-	according to ISO 7421-1
<b>Maximum system pressure</b>		
Single conduit pneumatic system	bar / kPa	5.8 / 580
Double conduit pneumatic system	bar / kPa	8 / 800
Hydraulic system	bar / MPa	150 / 15
<b>Hydraulic tipper system</b>		
Hydraulic oil	-	L HL 32 Lotos <sup>(1)</sup>
Maximum system pressure	bar / MPa	160 / 16
Oil demand:	l	15
<b>Electrical system</b>		
Electrical system voltage	V	12
Connection socket	-	7 polar compliant with ISO 1724
<b>Required tractor hitch</b>		
Type of hitch	-	Hitch for single axle trailer
	-	Upper transport hitch
<b>Other requirements</b>		
Min. tractor power	kW / Horsepower	49.7 / 67.6

<sup>(1)</sup> – use of other oil is permitted, on condition that it may be mixed with the oil in the trailer. Detailed information can be found on the product information card.



**TIP**

Tractor requirements depend on trailer accessories.

In the event that the trailer shall be hitched to a second trailer it must fulfil the requirements stipulated in table (1.3).

**TABLE 1.3 Requirements for second trailer**

CONTENTS	UNIT	REQUIREMENTS
<b>Maximum gross weight</b>		
T663/4	kg	14 000
T663/4 SILO	kg	14 000
<b>Brake system - connectors</b>		
Pneumatic system 1 conduit	-	connector compliant with ISO 1728
Double conduit pneumatic system	-	connector compliant with ISO 1728
Hydraulic system	-	connector compliant with ISO 7421-1
<b>Maximum system pressure</b>		
Single conduit pneumatic system	bar / kPa	5.8 / 580
Double conduit pneumatic system	bar / kPa	8 / 800
Hydraulic system	bar / MPa	150 / 15
<b>Hydraulic tipper system</b>		
Hydraulic oil	-	L HL 32 Lotos <sup>(1)</sup>
Maximum system pressure	bar / MPa	160 / 16
<b>Electrical system</b>		
Electrical system voltage	V	12
Connection socket	-	7 polar compliant with ISO 1724
<b>Drawbar of trailer</b>		
Diameter of drawbar eye	mm	40

<sup>(1)</sup> – use of other oil is permitted, on condition that it may be mixed with the oil in the trailer. Detailed information can be found on the product information card.

## 1.3 EQUIPMENT

**TABLE 1.4 Trailer optional equipment**

EQUIPMENT	STANDARD	ADDITIONAL	OPTIONS
Operator`s Manual	•		
Warranty book	•		
Connection lead for the electrical system	•		
Double conduit pneumatic system for the trailer with the maximum design speed of 40km/h	•		
Single conduit pneumatic system for the trailer with the maximum design speed of 25 km/h	•		
2-line pneumatic system with automatic regulator			•
Hand brake	•		
Mudguards set	•		
Hydraulic shear type support	•		
Hydraulic brake system			•
Rotating drawbar eye Ø50 mm	•		
Drawbar eye Ø40 mm			•
Wheel chocks	•		
Rear hitch		•	
Slow-moving vehicle warning sign		•	
Warning reflective triangle		•	
Complete set of wall extensions (600 mm) (T663/4 only)	•		
Complete set of additional wall extensions (600 mm) (T663/4 only)		•	

EQUIPMENT	STANDARD	ADDITIONAL	OPTIONS
Hydraulically raised rear wall (663/4 SILO only)	•		
Frame with tarpaulin cover and fenced platform		•	
Clamping cable with cable extraction mechanism	•		
Chute	•		
Spare wheel holder		•	
Spare wheel		•	

Some standard equipment elements, which were listed in table (1.4), may not be present in the delivered trailer. This allows the possibility of ordering new machines with a different set of optional equipment, replacing standard equipment.

Information concerning tires is provided at the end of this publication in *ANNEX A*.

## 1.4 WARRANTY TERMS

PRONAR Sp. z o.o. Narew guarantees the reliable operation of the machine when it is used according to its intended purpose as described in the *OPERATOR'S MANUAL*. The repair period is specified in the *WARRANTY BOOK*.

The guarantee does not apply to those parts and sub-assemblies of the machine, which are subject to wear in normal usage conditions, regardless of the warranty period. Consumables include the following parts/sub-assemblies:

- drawbar hitching eye,
- pneumatic system connector filters,
- tyres,
- brake shoes,
- bulbs and LED lamps,

- seals,
- bearings.

The warranty service only applies to such cases as: mechanical damage which is not the user's fault, factory defects of parts, etc.

In the event of damage arising from:

- mechanical damage which is the user's fault, road accidents,
- by inappropriate use, adjustment or maintenance, use of the trailer for purposes other than those for which it is intended,
- use of damaged machine,
- repairs carried out by unauthorised persons, improperly carried out repairs,
- making unauthorised alterations to machine design,

the user will lose the right to warranty service.



### **TIP**

**Demand that the seller carefully and precisely fills out the Warranty Book and guarantee repair coupons. A missing date of purchase or sale point stamp, may make the user ineligible for any warranty repair or refund.**

The user is obliged to report immediately on noticing any wear in the paint coating or traces of corrosion, and to have the faults rectified whether they are covered by the guarantee or not. For detailed Terms & Conditions of Warranty, please refer to the *WARRANTY BOOK* attached to each newly purchased machine.

Modification of the trailer without the written consent of the Manufacturer is prohibited. In particular, do NOT weld, drill holes in, cut or heat the main structural elements of the machine, which have a direct impact on the machine operation safety.

## **1.5 TRANSPORT**

The trailer is ready for sale completely assembled and does not require packing. Packing is only required for the machine's technical documentation and any extra equipment. The trailer

is delivered to the user either transported on a vehicle or, after being attached to a tractor, independently (trailer towed with a tractor).

### **1.5.1 TRANSPORT ON VEHICLE.**

Loading and unloading of trailer from vehicle shall be conducted using loading ramp with the aid of an agricultural tractor. During work adhere to the general principles of Health and Safety at Work applicable to reloading work. Persons operating reloading equipment must have the qualifications required to operate these machines. The trailer must be properly connected with the tractor according to the requirements in this Operators Manual. The trailer brake system must be started and checked before driving off or onto ramp.

The trailer should be attached firmly to the platform of the vehicle using straps or chains fitted with a tightening mechanism. Securing elements should be attached to the transport catches designed for this purpose (1) – figure (1.3), permanent structural elements of the trailer (longitudinal and transverse frame sections etc.). Transport catches (hooks and eyes) are welded to upper longitudinal frame (2), with one pair on each side of the trailer. Use certified and technically reliable securing measures. Worn straps, cracked securing catches, bent or corroded hooks as well as elements damaged in a different way may be unsuitable for use. Carefully read the information contained in the Operator's Manual for the given securing measure. Chocks, wooden blocks or other objects without sharp edges should be placed under the wheels of the trailer to prevent it from rolling. Trailer wheel blocks must be nailed to the low platform planks of the vehicle or secured in another manner preventing their movement. The number of securing elements (cables, straps, chains and stay etc.) and the force necessary for their tensioning depends on a number of things, including weight of the trailer, the construction of vehicle carrying trailer, speed of travel and other conditions. To secure the trailer optimally on the load platform, support the drawbar with wooden blocks. For this reason it is impossible to define the securing plan precisely. A correctly secured trailer does not change its position with regard to the transport vehicle. The securing elements must be selected according to the guidelines of the Manufacturer of these elements. In case of doubt apply a greater number of securing straps in order to immobilise the trailer. If necessary, sharp edges of trailer should be protected at the same time protecting the securing straps from breaking during transport.


**ATTENTION**

When being road transported on a motor vehicle the trailer must be mounted on the vehicle's platform in accordance with the transport safety requirements and the regulations.

Driver of the vehicle should be particularly careful during travel. This is due to the vehicle's centre of gravity shifting upwards when loaded with the machine.

Use only certified and technically reliable securing measures. Carefully read the information contained in the Operator's Manuals for the given securing measures.

During reloading work, particular care should be taken not to damage parts of the machine's equipment or the paint coating. The tare weight of the trailer in condition ready for travel is given in table (3.1).

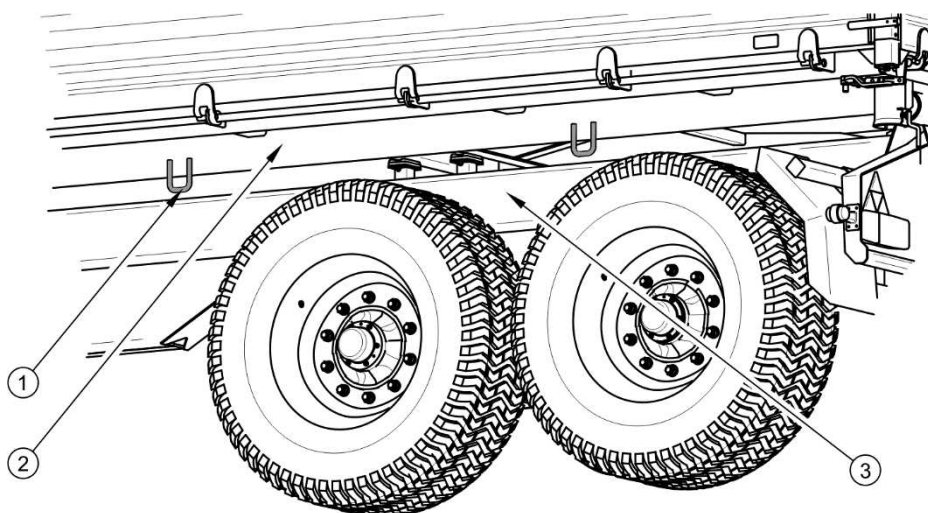

**FIGURE 1.3**     **Positioning of transport lugs**

(1) transport lug, (2) upper longitudinal frame, (3) lower longitudinal frame

**DANGER**

Incorrect application of securing measures may cause an accident.

### 1.5.2 INDEPENDENT TRANSPORT BY THE USER.

In the event of independent transport by the user after purchase of the trailer, the user must read the trailer Operator's Manual and adhere to the recommendations contained therein. Independent transport involves towing the trailer with own agricultural tractor to destination. During transport adjust travel speed to the prevailing road conditions, but do not exceed the maximum design speed.



#### ATTENTION

Before transporting independently, the tractor driver must carefully read this operator's manual and observe its recommendations.

## 1.6 ENVIRONMENTAL HAZARDS

A hydraulic oil leak constitutes a direct threat to the natural environment owing to its limited biodegradability. Because of the low solubility of oil in water, it is not highly toxic to living organisms. An oil leak into water reservoirs may however lead to a reduction of the oxygen content.

While carrying out maintenance and repair work, which involves the risk of an oil leak, this work should take place on an oil resistant floor or surface. In the event of oil leaking into the environment, first of all contain the source of the leak, and then collect the leaked oil using available means. Remaining oil should be collected using sorbents, or by mixing the oil with sand, sawdust or other absorbent materials. The oil pollution, once gathered up, should be kept in a sealed, marked, hydrocarbon resistant container. The container should be kept away from heat sources, flammable materials and food.



#### DANGER

Used hydraulic oil or gathered remains mixed with absorbent material should be stored in a precisely marked container. Do not use food packaging for this purpose.

Oil, which has been used up or is unsuitable for further use owing to a loss of its properties should be stored in its original packaging in the conditions described above. Waste oil should be taken to the appropriate facility dealing with the re-use of this type of waste. Waste code:

13 01 10. Detailed information concerning hydraulic oil may be found on the product's Material Safety Data Sheet.

**TIP**

The hydraulic system of the trailer is filled with L-HL32 Lotos hydraulic oil.

**ATTENTION**

Waste oil should only be taken to the appropriate facility dealing with the re-use of this type of waste. Do NOT throw or pour oil into sewerage or water tanks.

## 1.7 WITHDRAWAL FROM USE

In the event of decision by the user to withdraw the trailer from use, comply with the regulations in force in the given country concerning withdrawal from use and recycling of machines withdrawn from use. Before commencing dismantling, totally remove the oil from the hydraulic system and reduce air pressure completely in the pneumatic brake system (e.g. using air tank drain valve).

Worn out or damaged parts that cannot be reclaimed should be taken to a collection point for recyclable raw materials. Hydraulic oil should be taken to the appropriate facility dealing with the re-use of this type of waste.

During dismantling personal protection equipment shall be used i.e. protective clothing, boots, gloves and protective goggles etc.

**DANGER**

Avoid contact of skin with oil. Do not allow used hydraulic oil to spill.



***SECTION***

**2**

---

**SAFETY  
ADVICE**

## 2.1 BASIC SAFETY RULES

### 2.1.1 USE OF TRAILER

- Before using the trailer, the user must carefully read this Operator's Manual and the *WARRANTY BOOK*. When operating the machine, the operator must comply with all recommendations contained in the Operator's Manual.
- The trailer may only be used and operated by persons qualified to drive agricultural tractors with a trailer.
- If the information in this Operator's Manual is difficult to understand, contact the dealer, who runs an manufacturer authorised service, or contact the manufacturer directly.
- Careless and improper use and operation of the trailer, and non-compliance with the recommendations given in this operator's manual is dangerous to your health.
- Be aware of the existence of a minimal risk, and for this reason the fundamental basis for using this trailer should be the application of safety rules and sensible behaviour.
- The machine must never be used by persons who are not authorised to drive agricultural tractors, including children and people under the influence of alcohol, drugs or other abusive substances.
- Non-compliance with the safety rules of this Operator's Manual can be dangerous to the health and life of the operator and others.
- The trailer must not be used for purposes other than those for which it is intended. Anyone who uses the trailer other than the way intended takes full responsibility for himself for any consequences of this potentially improper use. Use of the machine for purposes other than those for which it is intended by the Manufacturer may invalidate the guarantee.
- Assembly and disassembly of wall extensions should be carried out with the use of appropriate platforms, ladders or when standing on a ramp. These fittings must be in good condition to fully protect the persons working on them against falling. The above procedure should be performed by at least two persons.

- The user is obliged to acquaint himself with the construction, action and the principles of safe usage of the trailer.

### 2.1.2 HITCHING AND DISCONNECTING FROM TRACTOR

- Do NOT hitch the trailer to tractor if the tractor does not fulfil the requirements specified by the Manufacturer (minimum tractor power demand, wrong hitch, etc.) – compare table (1.2) *AGRICULTURAL TRACTOR REQUIREMENTS*. Before hitching the trailer make certain that oil in external hydraulic system of tractor may be mixed with the hydraulic oil of the trailer.
- Before hitching the trailer check that both machines are in good technical condition.
- While connecting the trailer to the tractor, use the appropriate hitch. After completed hitching of the machines check the safety of the hitch Carefully read the tractor Operator's Manual. If the tractor is equipped with an automatic hitch, make certain that the coupling operation is completed.
- Be especially careful when hitching the machine.
- When hitching, there must be nobody between the trailer and the tractor.
- Do NOT proceed with unhitching the trailer from the tractor when load box is raised.
- Hitching and unhitching the trailer may only take place when the machine is immobilised by use of the parking brake.
- The trailer must not be moved when the parking stand is extended and rests on the ground. If moved there is a risk of damage to the parking stand cylinder.

### 2.1.3 HITCHING AND UNHITCHING THE SECOND TRAILER

- Do NOT hitch a second trailer, if it does not fulfil the requirements made by the Manufacturer (lack of required drawbar eye, exceeding permissible total weight etc.) – compare table (1.3) *REQUIREMENTS FOR SECOND TRAILER*. Before hitching the machines make certain that the oil in both trailers may be mixed.
- Only trailer built on a double axle chassis with permissible total weight described in table (1.3) may be hitched to the trailer.

- Before hitching the trailer check that both machines are in good technical condition.
- Be especially careful when hitching the machine.
- When hitching, there must be nobody between the trailers. Person assisting in hitching the machines should stand outside the area of danger and be visible to the tractor driver at all times.
- Do NOT proceed with unhitching the second trailer from the tractor when load box is raised.
- After completed hitching of the trailer check the safety of the hitch.

#### **2.1.4 HYDRAULIC AND PNEUMATIC SYSTEMS**

- When operating, the hydraulic and pneumatic systems are under high pressure.
- Regularly check the technical condition of the connections and the hydraulic and pneumatic conduits. There must be no oil or air leaks.
- Cut-off valve in the hydraulic tipping system limits the tipping angle of the load box when tipped to the sides and to the rear. The length of the control cable controlling this valve is factory adjusted by the Manufacturer and must not be changed when the trailer is used.
- In the event of malfunction of the hydraulic or pneumatic system, do not use the trailer until the malfunction is corrected.
- When connecting the hydraulic conduits to the tractor, make sure that the hydraulic system of the tractor and the hydraulic system of the trailer are not under pressure. If necessary reduce residual pressure in the system.
- In the event of injuries being caused by pressurised hydraulic oil, contact a doctor immediately. Hydraulic oil may find its way under the skin and cause infections. In the event of contact of oil with eye, rinse with large quantity of water and in the event of the occurrence of irritation consult a doctor. In the event of contact of oil with skin wash the area of contact with water and soap. Do NOT apply organic solvents (petrol, kerosene).
- Use the hydraulic oil recommended by the Manufacturer.

- After changing the hydraulic oil, the used oil should be properly disposed of. Used oil or oil which has lost its properties should be stored in original containers or replacement containers resistant to action of hydrocarbons. Replacement containers must be clearly marked and appropriately stored.
- Do not store hydraulic oil in packaging designed for storing food or foodstuffs.
- Rubber hydraulic conduits must be replaced every 4 years regardless of their technical condition.

### **2.1.5 LOADING AND UNLOADING**


- Loading and unloading work should be carried out by persons experienced in this type of work.
- Before loading make certain that linking cables are laid and release mechanism is set in proper position and secured with the aid of cotter pin. If the loaded material does not exert any pressure on the trailer sides it is permitted to dismantle clamping cable. If pressure is exerted it may cause damage to trailer sides.
- Use only original tipping pins with a handle. Using third-party pins could damage the trailer.
- The trailer is not intended for transporting people, animals or hazardous materials.
- The load must be arranged in such a way that it does not threaten the stability of the trailer and does not hinder driving.
- The arrangement of the load may not cause an overload on the axle and drawbar of the trailer.
- Incorrect load distribution and overloading the machine may cause the trailer to tip over or cause damage to its components.
- Do NOT climb on load box during loading and unloading.
- Unloading and loading of trailer may only take place when the machine is positioned on level and hard surface and connected to tractor. Tractor and trailer must be placed to drive forwards.

- Ensure that during unloading / loading or raising the load box nobody is near the trailer. Before tipping load box ensure that there is visibility and make certain that there are no bystanders.
- During loading and unloading, the drawbar eye and the tractor hitch are subjected to dynamic vertical load.
- Before raising the load box, the tipping pins should be placed on the intended unloading side. Check if the pins are correctly inserted.
- Keep a safe distance from overhead electric power lines during unloading and when load box is raised.
- When opening load box side wall locks take particular care, because of the pressure of the load on the wall.
- Do NOT tip of the load box in windy conditions.
- Bulk materials loaded in excess of 1 m can be unloaded by tipping the load box to the rear only.
- Exercise particular caution when unloading bulk materials from Pronar 663/4 SILO trailer or Pronar 663/4 trailer with the second set of wall extensions.
- When using Pronar 663/4 SILO trailer or Pronar 663/4 trailer with the second set of wall extensions there is an increased risk of loss of trailer stability, trailer overturning, failure of the trailer's structural elements, insufficient visibility of the elements of the trailer's body, uncontrolled movements of the load box on uneven terrain.
- Pay attention to safety of unloading on uneven terrain. Make certain that there is nobody near the trailer.
- If the load does not pour from the raised load box immediately cease unloading. The trailer may only be tipped again after removing the object, which prevented the load from pouring.
- During winter particular attention must be paid to loads, which may freeze during transport. When tipping the load box with frozen load the trailer may become unstable and tip over.

- Do NOT raise the load box if there is any danger whatsoever that the box will tip over.
- Do NOT tip the loaded load box when the walls are closed.
- Do NOT jerk the trailer forwards if load is bulky or reluctant to pour and does not unload.
- After completed unloading, ensure that the load box is empty.
- Do NOT drive with the load box raised.
- When closing or opening the rear grain chute gate or the walls and extensions take particular care to avoid crushing fingers.
- Do NOT go or place hand between open side and load box.
- Lower the load box before proceeding to deal with a malfunction. If it is necessary to raise the load box then secure it against dropping with the aid of supports. The load box may not be loaded. The trailer must be hitched to the tractor and secured with chocks and parking brake.

### **2.1.6 TRANSPORTING THE MACHINE**

- During travel on public roads comply with the road traffic regulations and transport regulations in force in a given country, in which the trailer is used.
- Do not exceed the permitted speed arising from road conditions and design limitations. Adjust travel speed to the prevailing road conditions, trailer load and road traffic regulations limits.
- Chocks (1) should be placed only under one wheel (one chock in front of the wheel, the other behind the wheel - figure (2.1)).
- The machine must NOT be left unsecured. When not connected to the tractor, the trailer must be immobilised with parking brake and protected against rolling with chocks or other objects without sharp edges placed under the front and back wheels.
- Before driving make sure that the trailer is properly hitched to the tractor, especially if coupling bolts are secure.

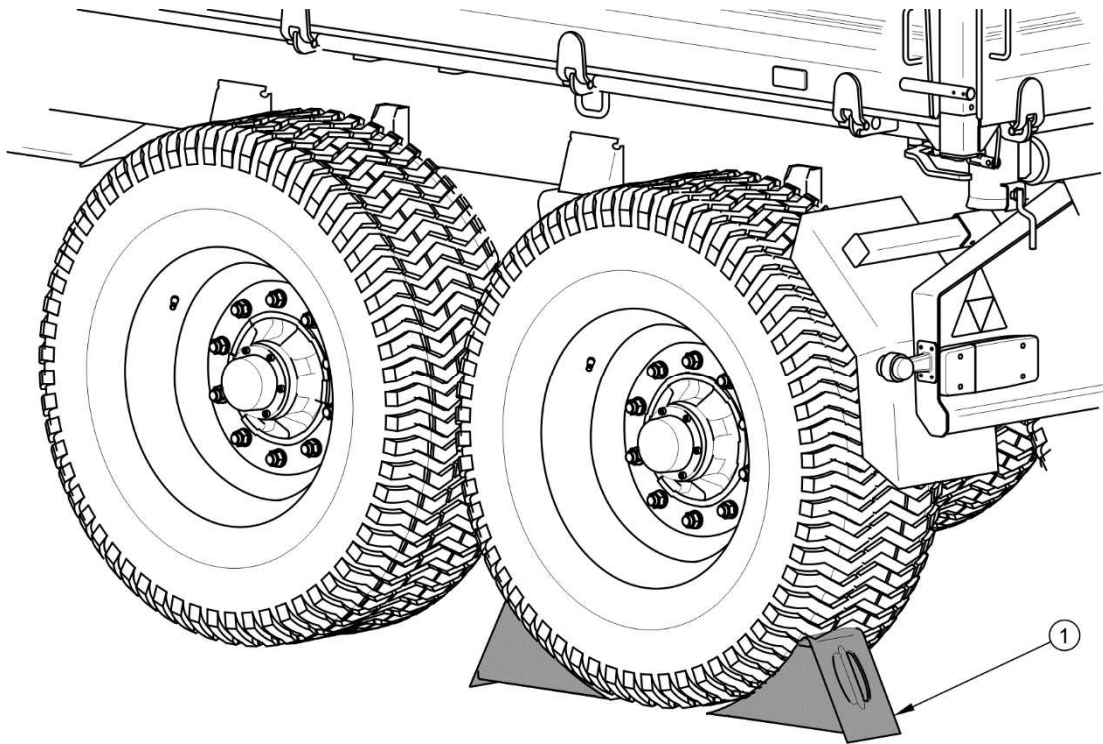


**FIGURE 2.1**     **Method of placing chocks**

*(1) wheel chock*

- Vertical load borne by the trailer drawbar eye affects the steering of the agricultural tractor.
- Do NOT move off or drive when load box is raised.
- Prior to moving off make sure that tipping pins connecting the load box and the lower frame and the side wall hinge pins are secured against falling out. Check if the rear wall slide gate is secured. Check that all walls and extensions are properly closed. Check correctness of the securing of linking cables and a security of cable release mechanism.
- Before using the trailer always check its technical condition, especially in terms of safety. In particular, check the technical condition of the hitch system, the axle system, the brake system, indicator lights and the connection elements of the hydraulic, pneumatic and electrical systems.
- Before driving off check that the parking brake is released, the braking force regulator is positioned in the proper position (applies to pneumatic systems with a manual three position regulator).



- The trailer is designed to operate on slopes up to 8°. Driving trailer across ground with steeper slopes may cause the trailer to tip over as a result of loss of stability.
- While driving on public roads the trailer must be fitted with a certified or authorised reflective warning triangle.
- Periodically drain water from the air tanks in pneumatic system. During frosts, freezing water may cause damage to pneumatic system components.
- Reckless driving and excessive speed may cause accidents.
- A load protruding beyond the outline of the trailer should be marked according to the road traffic regulations. Do NOT transport loads forbidden by the Manufacturer.

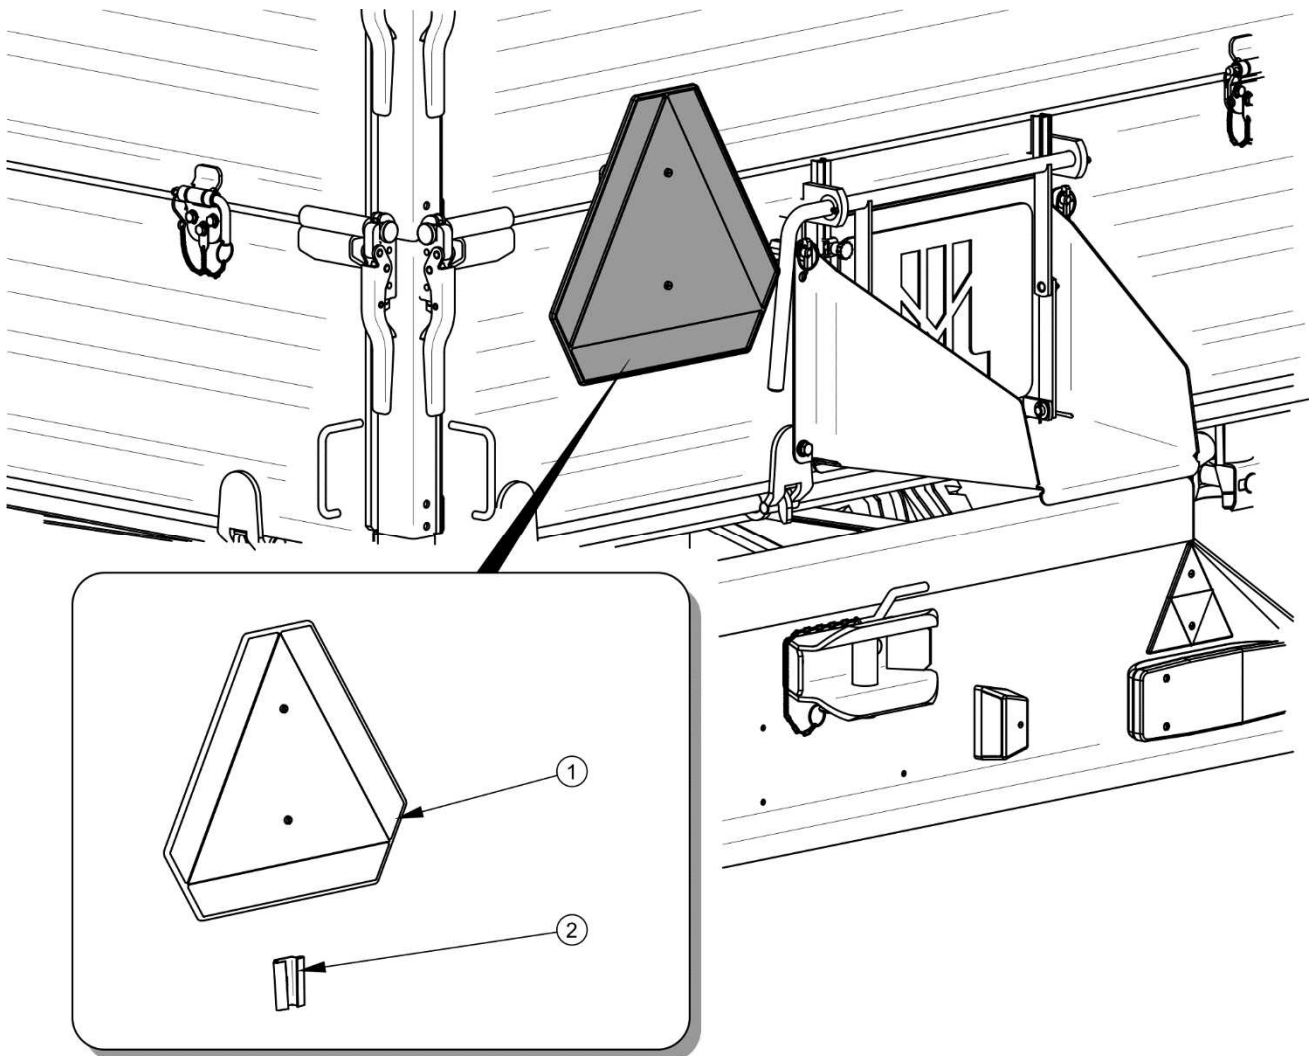

**FIGURE 2.2** Mounting place for slow-moving vehicle warning sign

(1) slow-moving vehicle warning sign, (2) attachment point

- Do NOT exceed the trailer's maximum carrying capacity. Exceeding the carrying capacity may lead to damage to the machine, loss of stability while driving, scattering of the load and danger while driving. The brake system is adjusted to the gross weight of the trailer, exceeding the weight limit causes drastic reduction of basic braking effectiveness.
- Prolonged driving across steep ground may lead to loss of braking efficiency.
- If the trailer is the last vehicle in the group, - figure (2.2), a slow-moving vehicle warning sign should be placed on the trailer's rear load box wall. The warning sign (1) should be attached using the specifically prepared holder (2), riveted to the rear wall of the load box.
- Load must be uniformly distributed and it must not obstruct visibility or hinder driving.
- The load must be secured so that it cannot move or fall over.
- During reversing one should use the assistance of another person. During manoeuvring the person helping must stay at a safe distance from the danger zone and be visible all the time to the tractor driver.
- Do NOT attempt to board trailer while travelling.
- Do NOT park trailer on slope.

### 2.1.7 TYRES

- When working with tyres, the trailer should be immobilised with parking brake and secured against rolling by placing chocks under wheel. Wheels can be taken off the trailer axle only when the trailer is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Inspect tightness of nuts before the first use of trailer, after the first travel under load and then every 6 months of use or every 25,000 km. In the event of intensive work, check the nut tightening at least every 1000 km. The inspection should be repeated individually if a wheel has been removed from the wheel axle.
- Avoid potholes, sudden manoeuvres or high speeds when turning.

- Check the tyre pressure regularly. Air pressure in tyres should be also checked during the whole day of intensive work. Please note that higher temperatures could raise tyre pressure by as much as 1 bar. At high temperatures and pressure, reduce load or speed. Do not release air from warm tyres to adjust the pressure or the tyres will be underinflated when temperatures return to normal.
- Protect tyre valves using suitable caps to avoid soiling.

### **2.1.8 MAINTENANCE**

- During the warranty period, any repairs may only be carried out by the Warranty Service authorised by the Manufacturer. After the expiry of the warranty period it is recommended that possible repairs to the trailer be performed by specialised workshops.
- In the event of any fault or damage whatsoever, do not use the trailer until the fault has been fixed.
- While performing maintenance work, use proper, close-fitting protective clothing, gloves, protective shoes, protective goggles and appropriate tools.
- Any modification to the trailer frees the manufacturer from any responsibility for damage or detriment to health, which may arise as a result.
- The trailer can only be stood on when it is absolutely motionless and the tractor engine is switched off. Tractor and trailer should be immobilized with parking brake and chocks should be placed under the trailer wheels. Ensure that unauthorised persons do not have access to the tractor cab.
- Regularly check the condition of nut and bolt connections, in particular connections of drawbar eye with drawbar and wheel nuts.
- Service inspections should be carried out according to the frequency specified in this Operator's Manual.
- Before beginning work, which requires raising the load box, it should be emptied and secured with the support leg. The trailer must at this time be hitched to the tractor and secured with chocks and parking brake.
- Before beginning repair works on hydraulic or pneumatic systems reduce oil or air pressure completely.

- Servicing and repair work should be carried out in line with the general principles of workplace health and safety. In the event of injury, the wound must be immediately cleaned and disinfected. In the event of more serious injuries, seek a doctor's advice.
- Repair, maintenance and cleaning work should be carried out with the tractor engine turned off and the ignition key removed. Tractor and trailer should be immobilized with parking brake and chocks should be placed under the trailer wheels. Ensure that unauthorised persons do not have access to the tractor cab.
- During maintenance or repair work trailer may be unhitched from tractor, but secured with chocks and parking brake. During this work the load box may not be raised.
- Should it be necessary to change individual parts, use only those parts indicated by the Manufacturer. Non-adherence to these requirements may put the user and other people's health and life at risk, and also damage the machine and invalidate the guarantee.
- Before welding or electrical work, the trailer should be disconnected from the power supply. The paint coating should be cleaned. Burning paint fumes are poisonous for people and animals. Welding work should be carried out in a well lit and well ventilated space.
- During welding work pay attention to flammable or fusible elements (parts of the pneumatic, electric and hydraulic systems, plastic parts). If there is a risk that they will catch fire or be damaged, they should be removed or covered with non-flammable material before commencing welding work. Before beginning work, prepare a CO<sub>2</sub> or foam extinguisher.
- In the event of work requiring the trailer to be raised, use properly certified hydraulic or mechanical lifts for this purpose. After lifting the machine, stable and durable supports must also be used. Work must not be carried out under a trailer, which has only been raised with a lift or jack.
- The trailer must not be supported using fragile elements (bricks or concrete blocks).

- After completing work associated with lubrication, remove excess oil or grease. The trailer should be kept clean and tidy.
- Exercise caution when climbing on top of the load box. Climbing on top of the load box is possible by use of ladders placed on the front wall, extension and draw bar and also folding steps inside the load box. Components not intended to aid access may not be used for this purpose. Before entering load box prevent trailer moving with parking brake and chocks.
- Do NOT make independent repairs of control valve, brake cylinders, tipping cylinder and braking force regulator. In the event of damage to these elements, repair should be entrusted to authorised service point or elements should be replaced with new ones.
- Do NOT make repairs to drawbar and drawbar eye (straightening, pad welding or welding). Damaged drawbar eye should be replaced.
- Do NOT install additional appliances or fittings not according to the specifications defined by the Manufacturer.
- The trailer may only be towed when axles and wheels, lighting system and brakes are reliable.

## 2.2 RESIDUAL RISK

Pronar Sp. z o. o. in Narew has made every effort to eliminate the risk of accidents. There is, however, a certain residual risk, which could lead to an accident, and this is connected mainly with the actions described below:

- using the trailer for purposes other than those for which it is intended,
- being between the tractor and the trailer while the engine is running and when the machine is being attached or hitched to second trailer
- being on the machine during work,
- not maintaining safe distance during loading or unloading of trailer,
- operation of the trailer by persons under the influence of alcohol,
- making modifications to the machine without the consent of the Manufacturer,

- cleaning, maintenance and technical checks of the trailer,
- presence of persons or animals in areas invisible from the driver's position.


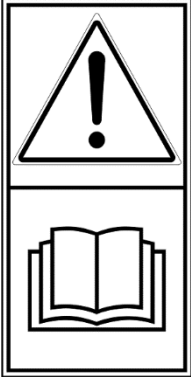
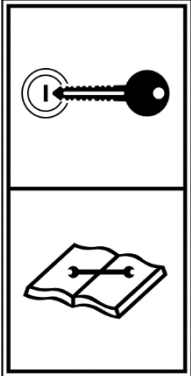

The minimal risk may be kept to a minimum by following the recommendations below:







- operate the machine in prudent and unhurried manner,
- reasonably apply all the remarks and recommendations stated in the Operator's Manual,
- maintain a safe distance from forbidden or dangerous places during unloading, loading and hitching trailer,
- carry out repair and maintenance work in line with operating safety rules,
- carry out repair and maintenance work by persons trained to do so,
- use close fitting protective clothing and appropriate tools,
- ensure unauthorised persons have no access to the machine, especially children.
- maintain a safe distance from forbidden or dangerous places
- a ban on being on the machine during travel, loading or unloading.

## 2.3 INFORMATION AND WARNING DECALS



The trailer is labelled with the information and warning decals mentioned in table (2.1). The symbols are positioned as presented in figure (2.3). Throughout the time it is in use, the user of the machine is obliged to take care that notices and warning and information symbols located on the trailer are clear and legible. In the event of their destruction, they must be replaced with new ones. Safety decals are available from your PRONAR dealer or directly from PRONAR customer service. New assemblies, changed during repair, must be labelled once again with the appropriate safety signs. During trailer cleaning do not use solvents which may damage the coating of information label stickers and do not subject them to strong water jets.

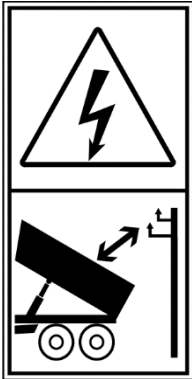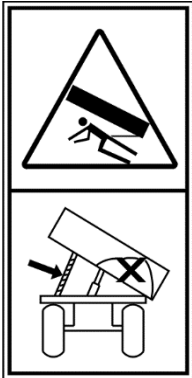
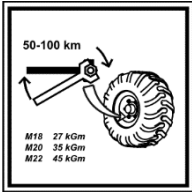

**TABLE 2.1** Information and warning decals

ITEM	DECAL	MEANING
1		Trailer version.
2		Caution! Before starting work, carefully read the Operator's Manual.
3		Before beginning servicing or repairs, switch off tractor's engine and remove key from ignition Ensure that unauthorised persons do not have access to the tractor cab.
4		Before climbing onto the trailer, switch off tractor's engine and remove key from ignition.

ITEM	DECAL	MEANING
5		<p>Caution! Danger of electric shock.</p> <p>Keep a safe distance from overhead electric power lines during unloading.</p>
6		<p>Danger of crushing</p> <p>Do NOT perform any maintenance or repairs on the load box that is loaded, raised or not supported.</p>
7		<p>Regularly check if the nuts and bolts fixing the wheels and other components are properly tightened.</p>
8		<p>Grease the trailer according to the recommendations in the Operator's Manual</p>
9		<p>Conduit supplying hydraulic brake system.</p>
10		<p>Conduit supplying hydraulic tipping system.</p>



ITEM	DECAL	MEANING
11	<div> <b>Przybliżone masy wybranych towarów</b>  <b>1m³=kg</b>  <b>ZIEMIA 1600-1800</b>  <b>PSZENICA 710-820</b>  <b>RZEPAK 700-750</b>  <b>ZIEMNIAKI 625-725</b>  <b>BURAŁKI CUKROWE 650-700</b>  <b>ROŚLINY STRĄCZKOWE 760-820</b>  <b>KRUSZYWO BUDOWLANE 1400-1850</b>  <b>WAPNO 900-1500</b>  <b>WĘGIEL KAMIENNY 1200-1600</b> </div>	Information about approximate weight of selected goods.
12	<div> <div>1</div> <div>2</div> </div>	Position of the control valve for the hydraulic tipping system.
13	<div>www.pronar.pl</div>	Manufacturer's website
14	<div>550 kPa</div>	Air pressure in the tyres. <sup>(1)</sup>
15	<div>40</div>	Permissible vehicle speed.
16		Conduit supplying hydraulic system of SILO attachment.
17		Return conduit (drain) of the hydraulic system of SILO attachment.
18	<div> <div>O</div> <div>Z</div> </div>	Position of the hydraulic support control valve.

ITEM	DECAL	MEANING
19		Conduit supplying hydraulic system of shear type support.
20		Return conduit (drain) of the hydraulic system of shear type support.
21		Quality Control marking.

<sup>(1)</sup> – pressure value should be adapted to tyres

Numbers in the item column correspond to labels in figure (2.3)

Decals, items (9), (10), (16), (17), (19) and (20), are placed on hydraulic conduits. Decals (12) and (18) are located near hydraulic valves.

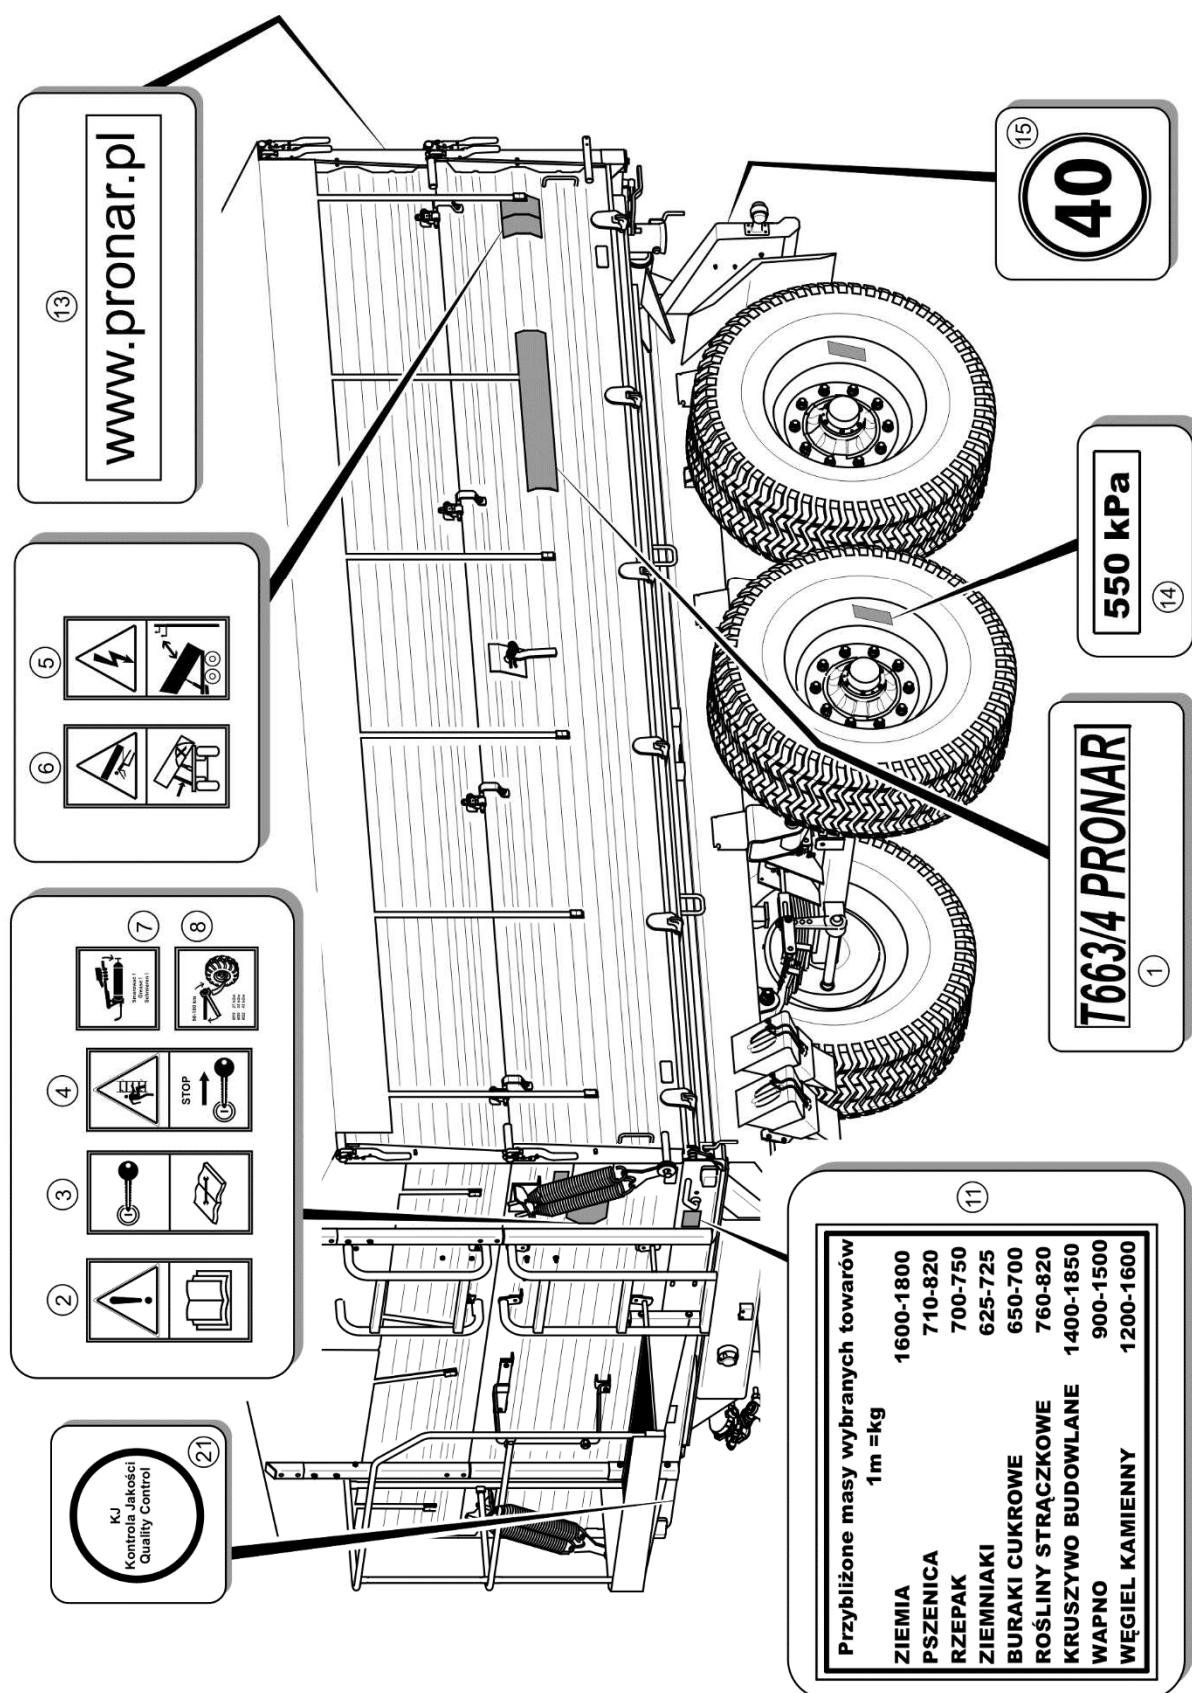


FIGURE 2.3 Locations of information and warning decals.



***SECTION***

**3**

---

**DESIGN AND  
OPERATION**

## 3.1 TECHNICAL SPECIFICATION

**TABLE 3.1 Basic technical specification**

CONTENTS	UNIT	T663/4	T663/4 SILO
<b>Trailer dimensions</b>			
Total length	mm	6,230	6,230
Total width	mm	2,390	2,455
Total height	mm	2,445	3,115
<b>Internal load box dimensions</b>			
Length	mm	4,440	4,440
Width			
- front	mm	2,190	2,190
- rear	mm	2,240	2,240
Height	Mm	600 + 600	600+ 500 + 500
<b>Weight and carrying capacity</b>			
Tare weight	kg	3,580	3,915
Maximum gross weight	kg	14,000	14,000
Maximum carrying capacity	kg	10,420	10,085
<b>Other information</b>			
Wheel track	mm	1,800	1,800
Cargo capacity	m <sup>3</sup>	11.8	15.7
Load surface	m <sup>2</sup>	9.8	9.8
Lift of load surface	mm	1,185	1,185
Load box tipping angle			
- to the sides	(°)	45	45
- to the rear	(°)	50	50
Electrical system voltage	V	12	12
Maximum speed	km/h	30	30
Noise emission level	dB	below 70	below 70
Tractor power demand	hp/kW	67.6 / 49.7	67.6 / 49.7
Hydraulic oil demand	l	15	15
Maximum drawbar load	kg	2,000	2,000

## 3.2 TRAILER CONSTRUCTION


### 3.2.1 CHASSIS

Trailer chassis consists of subassemblies indicated in figure (3.1). Lower frame (1) is a structure welded from steel sections. Lower frame design depends on configuration of a given trailer version. The main support elements are two longitudinal members connected with crossbars. In the middle section there is a socket (2) used for mounting of the hydraulic tipping cylinder. Load box support (9) is mounted in front of the sockets of the tipping cylinder. At the rear part of the lower frame, the rear beam (7) is welded, which is terminated with ball pins. The support structure of the upper frame and the interlocking method allows tipping of the load box to the side and to the rear. Sockets for mounting the upper frame are welded on the left and right side of the front crossbars (8) of the lower frame.

In the rear section of the chassis there is lights support beam (3), to which mounted are all electrical systems elements as well as hydraulic and pneumatic system sockets which are used for connecting another trailer.

The trailer suspension consists of two axles (4) that are mounted to parabolic leaf springs (16) by means of U bolts. Leaf spring suspension is secured to lower frame (1). Axles are made from square bars terminated with a pin, where wheel hubs (5) are mounted on cone bearings. The wheels are single and equipped with shoe brakes activated by mechanical cam expanders. Rear wheels are shielded with a pair of mudguards (11) secured to the trailer frame brackets. Wheel chocks (12) are placed in the front part of the trailer, on the left longitudinal member. Just behind the chock bracket there is the parking brake crank mechanism bracket (13).

Hydraulic shear type support (10) is located between the drawbar's longitudinal members to which the drawbar faceplate (6) is welded. The drawbar can be set in two positions depending on tractor equipment. Drawbar eye (15) is bolted to the drawbar plate.

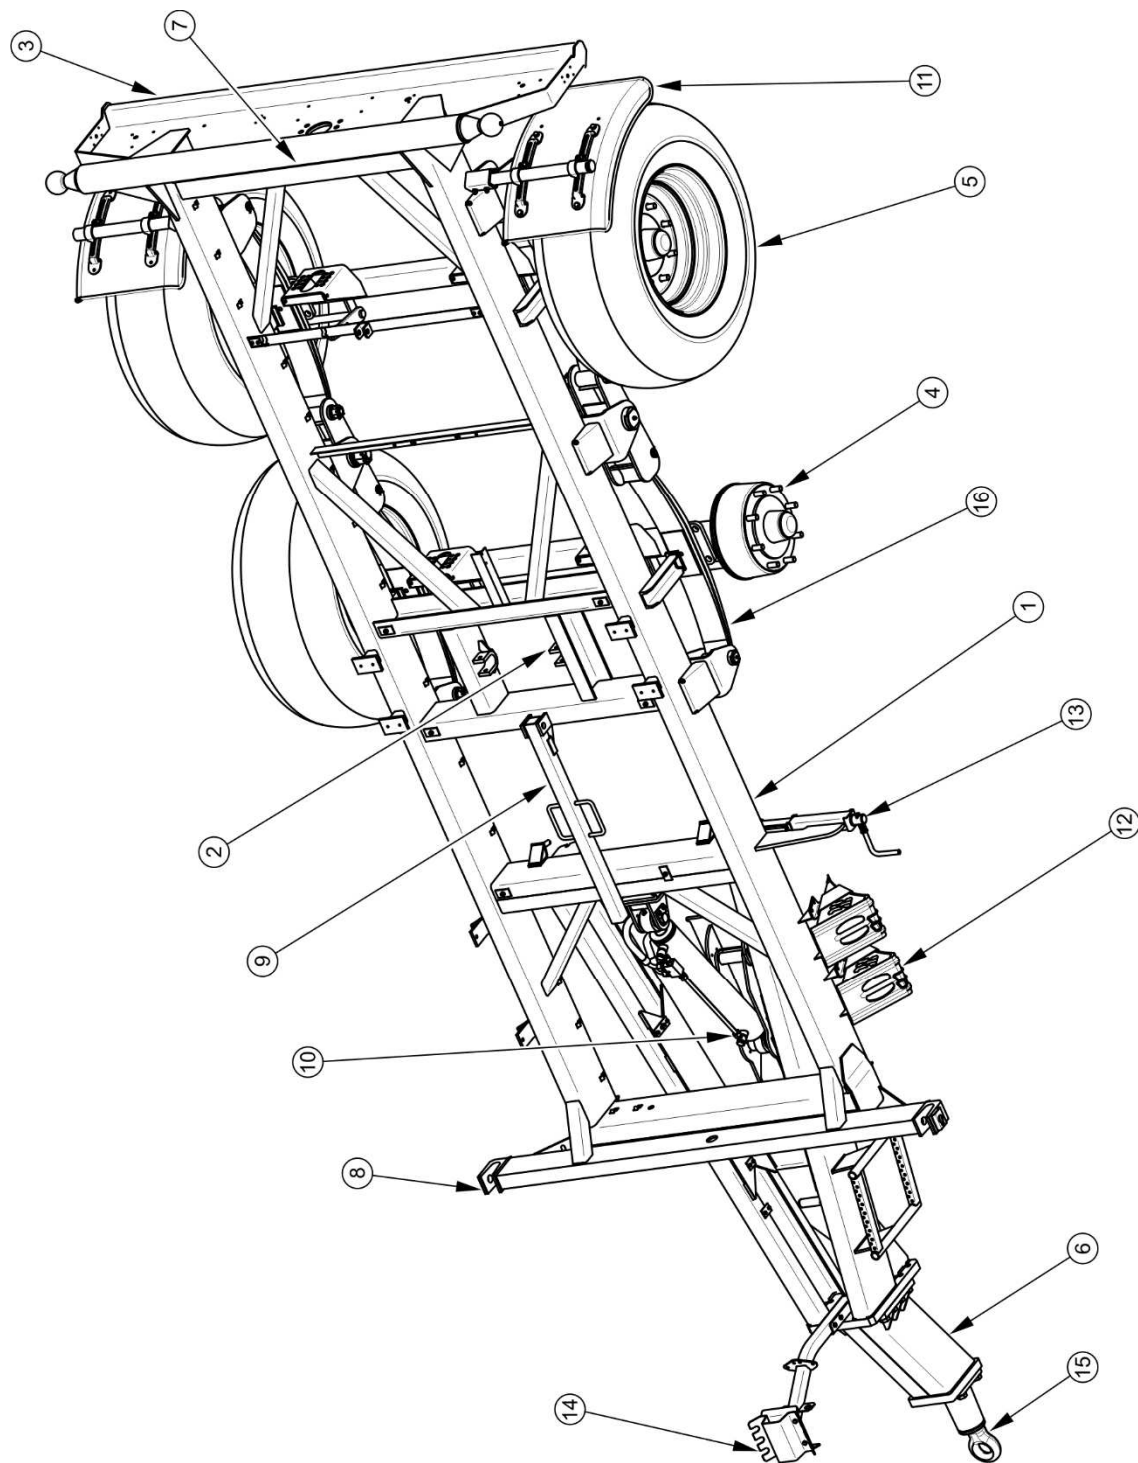

**FIGURE 3.1** Trailer chassis

(1) lower frame, (2) tipping cylinder socket, (3) lights support beam, (4) axle, (5) wheel, (6) drawbar, (7) rear beam, (8) front crossbar, (9) load box support, (10) trailer support, (11) mudguard, (12) chocks, (13) brake mechanism, (14) conduit bracket, (15) drawbar eye



### 3.2.2 LOAD BOX

The trailer's load box consists of: upper frame (1) – figure (3.2) with welded steel floor, side walls (2), front wall (3) and rear wall (4). Side walls are 600 mm high. As standard, Pronar T663/4 trailer is also equipped with 600 mm-high side wall extensions made of profiled steel sheet. In the case of T663/4 trailer, the 600 mm-high wall extensions are available as accessories.


The load box of T663/4 SILO trailer – figure (3.3) consists of 600 mm-high side walls (2) and a front wall (3). In standard configuration, the trailer is equipped with two sets of 500 mm-high wall extensions and a hinged rear wall (4). The rear wall is opened and closed by means of two hydraulic cylinders.

The load box is mounted on sockets of the rear beam and front crossbar of the lower frame - compare with figure (3.1). The chosen tipping direction is achieved by positioning the pin in the appropriately profiled socket opening, the construction of which prevents their inappropriate placing by trailer operator.

Load box rear (T663/4) and side walls are secured using pins in front side locks and locks welded to rear stakes (5) of side housing. In the lower part they are locked using bolting hooks placed in the left and right longitudinal beam and also in the rear upper frame beam. Closing and opening the walls is performed using two levers (1) - figure (3.4), placed on the front beam and in the case of the rear wall, using a lever (6) – figure (3.2), placed on the left side of the load box.


Extensions are secured in the same way as the load box walls. Upper pins of the wall extensions are secured in the front extension locks and locks of rear stakes (7). In the rear part the closure is formed by lug (8) bolted to the wall edge. All lugs are equipped with pins with cotter pins preventing them from falling out.

Walls and side wall extensions are connected with each other using linking cables (9), placed in cable release mechanisms (10). Mechanisms are equipped with spring cotter pins, locking levers in the set position and securing mechanism against accidental release.

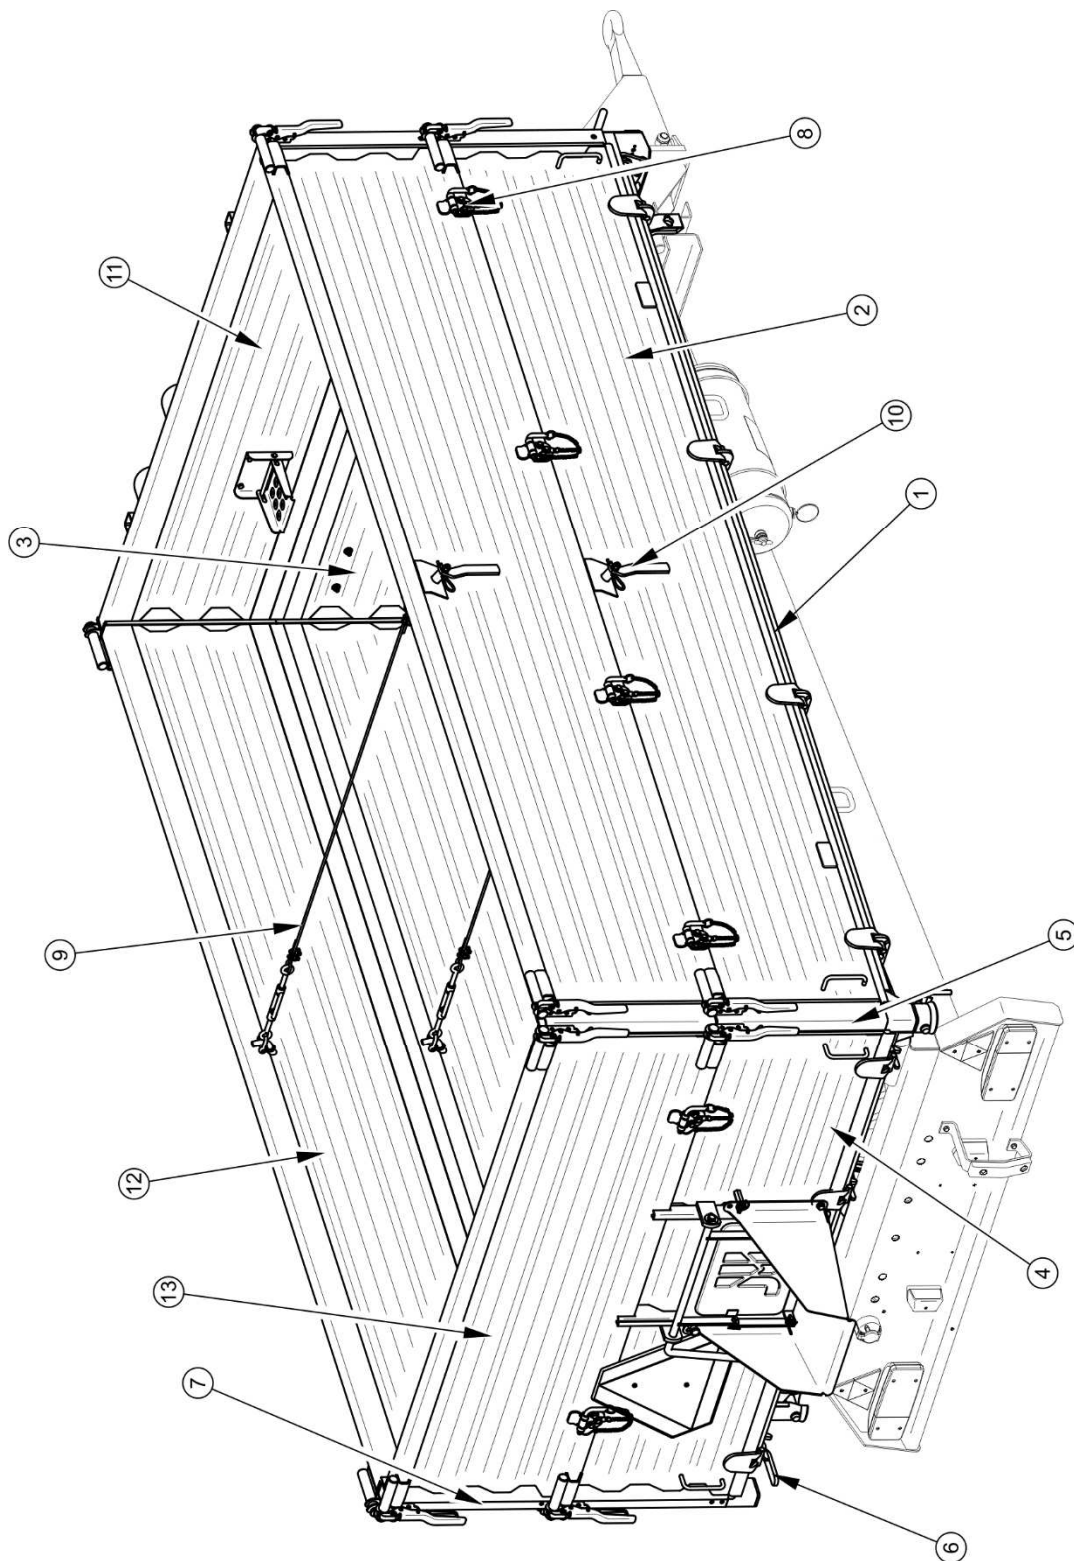

**FIGURE 3.2 Load box – rear view**

(1) upper frame, (2) side wall, (3) front wall, (4) rear wall, (5) rear wall stake, (6) lever, (7) rear extension stake, (8) lug, (9) linking cable, (10) cable release mechanism, (11) front extension, (12) side extension, (13) rear extension

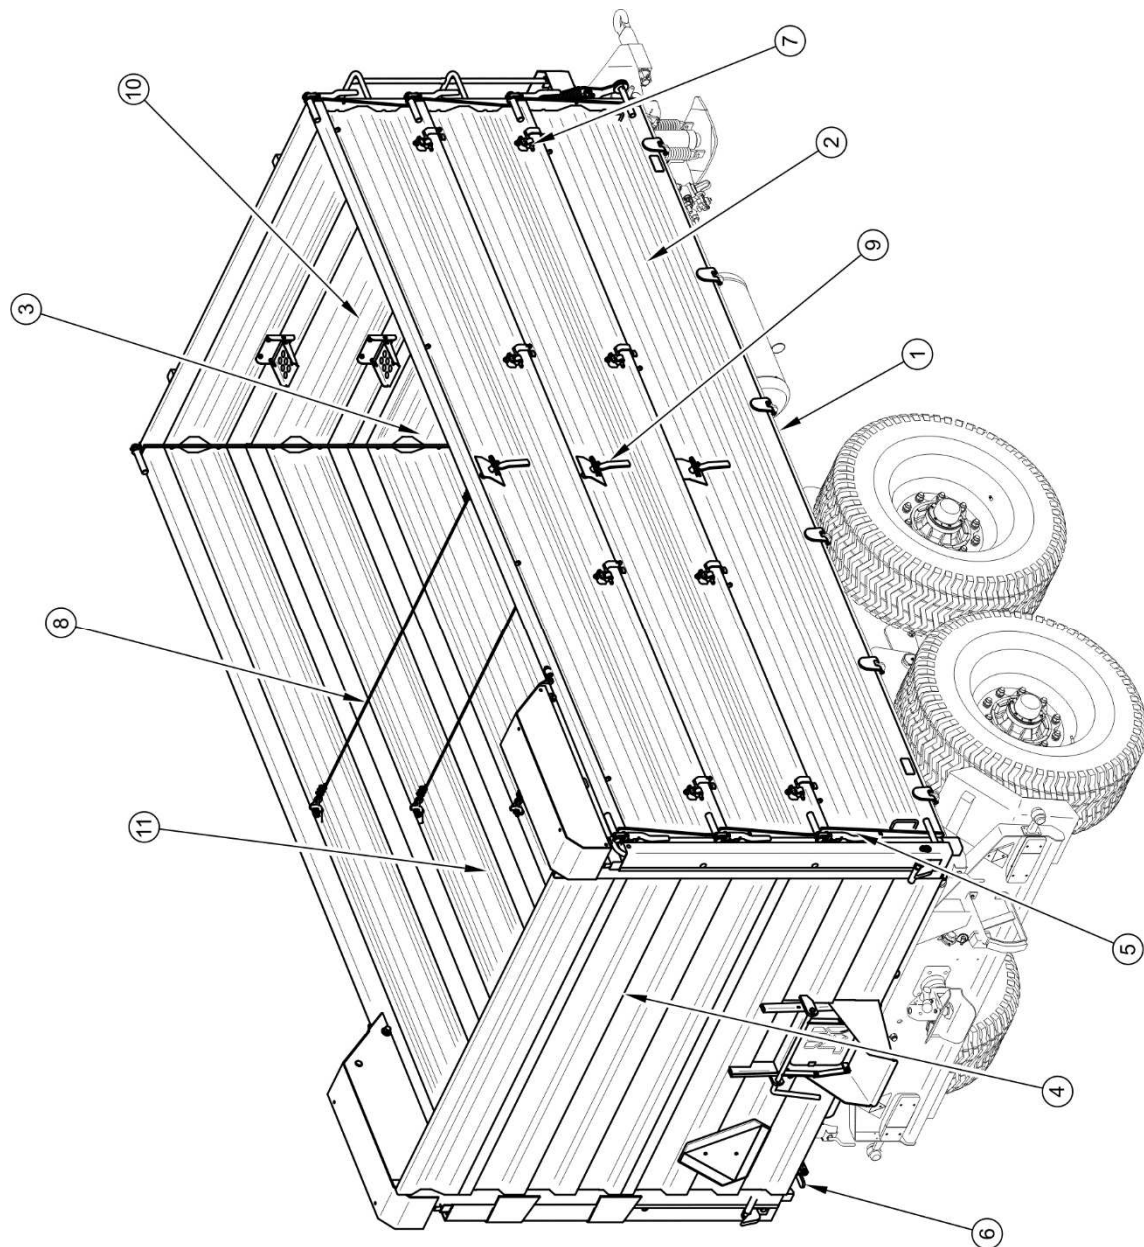

**FIGURE 3.3 SILO load box**


(1) upper frame, (2) side wall, (3) front wall, (4) SILO attachment, (5) rear wall stake, (6) lever, (7) lug, (8) linking cable, (9) cable release mechanism, (10) front extension, (11) side extension

Access ladders (2) and (3) are secured to front walls and extensions. An additional folding step facilitating entrance to load box is bolted from the inside of the front extension – figure (3.4).

Rollable tarpaulin cover (5) on the frame can be provided as additional equipment. The additional equipment that facilitates the use of tarpaulin cover is fenced platform (4) attached

to the trailer's front wall. Stay springs (7) facilitate opening of side walls. Spare wheel holder (6) for the trailer spare wheel can be installed on the front wall. Wheel mounting is possible only after the fenced platform (4) is disassembled.


Springs (7), fenced platform (4) and holder with a spare wheel are available as additional equipment.

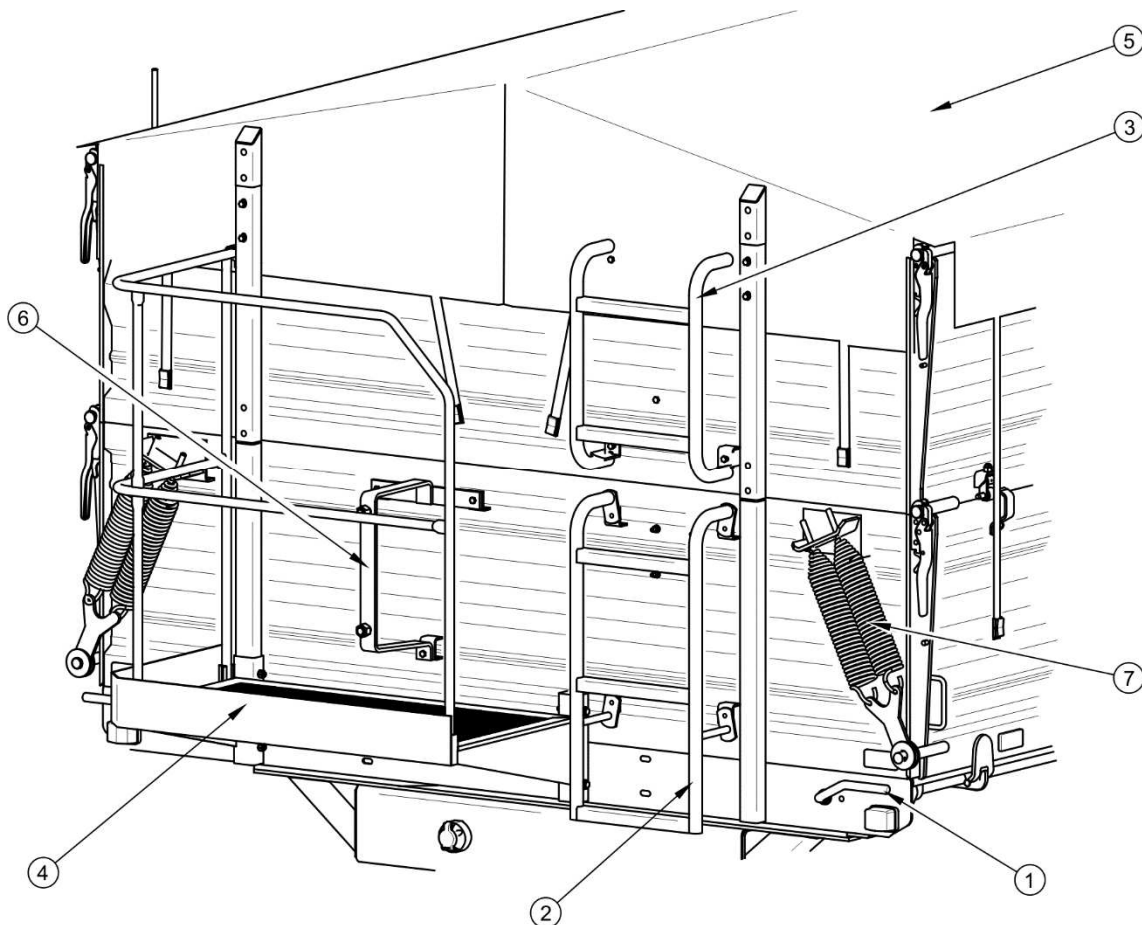

**FIGURE 3.4 Load box – front view**

(1) side wall locking lever, (2) lower ladder, (3) wall extension ladder, (4) fenced platform, (5) tarpaulin cover, (6) spare wheel holder, (7) draw back springs

In order to enable very precise unloading of loose materials there is a slide opening placed in the rear side (1) – figure (3.5), which is raised using lever (2). When in upper position and also during transport the slide must be secured by tightening the locking screw (3). A chute for the trailer, secured under the lower edge of the slide opening may be supplied as additional equipment.

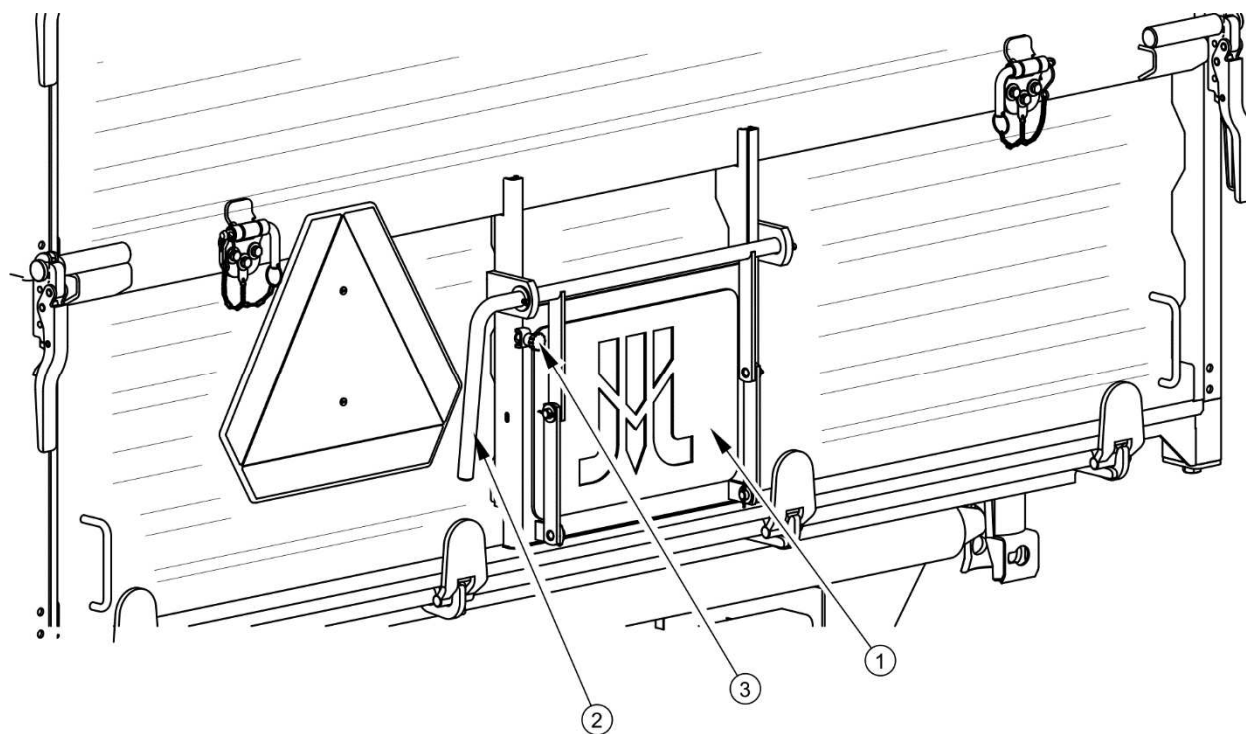


**FIGURE 3.5 Rear wall slide gate**

*(1) slide gate, (2) lever, (3) locking screw*

### **3.2.3 MAIN BRAKE**


The trailer is equipped with one of four types of main brake:

- single conduit pneumatic system with manual three position regulator, figure (3.6),
- double conduit pneumatic system with manual three position regulator, figure (3.7),
- double conduit pneumatic system with automatic regulator, figure (3.8),
- hydraulic brake system, figure (3.9),

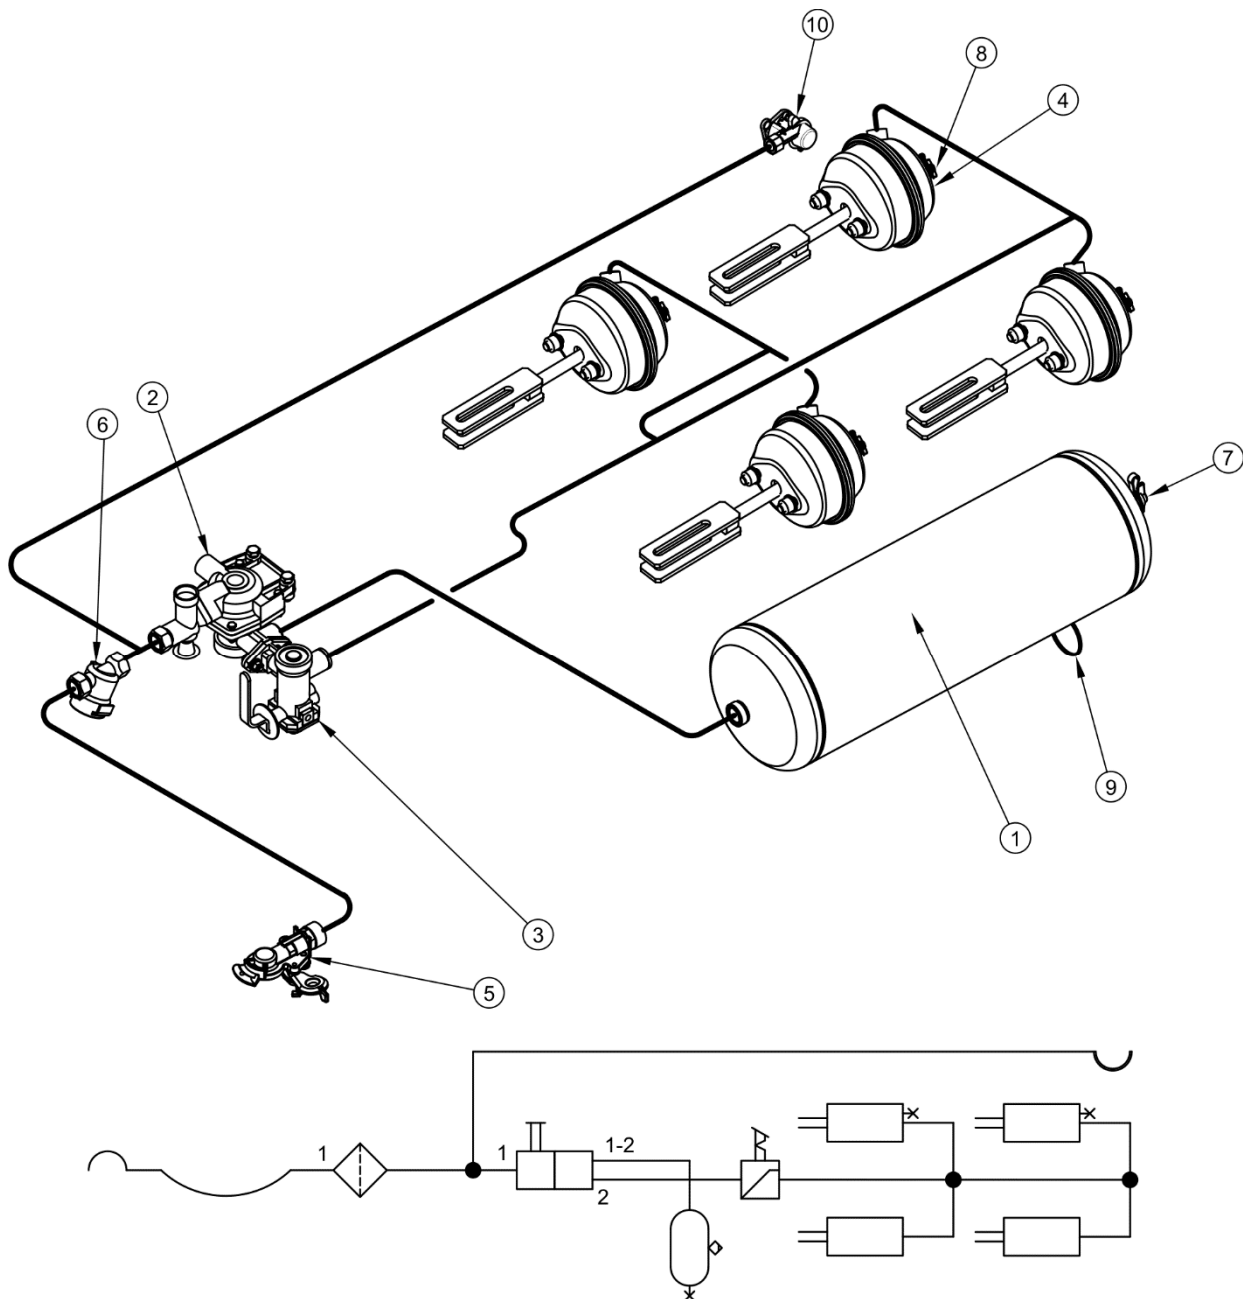


**FIGURE 3.6** Design and diagram of the single conduit pneumatic braking system

(1) air tank, (2) control valve, (3) brake force regulator, (4) pneumatic cylinder, (5) conduit connector (black), (6) air filter, (7) air tank control connector, (8) pneumatic cylinder control connector, (9) drain valve, (10) socket (black)

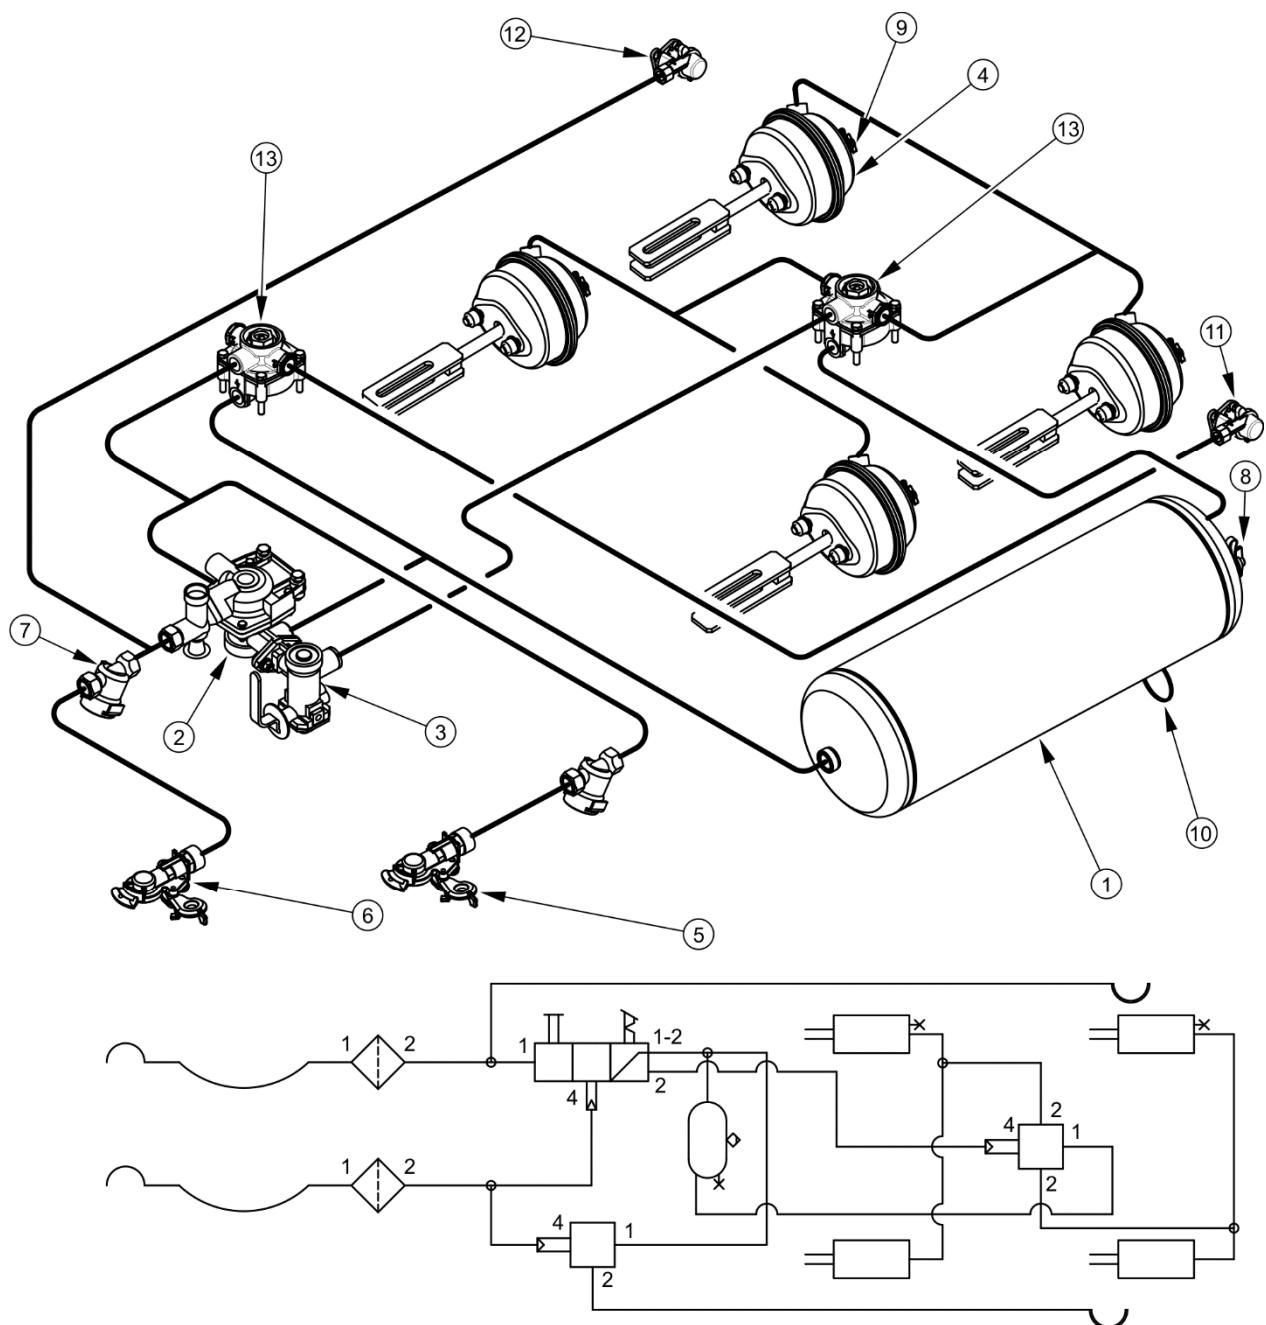

**FIGURE 3.7** Design and diagram of double conduit pneumatic braking system with manual braking force regulator

(1) air tank, (2) control valve, (3) braking force regulator, (4) pneumatic cylinder, (5) conduit connector (red), (6) conduit connector (yellow), (7) air filter, (8) air tank control connector, (9) pneumatic cylinder control connector, (10) drain valve, (11) socket (red), (12) socket (yellow) (13) relay valve

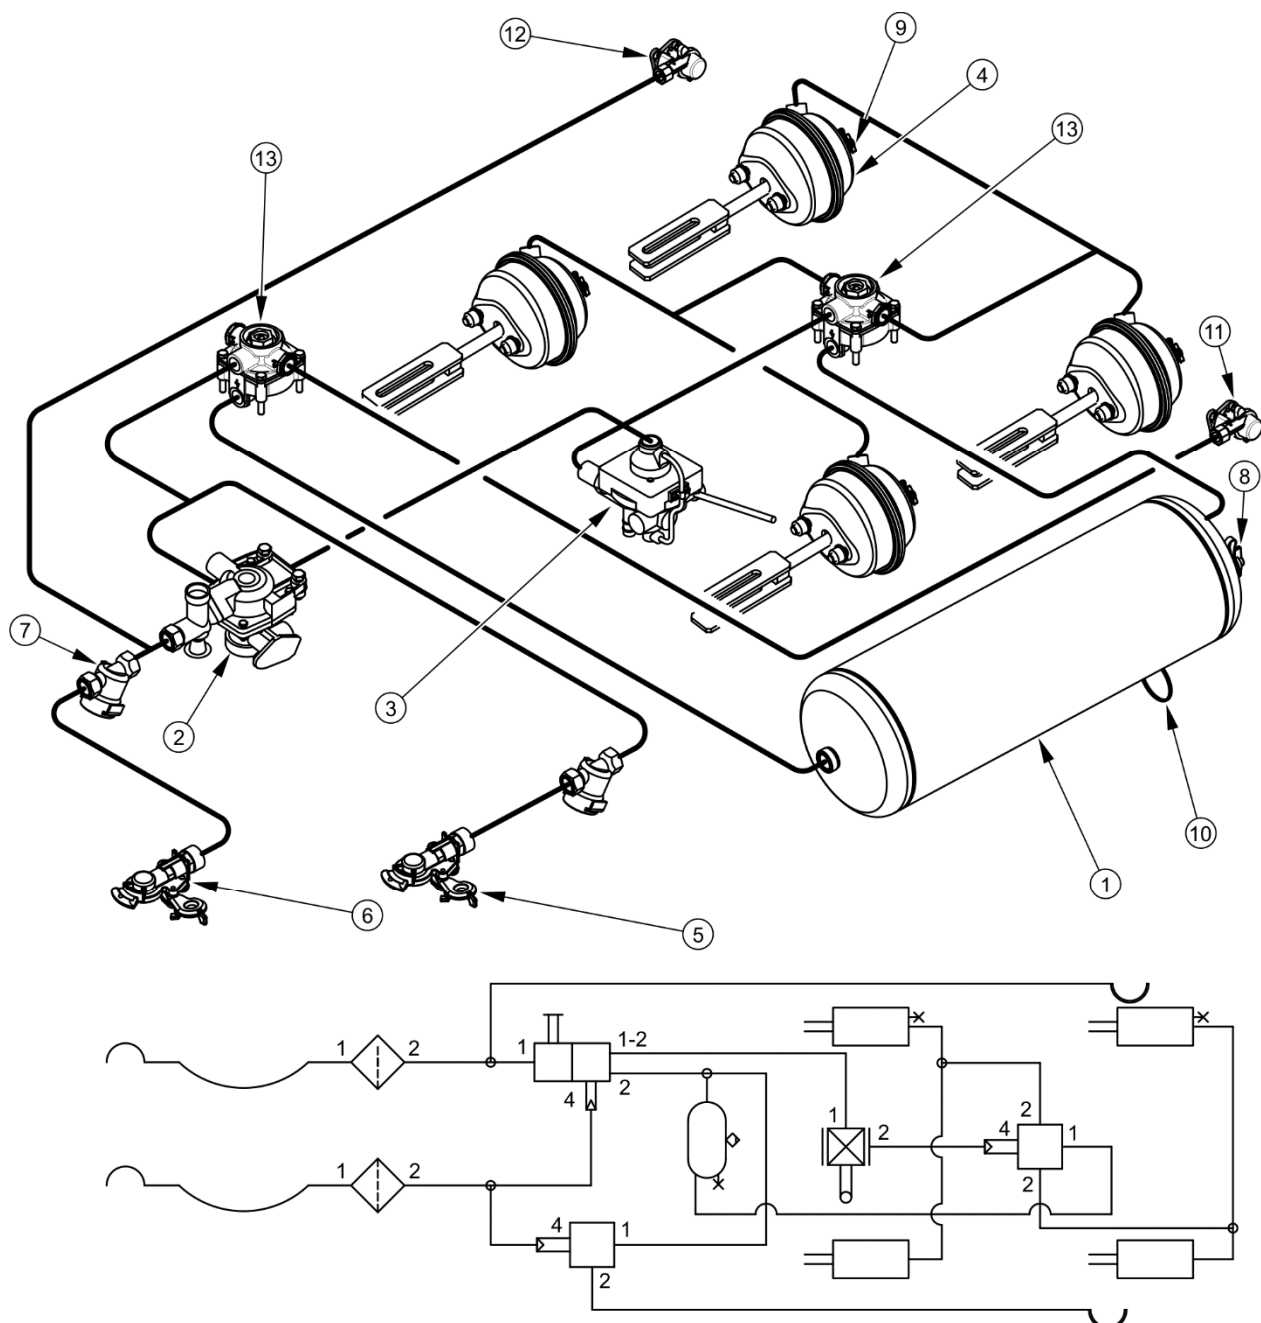


**FIGURE 3.8** Design and diagram of double conduit pneumatic braking system with automatic braking force regulator

(1) air tank, (2) control valve, (3) braking force regulator, (4) pneumatic cylinder, (5) conduit connector (red), (6) conduit connector (yellow), (7) air filter, (8) air tank control connector, (9) pneumatic cylinder control connector, (10) drain valve, (11) socket (red), (12) socket (yellow) (13) relay valve




The main brake (pneumatic or hydraulic brake) is activated from the tractor driver's cab by depressing the brake pedal. The function of the control valve (2) - figure (3.6), (3.7) and (3.8) is to activate the trailer's brakes simultaneously with the tractor's brakes. Furthermore, in case of an inadvertent disconnection of the conduit between the trailer and the tractor, the control valve will automatically activate the trailer's brakes. The valve used in the system is equipped with a circuit causing the brakes to be applied when the trailer is disconnected from the tractor, compare figure (3.10). When compressed air conduit is connected to the tractor, the device automatically applying the brakes now changes its position to allow normal brake operation.

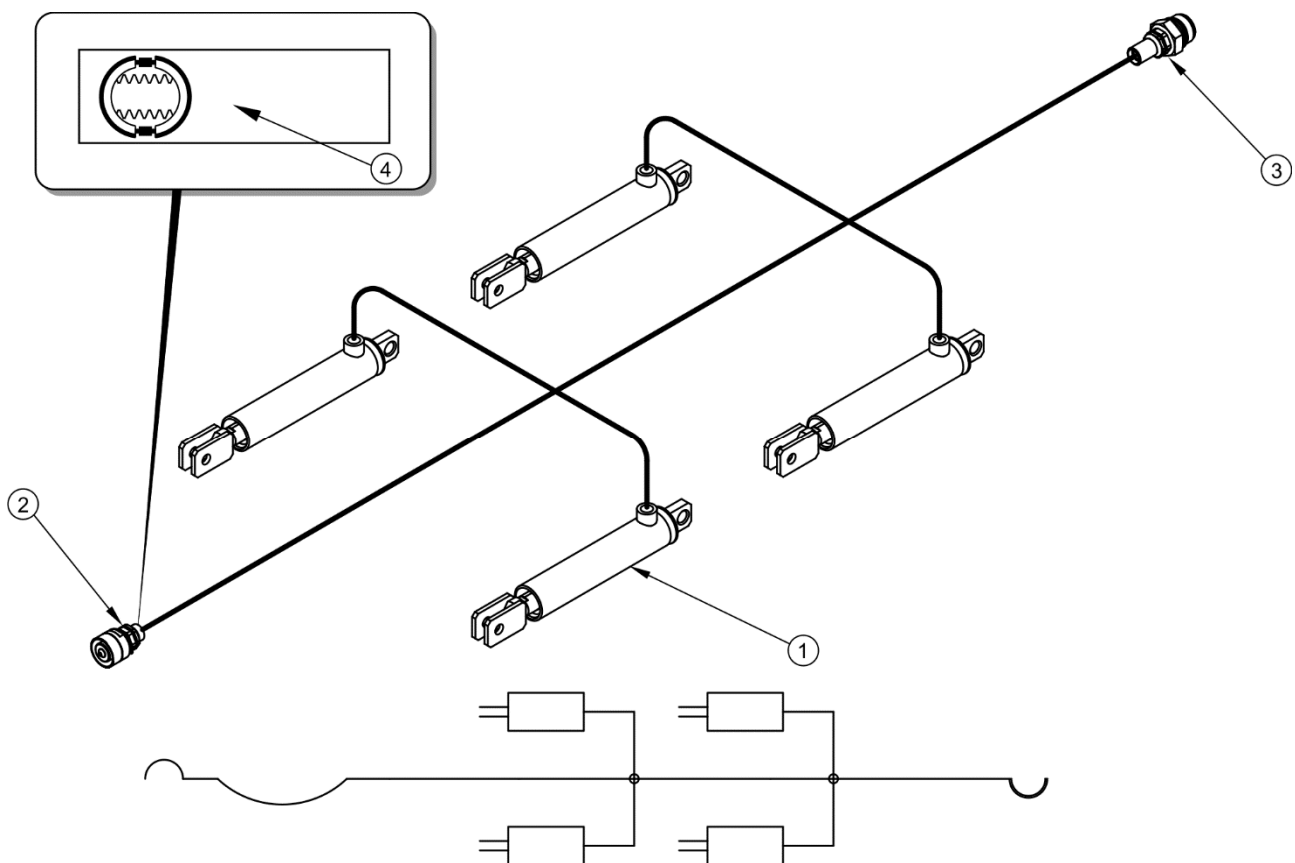

**FIGURE 3.9 Design and diagram of hydraulic braking system**

(1) hydraulic cylinder, (2) hydraulic quick coupler, (3) hydraulic socket, (4) information decal

Three-step brake force regulator (2)- figure (3.10), adjusts braking force depending on setting. Switching to a suitable working mode is done manually by machine operator using the lever (4) prior to moving off. Three working positions are available: A - "no load", B - "half load" and C - "full load".

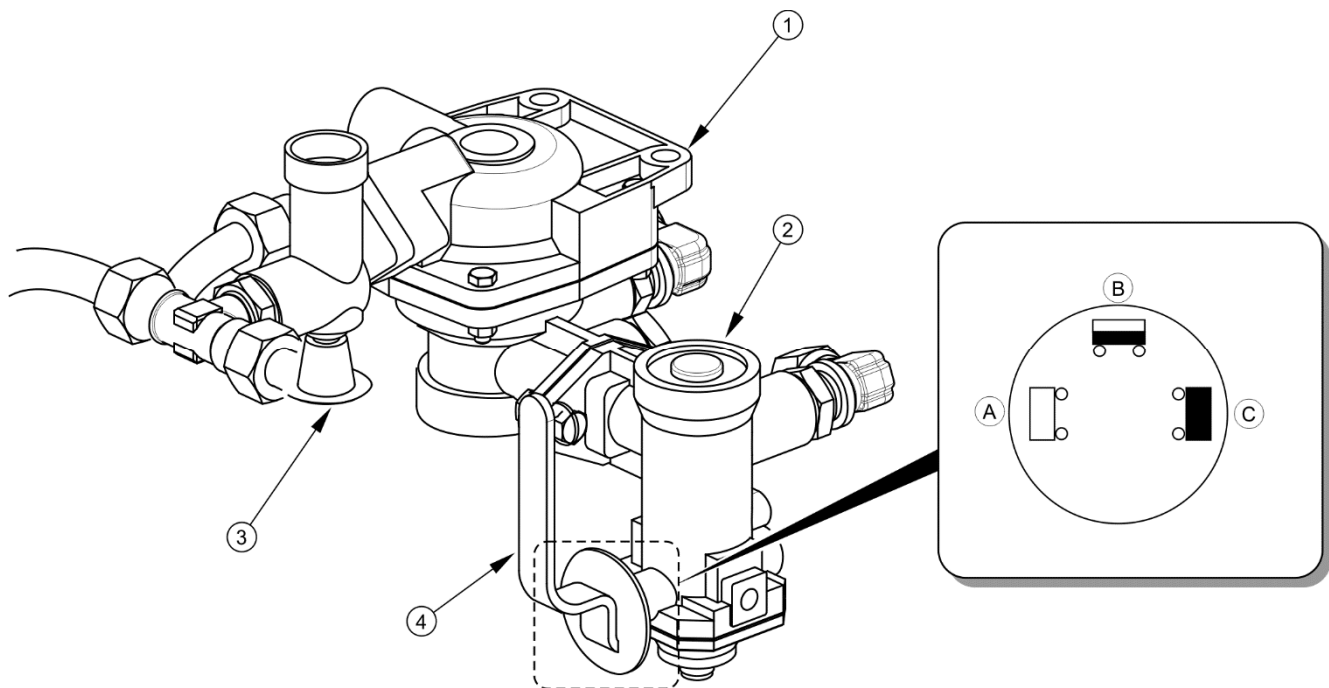

**FIGURE 3.10 Control valve and braking force regulator**


(1) control valve, (2) braking force regulator, (3) trailer parking brake release button, (4) work selection regulator lever, (A) position "NO LOAD", (B) position "HALF LOAD", (C) position "FULL LOAD"

### 3.2.4 HYDRAULIC TIPPER SYSTEM

Hydraulic tipping system is used for automatic unloading of trailer by tipping the load box to the rear or sideways. The hydraulic tipping system is supplied with oil from the tractor's hydraulic system. Hydraulic oil manifold of the tractor's external hydraulic system is used to control the load box tipping mechanism.

The trailer system consists of two independent circuits:

- circuit (A) - to supply the trailer's hydraulic cylinder,
- circuit (B) - to supply the second trailer's hydraulic cylinder (if two trailers are hitched to the tractor).

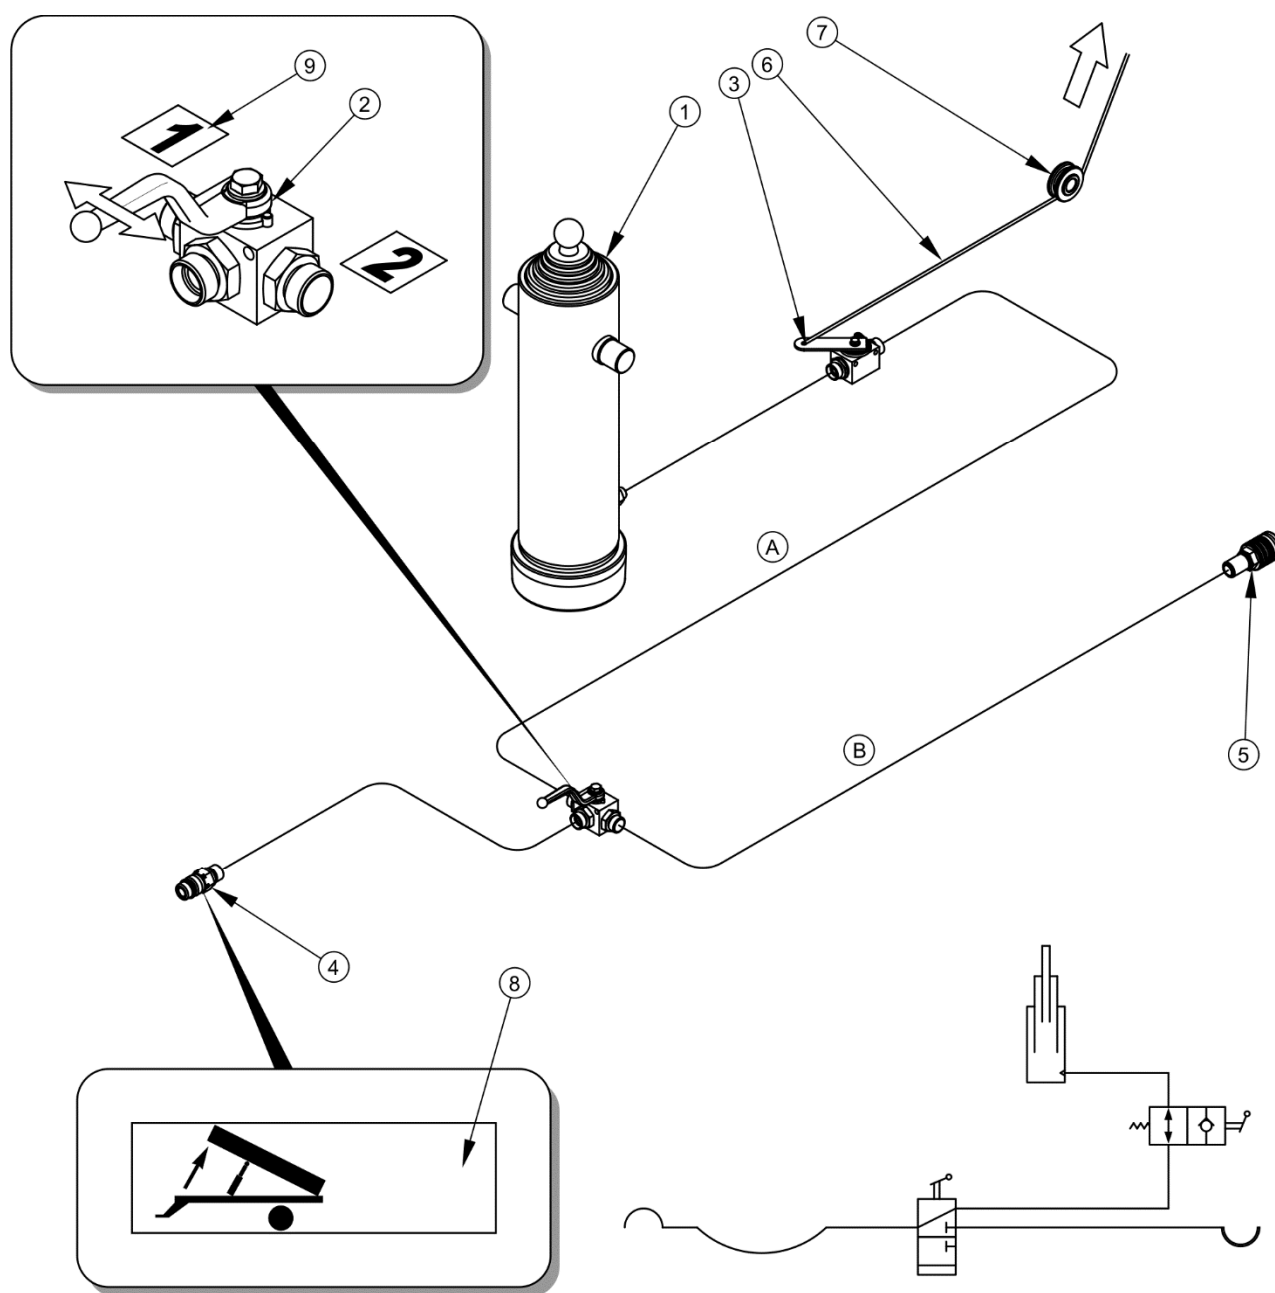

**FIGURE 3.11 Hydraulic tipping system construction and diagram**

(1) telescopic cylinder, (2) three-way valve, (3) cut-off valve, (4) quick coupler, (5) socket, (6) control cable, (7) guide roller, (8), (9) information decal

Three-way valve (2) is used to activate these circuits – figure (3.11). This valve's lever can be placed in two positions:

- 1 - trailer's tipping circuit opened - circuit (A),
- 2 - second trailer's tipping circuit opened – circuit (B).

On the connection conduit, in the vicinity of plug (4), there is a decal (8) identifying the supply conduit of the hydraulic tipping system.

**ATTENTION**

Cut-off valve (3) – figure (3.11) limits the tipping angle of the load box when tipped to the sides and to the rear. The length of the control cable (6) controlling this valve is factory adjusted by the Manufacturer and must not be changed when the trailer is used.


**TIP**

The hydraulic system of the trailer is filled with L-HL32 Lotos hydraulic oil.

**3.2.5 SUPPORT HYDRAULIC SYSTEM**

The hydraulic system – figure (3.12) - is used for automatic unfolding and folding the support leg (3). This is accomplished by extending or withdrawing hydraulic cylinder piston (4). Support hydraulic system is supplied with oil from the tractor hydraulic system through conduit (1). Hydraulic oil selective control valve of the tractor's external hydraulic system is used to control the support cylinder.

The system is equipped with a hydraulic lock (5) located on the cylinder (4). Application of hydraulic lock improves safety of trailer operation. During raising or lowering, the support may damage conduits (rupture, loss of tightness). In such a case, the hydraulic lock will lock cylinder (4) in a fixed position.

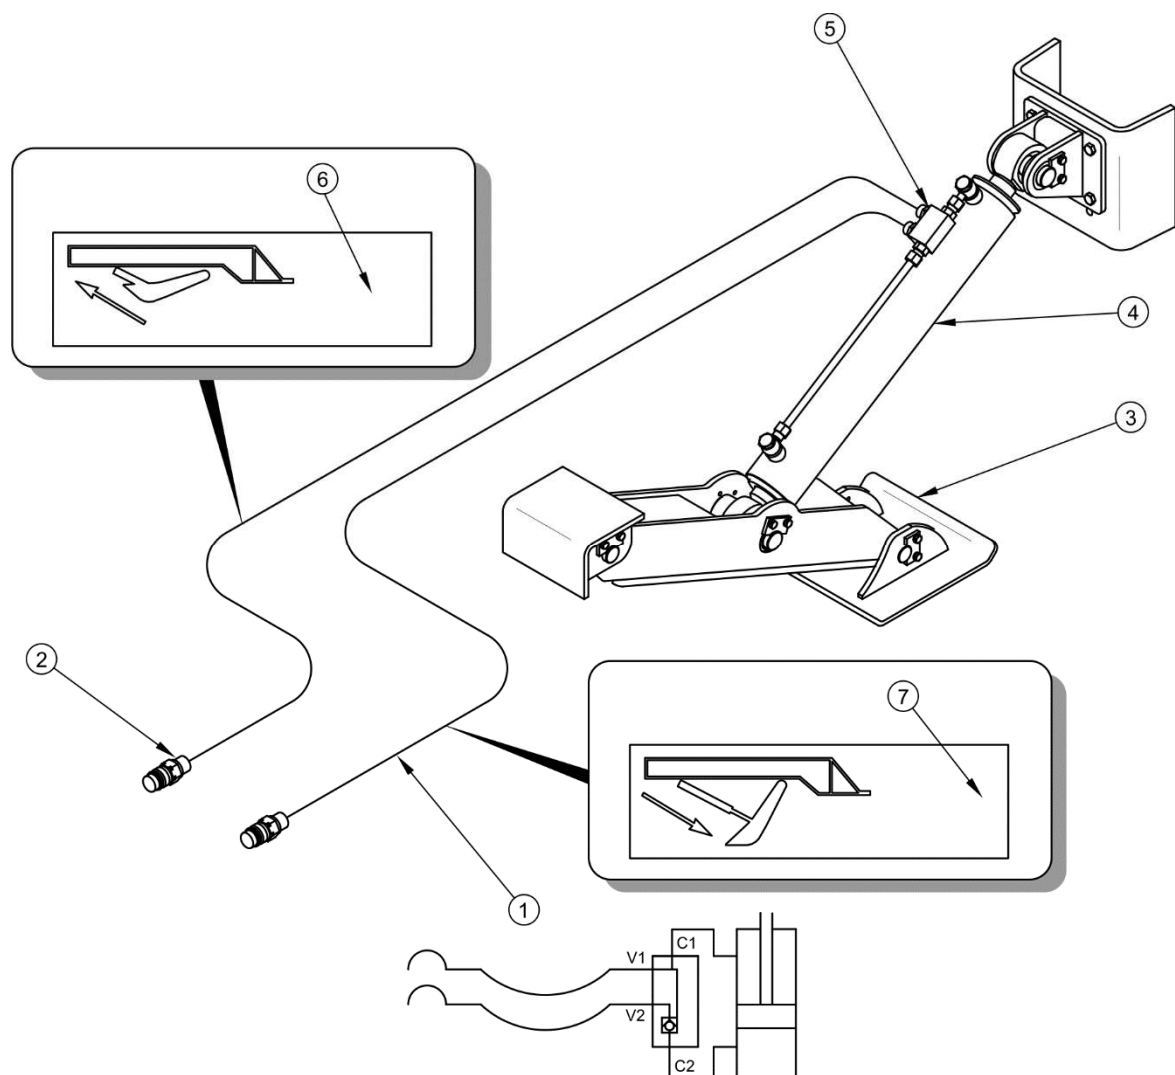

**FIGURE 3.12 Design and diagram of the shear type support hydraulic system**


(1) return conduit, (2) supply conduit, (3) shear type support, (4) hydraulic cylinder, (5) hydraulic lock, (6), (7) information decals



### TIP

The hydraulic systems of the supports are filled with L-HL32 Lotos hydraulic oil

### 3.2.6 HYDRAULIC SYSTEM OF SILO ATTACHMENT

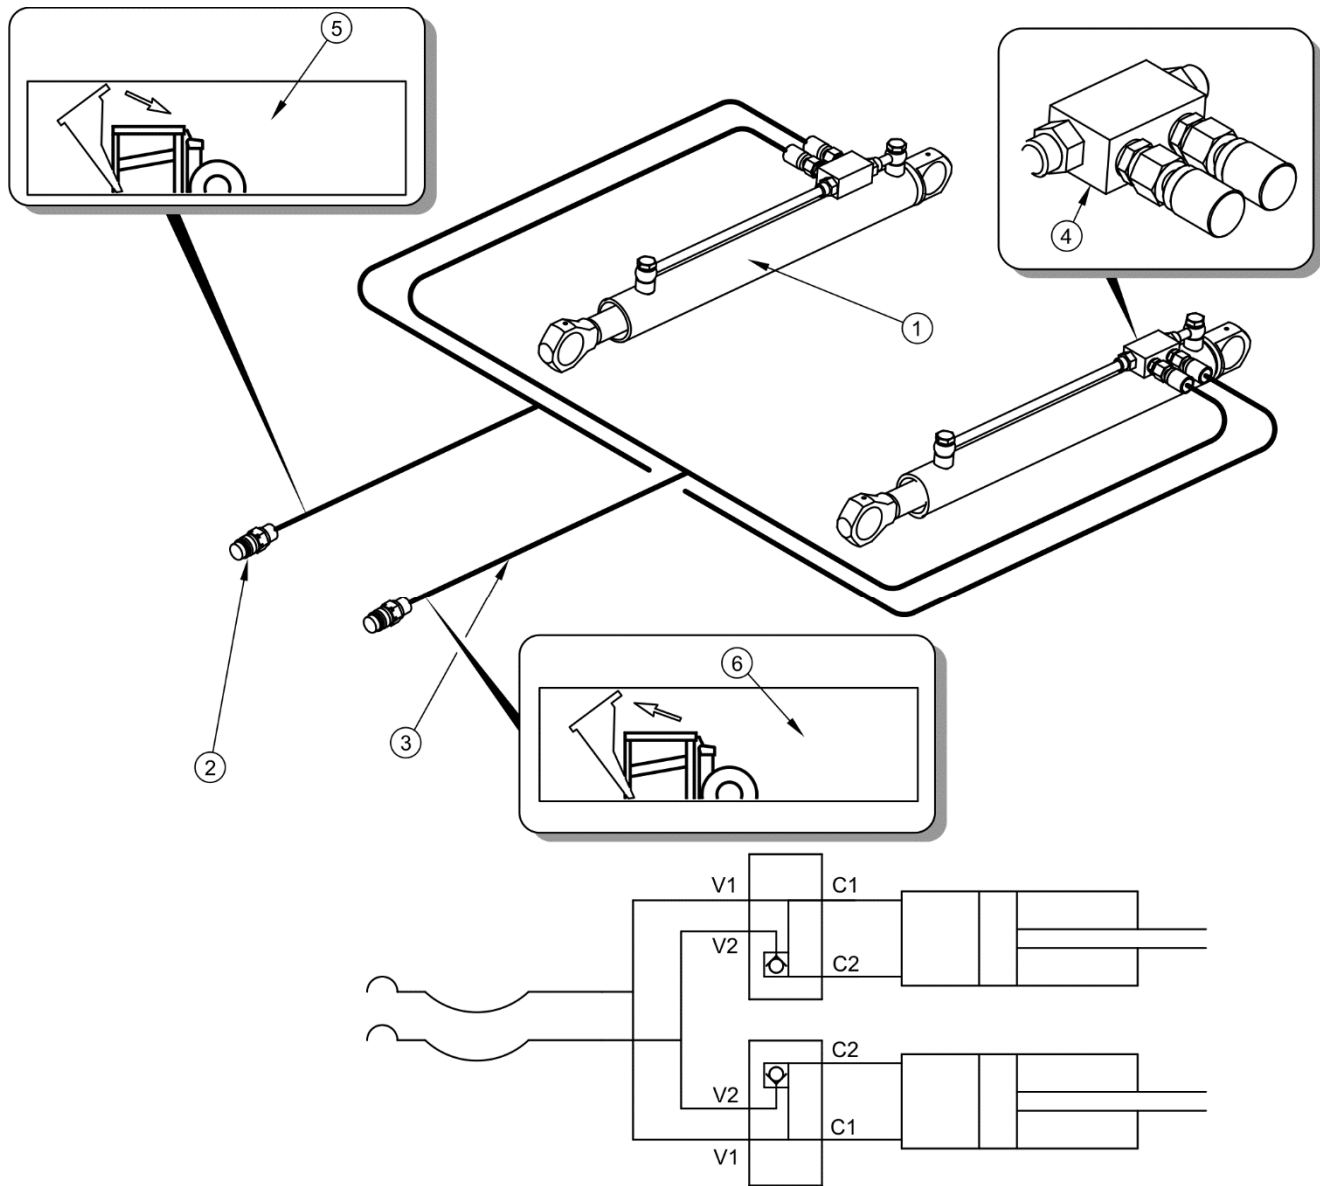


**FIGURE 3.13 Design and diagram of the hydraulic system of SILO attachment**

(1) cylinder, (2) supply conduit, (3) return conduit, (4) hydraulic lock, (5), (6) information decals

Tailgate hydraulic system (figure (3.13)) is used for automatic opening and closing of the hinged wall. The hydraulic wall opening system is supplied with oil from the tractor's hydraulic system. The wall is raised and opened by manipulating the manifold lever of the tractor's external hydraulic system.

The system is equipped with hydraulic locks (4) located on cylinders (1). Hydraulic locks improve safety of trailer operation. When raising or lowering the tailgate, the system conduits may get damaged (rupture, loss of tightness). In such a case, the hydraulic locks will lock cylinders (1) in a fixed position.

### 3.2.7 PARKING BRAKE

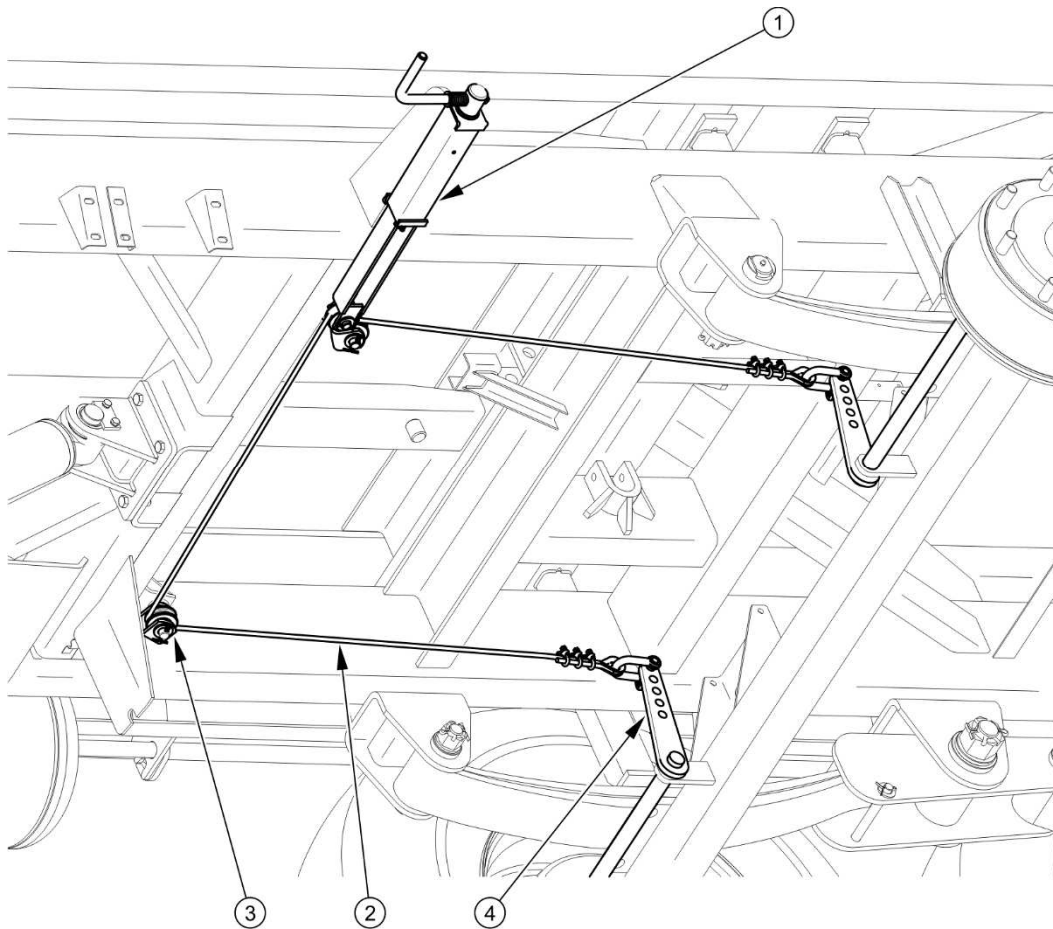

**FIGURE 3.14** Parking brake design

(1) crank mechanism, (2) cable, (3) parking brake guide roller, (4) expander arm


The parking brake is used to immobilise and prevent the trailer from moving while standing motionless.

Crank mechanism bracket (1) is welded to the left longitudinal member of the lower frame. Steel cable (2), routed through rollers (3), is connected with the axle expander levers and the brake crank mechanism. Tightening the cable causes tilting of the expander levers, which expand the brake shoes immobilising the trailer.

Cable (2) tightening is achieved by turning the crank clockwise until resistance is felt.

### 3.2.8 LIGHTING SYSTEM

The trailer electrical system is designed for supply from direct current source of 12 V. Connection of the trailer electrical system with the tractor should be made through an appropriate connection lead delivered with the new trailer.

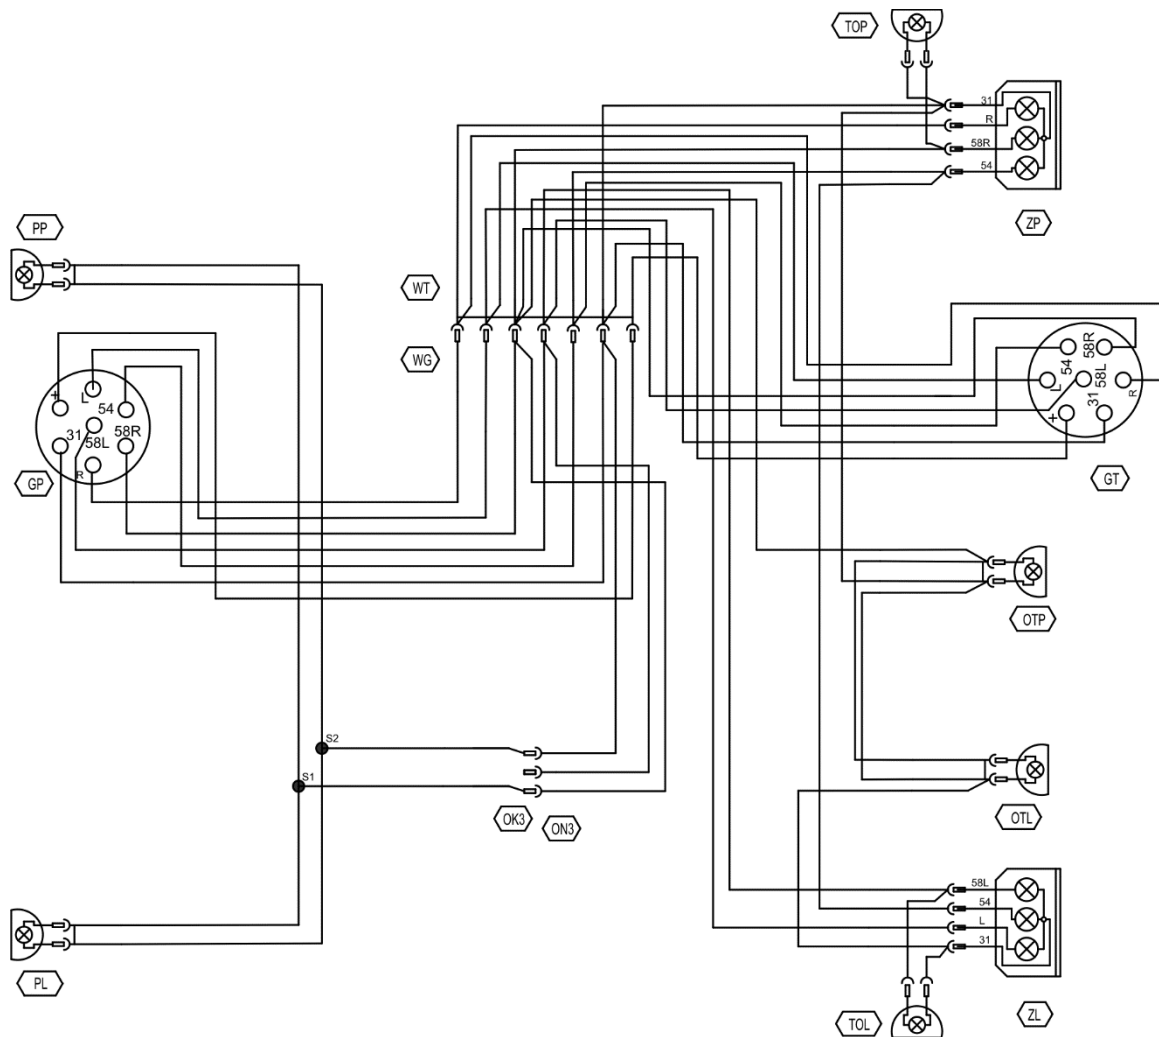


**FIGURE 3.15** Electrical system diagram

*Marking according to table (3.2)*




**TABLE 3.2 List of electrical component markings**

SYMBOL	FUNCTION
ZP	Rear right lamp assembly
ZL	Rear left lamp assembly
GP	Front seven pin socket
GT	Rear seven pin socket
OTP	Right license plate light
OTL	Left license plate light
PP	Front right parking light
PL	Front left parking light
TOP	Rear right clearance lamp
TOL	Rear left clearance lamp

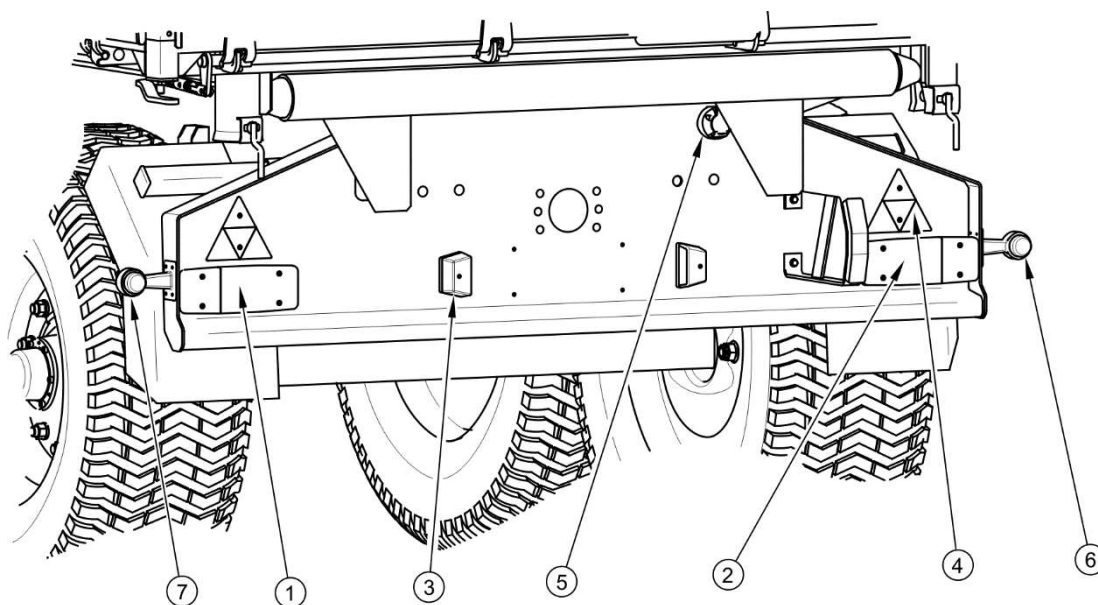**FIGURE 3.16 Arrangement of electrical system components and reflectors – rear view**

(1) rear left lamp assembly, (2) rear right lamp assembly (3) license plate light, (4) triangular reflector, (5) rear 7-pin socket (6) rear right clearance lamp, (7) rear left clearance lamp

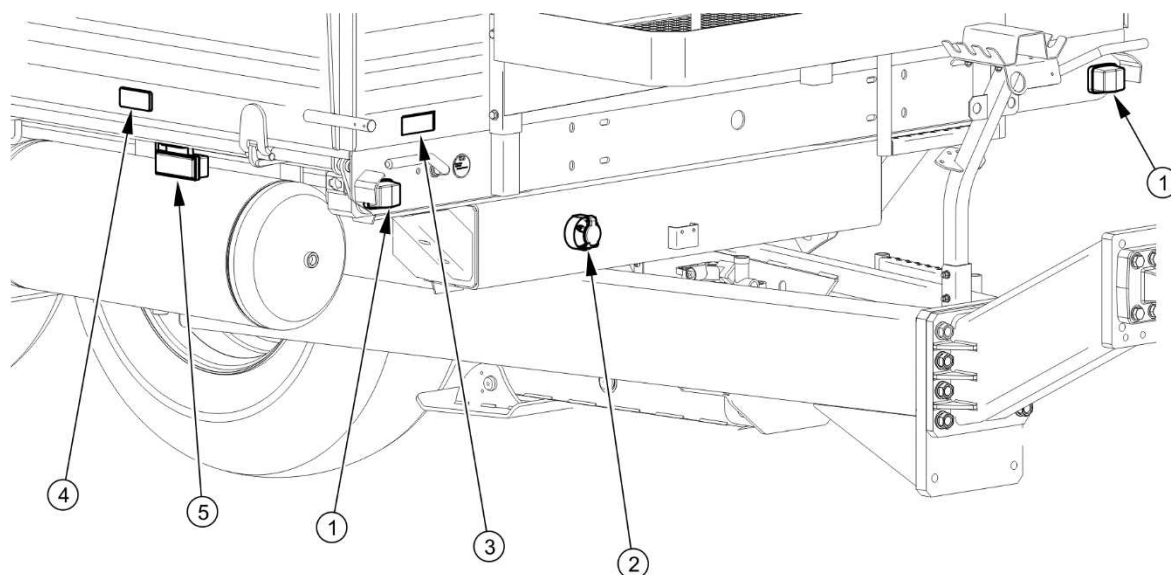

**FIGURE 3.17 Arrangement of electrical system components and reflectors – front view**

*(1) front parking light, (2) front 7-pin socket, (3) white reflector, (4) orange reflector, (5) side clearance lamp*

**TABLE 3.3 Marking of connections of GP and GT sockets**

MARKING	FUNCTION
31	Ground
+	Power supply +12V (not used)
L	Left indicator
54	STOP light
58L	Rear left parking light
58R	Rear right parking light
R	Right indicator

***SECTION***

**4**

---

**CORRECT USE**

## 4.1 PREPARING FOR WORK BEFORE THE FIRST USE

### 4.1.1 CHECKING THE TRAILER AFTER DELIVERY

The manufacturer guarantees that the trailer is fully operational and has been checked according to quality control procedures and is ready for normal use. This does not release the user from an obligation to check the machine's condition after delivery and before first use. The machine is delivered to the user completely assembled.

Before commencing work, machine operator must inspect the technical condition of the trailer and prepare it for the first start-up. The user must carefully read this Operator's Manual and observe all recommendations, understand the design and the principle of machine operation.



#### **ATTENTION**

Before hitching to tractor and using the trailer, the user must carefully read this Operator's Manual and observe all recommendations.

#### **External inspection**

- ➡ Check completeness of machine (standard and optional equipment).
- ➡ Check condition of protective paint coat,
- ➡ Inspect trailer's individual components for mechanical damage resulting from incorrect transport (dents, piercing, bent or broken components).
- ➡ Check technical condition of tyres and tyre pressure.
- ➡ Check technical condition of elastic hydraulic conduits.
- ➡ Check technical condition of pneumatic conduits,
- ➡ Check that there are no hydraulic oil leaks.
- ➡ Check electric lamps.
- ➡ Check hydraulic cylinders for leaks of hydraulic oil.

## 4.1.2 PREPARING THE TRAILER FOR THE FIRST HITCHING TO TRACTOR

### Preparation

- ➔ Check all the trailer's lubrication points, lubricate the machine as needed according to recommendations provided in section 5.6,
- ➔ Check if the nuts and bolts fixing the wheels and drawbar are properly tightened.
- ➔ Drain air tank of the brake system.
- ➔ Ensure that pneumatic, hydraulic and electric connections in agricultural tractor are according to the requirements, if not the trailer should not be hitched to the tractor.
- ➔ Adjust the height of the drawbar or position of upper transport hitch.
  - ⇒ Detailed description can be found in section 5.12.

### Test drive

If all the above checks have been performed and there is no doubt as to the trailer's good technical condition, it can be connected to tractor. Start the tractor, check all systems and conduct test run of trailer without load (no load in load box). It is recommended that the inspection is conducted by two people, one of which should always remain in the tractor cab. Test drive should be conducted according to the sequence shown below.

- ➔ Connect the trailer to appropriate hitch on agricultural tractor.
- ➔ Connect brake, electrical and hydraulic system conduits.
- ➔ Raise support to transport position.
- ➔ Switch on individual lights, check correct operation of electrical system.
- ➔ Turn hydraulic tipping system valve to position "O". Conduct test tipping of load box backwards and sideways. Open and close the rear wall – version 663/4 SILO.
- ➔ When moving off check if the main brakes operate correctly.
- ➔ Perform test drive.

**TIP**

Operating activities: hitching to/unhitching from tractor, adjustment of drawbar position, tipping of load box etc. are described in detail in further parts of the Operator's Manual, in sections 4 and 5.

The trailer may be hitched only when all preparatory activities including inspection of technical condition have been completed satisfactorily. If during test run worrying symptoms occur such as:

- noise and abnormal sounds originating from the abrasion of moving elements of the trailer design,
- hydraulic oil leak,
- pressure drop in brake system,
- incorrect operation of hydraulic and/or pneumatic cylinders

or other faults, find the cause of the problem. If a fault cannot be rectified or the repair could void the guarantee, please contact retailer for additional clarifications or to make a repair.

**DANGER**

Careless and improper use and operation of the trailer, and non-compliance with the recommendations given in this operator's manual is dangerous to your health.

The trailer must never be used by persons, who are not authorised to drive agricultural tractors, including children and people under the influence of alcohol or other drugs.

Non-compliance with the safety rules of this Operator's Manual can be dangerous to the health and life of the operator and others.

After completion of test drive check tightness of wheel and drawbar nuts.

## 4.2 HITCHING AND UNHITCHING THE TRAILER FROM TRACTOR

Ensure that pneumatic, hydraulic and electric connections and the hitch of agricultural tractor are according to the Manufacturer's requirements, if not the trailer should not be hitched to the tractor.

In order to hitch the trailer to the tractor perform the actions below in the sequence presented. Machine must be immobilised by parking brake.

### ATTENTION




Trailer may only be hitched to a tractor, which has the appropriate hitch, connection sockets for braking, hydraulic and electrical systems, and hydraulic oil in both machines is the same type and may be mixed.

When hitching is completed, secure the electrical leads and hydraulic and braking system conduits in such a way that they do not become entangled in tractor's moving parts and are not at the risk of breaking or being severed when making turns.

### Hitching to tractor

- ➔ Immobilise trailer with parking brake.
  - ⇒ Pull brake mechanism clockwise until resistance is felt – if trailer is equipped with standard parking brake.
- ➔ Position agricultural tractor directly in front of drawbar eye.
- ➔ Connect the conduits of the shear type support hydraulic system.
  - ⇒ The conduits of the shear type support hydraulic system are marked with information decals (4) i (5) – figure (4.1).
- ➔ Set the drawbar eye with the aid of the support at such a height that it is possible to hitch the machine.
- ➔ Reverse tractor, hitch trailer, check coupling lock protecting machine against accidental unhitching.

- ⇒ If the agricultural tractor is equipped with an automatic coupler, ensure that the hitching operation is completed and that drawbar eye is secured.
- ➡ Turn off tractor engine. Ensure that unauthorised persons do not have access to the tractor cab.

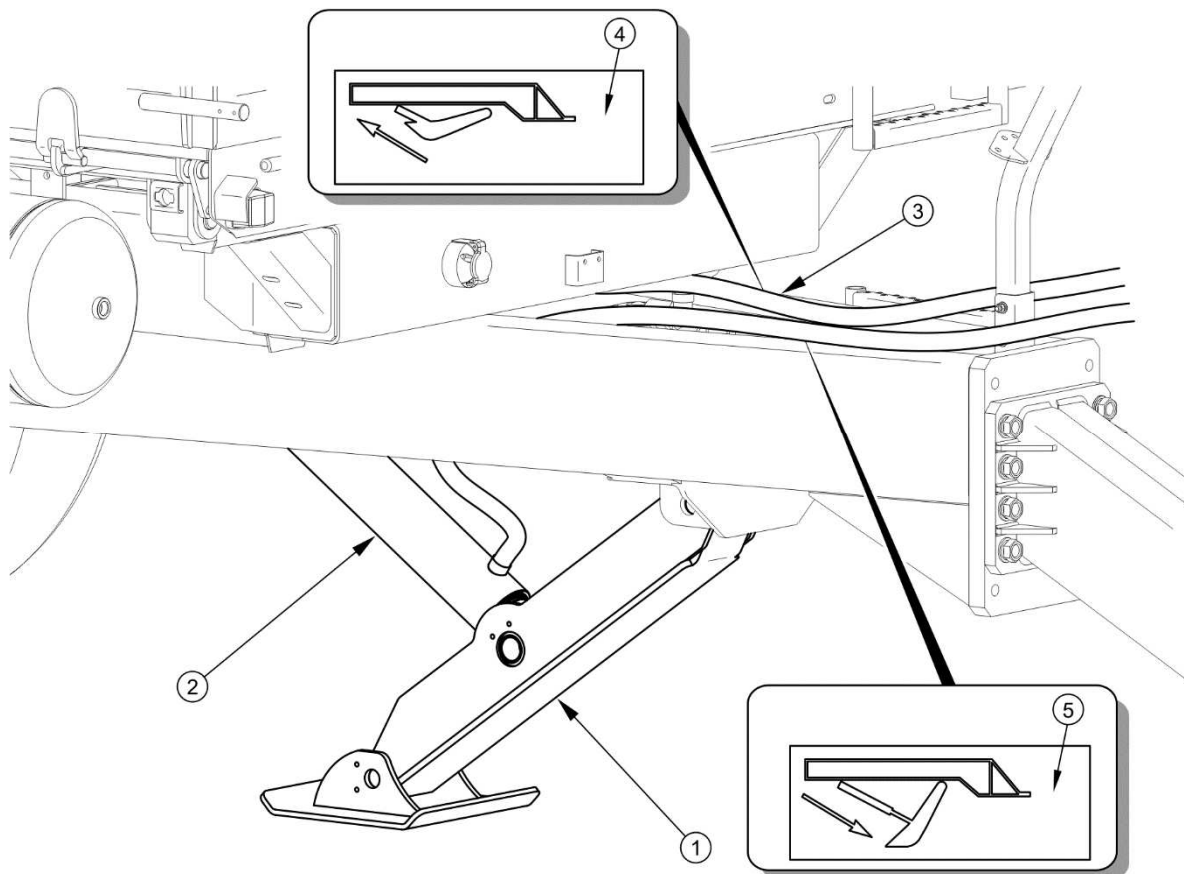

**FIGURE 4.1 Trailer support**

*(1) support, (2) cylinder, (3) hydraulic conduit, (4) - (5) information decals*

- ➡ Connect pneumatic system conduits (applies to double conduit pneumatic system):
  - ⇒ Connect pneumatic conduit marked yellow with yellow socket in tractor.
  - ⇒ Connect pneumatic conduit marked red with red socket in tractor.
- ➡ Connect pneumatic system conduits (applies to single conduit pneumatic system):



- ⇒ Connect pneumatic conduit marked black with black socket in tractor.
- ➔ Connect hydraulic braking system conduits (applies to trailer version with hydraulic braking system).
  - ⇒ Hydraulic braking system conduit is marked with information decal (9) – table (2.1).
- ➔ Connect hydraulic tipping system conduits.
  - ⇒ Hydraulic tipping system conduit is marked with information decal (10) – table (2.1).
- ➔ Connect main lead supplying electrical lighting system.
- ➔ Raise the support to driving position.

## **DANGER**



When hitching, there must be nobody between the trailer and the tractor. When hitching the machine, tractor driver must exercise caution and make sure that nobody is present in the hazard zone.

When connecting the hydraulic conduits to the tractor, make sure that the hydraulic system of the tractor and the hydraulic system of the trailer are not under pressure.

Ensure sufficient visibility during hitching.

Exercise particular caution during folding support - danger of severing limbs.

During connection of braking system conduits (pneumatic double conduit) the correct sequence of conduit connection is very important. First connect the yellow connector to yellow socket in the tractor and only then connect the red connector to the red socket in the tractor. Once the 2nd conduit is connected, the brake release system will switch to normal mode of operation (disconnection or interruption of the air conduits causes the trailer's braking system control valve to automatically apply brakes). Conduits are marked with coloured protective covers, which identify the appropriate system conduit.



## **ATTENTION**

Ensure compatibility of oils in tractor hydraulic system and in the trailer hydraulic tipping system.

## Unhitching the trailer

In order to unhitch the trailer from the tractor follow these steps.

- ➔ Immobilise tractor and trailer with parking brake.
- ➔ Place chocks under trailer wheel.
  - ⇒ Wheel chocks must be so placed that one is in front of the wheel and the second is behind the wheel - see section 2.
- ➔ Controlling the support, set the drawbar eye at such a height that one may safely unlock and unhitch the trailer.
- ➔ Reduce residual pressure in the support system.
- ➔ Turn off tractor engine. Ensure that unauthorised persons do not have access to the tractor cab.
- ➔ Disconnect all hydraulic tipping system conduits from tractor.
- ➔ Disconnect electric lead.
- ➔ Disconnect pneumatic system conduits (applies to double conduit pneumatic system).
  - ⇒ Disconnect pneumatic conduit marked red.
  - ⇒ Disconnect pneumatic conduit marked yellow.

### **DANGER**



**Exercise caution when disconnecting trailer from the tractor. Ensure good visibility. Unless it is necessary, do not go between tractor and trailer.**

**Before disconnecting conduits and drawbar eye, close tractor cab and secure it against access by unauthorised persons. Turn off tractor engine.**

- ➔ Disconnect pneumatic system conduits (applies to single conduit systems):
  - ⇒ Disconnect pneumatic conduit marked black.
- ➔ Disconnect hydraulic braking system conduits (applies to trailer version with hydraulic braking system).
- ➔ Disconnect the conduit of the support hydraulic system.
- ➔ Protect conduit ends with covers. Place conduit plugs in appropriate sockets.

- ➔ Release tractor hitch and disconnect trailer drawbar from tractor hitch and drive tractor away.


**ATTENTION**

Do NOT park a loaded trailer, which is disconnected from the tractor and resting on the parking stand.

## 4.3 HITCHING AND UNHITCHING THE SECOND TRAILER

A second trailer may only be connected, if it is a machine built on a dual axle chassis and if it fulfils all the requirements specified in section 1.

Hitching the second trailer to the tractor - trailer unit requires experience in driving an agricultural tractor with a trailer. While hitching the second trailer, it is recommended to use the help of another person to guide the tractor driver.

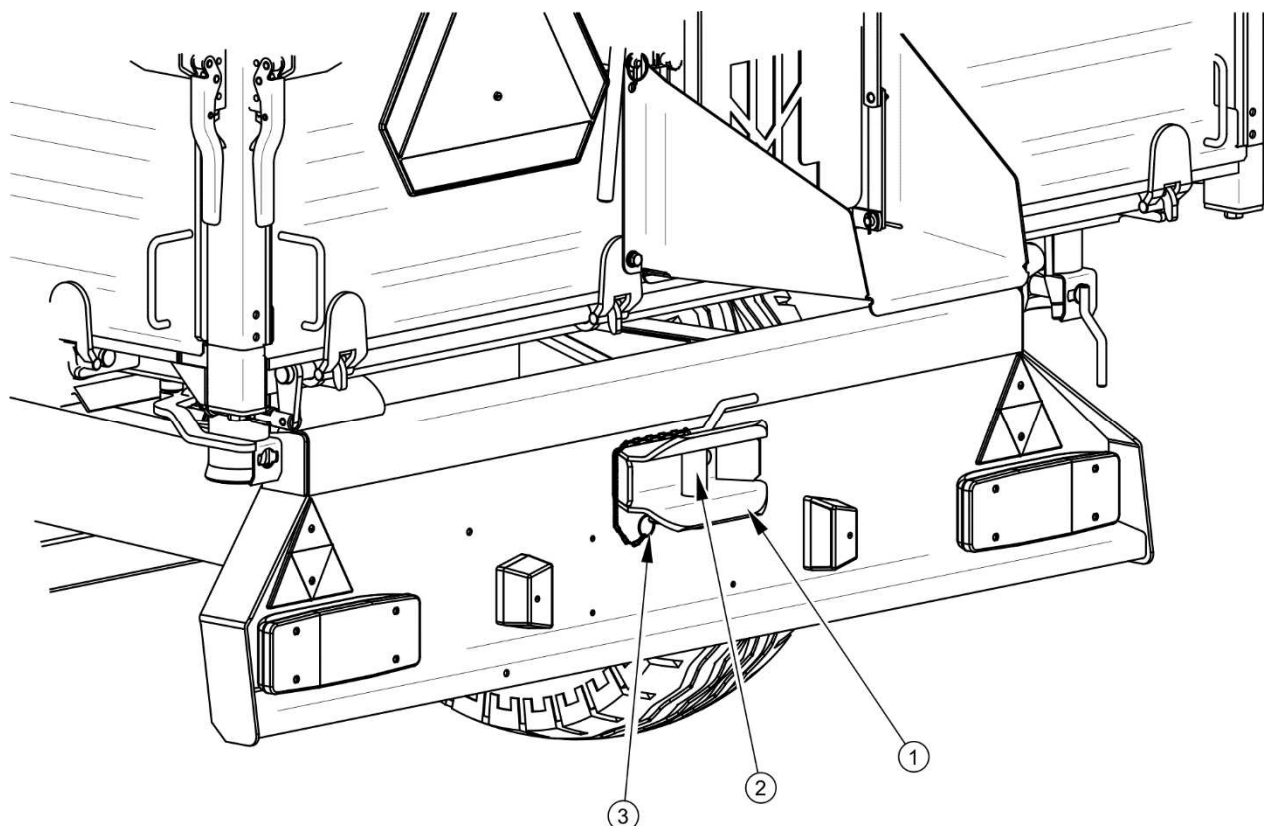

**FIGURE 4.2** Rear hitch

(1) hitch body, (2) hitch pin, (3) chain with cotter pin securing pin

### Hitching the second trailer

- ➔ Remove cotter pin securing pin and take out hitch pin (2) in the first trailer - figure (4.2).
- ➔ Adjust the height of the drawbar of the second trailer in such a manner to enable coupling the machines.
- ➔ Reversing tractor, drive the rear hitch of the first trailer onto the drawbar of the second trailer.
- ➔ Insert drawbar pin and securing cotter pin.
- ➔ Connect conduits of pneumatic, hydraulic and electrical systems according to instructions contained in section (4.2)

### Unhitching the second trailer

- ➔ Immobilise tractor and trailers with parking brake.
- ➔ Turn off tractor engine. Ensure that unauthorised persons do not have access to the tractor cab.
- ➔ Disconnect conduits of pneumatic, hydraulic and electrical systems according to instructions contained in section (4.2).
- ➔ Unlock the pin of the hitch of the first trailer. Remove the pin and drive tractor away.



#### **DANGER**

The person assisting in coupling the second trailer must stand in such a place as to be visible to the tractor driver at all times. Be especially careful and keep safe distance from danger zones.



#### **ATTENTION**


Do NOT hitch a second trailer constructed on any chassis except dual axle chassis.

## 4.4 LOADING AND SECURING LOAD

Secure the load with tarpaulin cover. The load should be covered whenever trailer moves on public roads.

### Load protection with tarpaulin cover

- ➔ While standing on the fenced platform, unroll the tarpaulin cover (2) using crank (1).
- ➔ Attach all pull straps (4) to clamps (3) on the trailer load box.
- ➔ Pull tarpaulin cover from the right side.
- ➔ Pull tarpaulin cover to the front and finally to the rear wall of the load box.

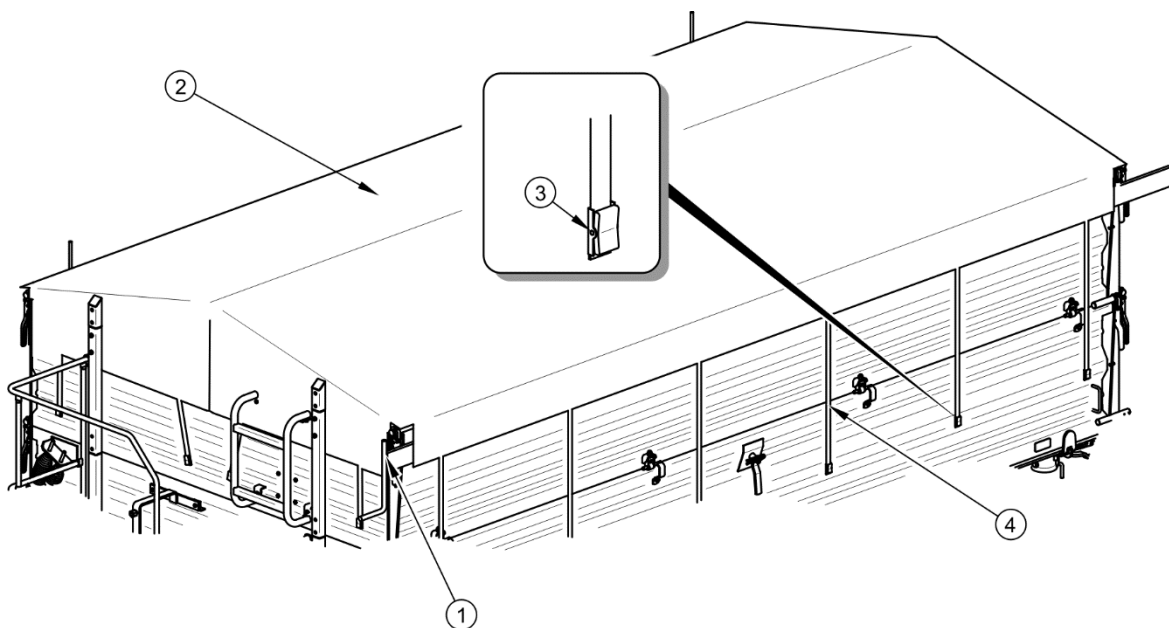

**FIGURE 4.3** Tarpaulin cover

(1) strip with crank, (2) tarpaulin cover, (3) clamp, (4) pull strap

### 4.4.1 GENERAL INFORMATION ABOUT LOADING

Before beginning loading make certain that the load box side walls and slide gate are properly closed and secured. The trailer must be positioned to travel forwards and be hitched to the tractor. Loading should only take place, when trailer is placed on flat level surface and hitched to tractor. If load does not exert pressure on the side walls or extension walls, the linking cable can be disengaged. In other cases it must be installed in cable release

mechanism installed in the side walls and extensions. Load box walls can be damaged if there is no linking cable.

Regardless of the type of load carried, the user is obliged to secure it in such a manner that the load is unable to spread and cause contamination of the road. If this is impossible, do NOT transport this type of load.

Materials, which in contact with painted or steel surfaces may cause damage, should be transported in sealed packaging (bags, boxes, barrels, etc.). After unloading, the load box should be thoroughly cleaned with a strong jet of water.

If the transported materials exert high local pressure on the load box platform it should be protected against damage using thick planks, plywood or other materials of similar properties.



### ATTENTION

Always try to distribute the load uniformly in the load box.

Do NOT exceed the trailer's maximum carrying capacity.

Due to various densities of materials, the use of the total load box capacity may lead to exceeding permissible carrying capacity of the trailer. Guideline specific weight of selected materials is shown in table (4.1). Take care not to overload the machine. Loading should be carried out by a person experienced in this type of work and having appropriate authorisation for operating equipment (if required).

**TABLE 4.1 Guideline weights by volume of selected materials**

TYPE OF MATERIAL	WEIGHT BY VOLUME kg/m <sup>3</sup>
<b>Root crops:</b>	
raw potatoes	700 - 820
steamed crushed potatoes	850 - 950
dried potatoes	130 - 150
sugar beet - roots	560 - 720
fodder beet - roots	500 - 700
<b>Organic fertilisers:</b>	
old manure	700 - 800

TYPE OF MATERIAL	WEIGHT BY VOLUME kg/m <sup>3</sup>
mature manure	800 - 900
fresh manure	700 - 750
compost	950 - 1 100
dry peat	500 - 600
<b>Mineral fertilisers:</b>	
ammonium sulphate	800 - 850
potash salt	1,100 - 1,200
super phosphate	850 - 1,440
basic slag phosphate	2,000 - 2,300
potassium sulphate	1,200 - 1,300
kainite	1,050 - 1,440
milled lime fertiliser	1,250 - 1,300
<b>Building materials:</b>	
cement	1,200 - 1,300
dry sand	1,350 - 1,650
wet sand	1,700 - 2,050
solid bricks	1,500 - 2,100
hollow bricks	1,000 - 1,200
stones	1,500 - 2,200
soft wood	300 - 450
hard sawn timber	500 - 600
impregnated timber	600 - 800
steel structures	700 - 7,000
milled burnt lime	700 - 800
cinders	650 - 750
gravel	1,600 - 1,800
<b>Straw litter and bulk feeds:</b>	
meadow hay dried in the swath	10 - 18
hay wilted in the swath	15 - 25
hay in gathering trailer (dry wilted)	50 - 80
wilted cut hay	60 - 70

TYPE OF MATERIAL	WEIGHT BY VOLUME kg/m <sup>3</sup>
dry baled hay wilted baled hay stored dry hay stored cut hay clover (lucerne) wilted in the swath clover (lucerne) cut wilted on trailer clover (lucerne) wilted on gathering trailer dry stored clover cut dry stored clover dry straw in round bales damp straw in round bales cut damp straw in bulk trailer cut dry straw in bulk trailer cut dry straw in gathering trailer cut dry straw in stack baled straw (lightly crushed) baled straw (heavily crushed) cut cereal mass in bulk trailer cut cereal mass in gathering trailer green fodder in swath cut green fodder in bulk trailer green fodder in gathering trailer fresh beet leaves cut fresh beet leaves beet leaves in gathering trailer	120 - 150 200 - 290 50 - 90 90 - 150 20 - 25 110 - 160 60 - 100 40 - 60 80 - 140 8 - 15 15 - 20 50 - 80 20 - 40 50 - 90 40 - 100 80 - 90 110 - 150 35 - 75 60 - 100 28 - 35 150 - 400 120 - 270 140 - 160 350 - 400 180 - 250
<b>Concentrated feeds and mixed feeds:</b> stored chaff pressed cake milled dry feed mixed feeds mineral mixtures	200 - 225 880 – 1,000 170 - 185 450 - 650 1,100 – 1,300



TYPE OF MATERIAL	WEIGHT BY VOLUME kg/m <sup>3</sup>
ground oats	380 - 410
wet sugar beet pulp	830-1,000
pressed sugar beet pulp	750 - 800
dry sugar beet pulp	350 - 400
bran	320 - 600
bone meal	700 – 1,000
pasture salt <sup>(1)</sup>	1,100 – 1,200
molasses	1,350 – 1,450
silage (pit silo)	650 – 1,050
hay silage (tower silo)	550 - 750
<b>Seeds and grains:</b>	
beans	750 - 850
mustard	600 - 700
peas	650 - 750
lentils	750 - 860
runner beans	780 - 870
barley	600 - 750
clover	700 - 800
grass	360 - 500
maize	700 - 850
wheat	720 - 830
oil seed rape	600 - 750
linseed	640 - 750
lupins	700 - 800
oats	400 - 530
lucerne	760 - 800
rye	640 - 760
<b>Others:</b>	
dry soil	1,300 – 1,400
wet soil	1,900 – 2,100
fresh peat	700 - 850
garden soil	250 - 350

Source: "Technology of machine work in agriculture", PWN, Warszawa 1985

### ATTENTION



The trailer is also designed for transport of harvested crops and agricultural products (volumetric or loose). It is permissible to transport other loads (timber, building materials packed loads), on the condition of securing the load box against damage (abrasion of paint covering, corrosion etc.).

### DANGER



Load on trailer must be secured against moving or contaminating road during travel. If it is impossible to properly secure the load, do NOT transport this type of material.

During loading the trailer the drawbar eye and the tractor hitch are subjected to great vertical loading.

### Bulk materials

Loading bulk materials is normally conducted with the use of loaders or conveyors and possibly loading manually. Do not load bulk materials to a height greater than that of side walls or extensions. On completion of loading, the load should be evenly spread over the whole surface of the load box. When loading bulk materials, the walls and extensions should be connected with linking cable. Secure cable release mechanism with cotter pin.

Oilseed rape or seeds of other plants of very small size or powder materials can be transported provided the load box is properly sealed in places where gaps are bigger than the seed diameter or other carried material. Profiled rubber seals, silicone sealers, plastic wrap, rope or textile materials are recommended materials to provide sealing of the load box.

Some bulk loads (e.g. building materials, such as gravel or slag) may cause more rapid damage to paintwork.

### Loads of pieces or solid lumps

Loads of pieces or solid lumps are generally hard materials of significantly greater dimensions than bulk loads (stones, coal, bricks and ballast). These materials without prior preparation of the load box may cause indentation of the floor or walls and abrasion of paintwork. In order to protect it, lay thick plywood, hard particle board, thick planks or other materials of similar properties on the load box platform and possibly on walls and wall

extensions. Non-compliance with the instructions provided could invalidate the guarantee. Loading of material in pieces or solid lumps must be from a low height. The load must not fall with great force on the floor of the load box, even if it is protected.

### **Hazardous loads**

According to the European ADR agreement concerning the international road transport of hazardous materials, the transport of this type of load (defined in detailed by this agreement) is prohibited with the use of agricultural trailers. The only exception are plant protection materials and artificial fertilisers, which may be transported on agricultural trailers on the condition that they are transported in the appropriate packaging and in quantities envisaged by the ADR agreement.

#### **DANGER**



If it is necessary to carry permitted hazardous materials, acquaint yourself with the regulations concerning transport of hazardous materials in force in the given country and also the regulations of the ADR agreement.

Carefully read the information leaflets provided by the load manufacturer, and to observe the instructions for transporting and handling the load. Ensure whether during loading work it is necessary to apply additional personal protection (masks, rubber gloves etc.)

### **High volume loads**

High volume loads (light with a high volume), such as hay, straw bales - rectangular or round, green fodder etc., are recommended to be loaded with the aid of the appropriate implements: bail grabs, forks etc. or directly from suitable machines such as forage harvester or combine harvesters. The load may be loaded even higher than the load box extensions but taking special care about trailer stability. Remember that the high load placed on the trailer with the use of a special implement has very negative impact on the trailer stability.

### **Loads in packaging**

Loads transported in packaging (boxes, sacks) must be laid closely side-by-side beginning from the front side of the trailer. If it is essential to lay several layers, particular groups should be stacked alternately (in block system). The load must be laid tightly together and on the whole surface of the trailer floor. Otherwise, during travel the load will move. Due to the trailer design (the load box designed for the transport of agricultural crops and products, lack of

load securing points), materials in packaging may not be loaded above the top of the walls or extensions of load box. A higher load layer may move during travel.

**DANGER**

If there is a danger of load packaging moving, do NOT transport this type of material. A moving load constitutes a serious hazard during travel for the tractor driver and other road users.

Materials which may cause corrosion of steel, chemical damage or react in any other way negatively affecting the trailer structure may be transported only on condition of appropriate load preparation. Materials must be tightly packed (in plastic foil sacks, plastic containers etc.). During transport packaging contents may not come into contact with load box therefore ensure the appropriate tightness of containers.

**Final remarks****DANGER**

Overloading the trailer, erroneous loading and securing of the load is the most frequent cause of accidents during transport.

The load must be arranged in such a way that it does not threaten the stability of the trailer and does not hinder driving.

Ensure that during unloading / loading or raising the load box nobody is near the trailer. Before tipping the load box ensure proper visibility and make certain that there are no bystanders near the trailer.

Due to diversity of materials, tools, methods of fixing and securing the load, it is impossible to describe all methods of loading. While working be guided by caution and own experience. The trailer user must carefully read the regulations concerning road transport and comply with them.

**DANGER**

The trailer is not intended to transport people, animals or hazardous materials (with the exception of loads specified in section 4.4).

The arrangement of the load may not cause an overload on the axle or hitch system of the trailer.

## 4.5 TRANSPORTING LOAD

When driving on public or private roads, respect the road traffic regulations, exercise caution and prudence. Listed below are the key guidelines for driving the tractor and trailer combination.

- Before moving off make sure that there are no bystanders, especially children, near the trailer or the tractor. Take care that the driver has sufficient visibility.
- Make sure that the trailer is correctly attached to the tractor and tractor's hitch is properly secured.
- Vertical load borne by the trailer drawbar eye affects the steering of the agricultural tractor.
- The trailer must not be overloaded, loads must be uniformly distributed so that the maximum permissible trailer axle and hitch loads are not exceeded. The trailer's maximum carrying capacity must not be exceeded as this can damage the trailer and pose a risk to the operator or other road users.
- Permissible design speed and maximum speed allowed by road traffic law must not be exceeded. The towing speed should be adapted to the current road conditions, load carried by the trailer, road surface conditions and other relevant conditions.
- Trailer may be towed on slopes of up to 8° and unloading must take place only on a level surface.
- When not connected to the tractor, the trailer must be immobilised using parking brake and possibly also with chocks or other objects without sharp edges placed under the front and back wheels. Do NOT leave unsecured trailer. In the event of machine malfunction, pull over on the hard shoulder avoiding any risk to other road users and position reflective warning triangle according to traffic regulations.
- When driving on public roads trailer must be marked with a slow-moving vehicle warning sign attached to the rear wall of load box, if the trailer is the last vehicle in the group.
- While driving on public roads the trailer must be fitted with a certified or authorised reflective warning triangle.

- When driving, comply with all road traffic regulations, indicate an intention to turn using indicator lamps, keep all road lights and indicator lights clean at all times and ensure they are in good condition. Any damaged or lost lamps or indicator lights must be immediately repaired or replaced.
- Avoid ruts, depressions, ditches or driving on roadside slopes. Driving across such obstacles could cause the trailer or the tractor to suddenly tilt. This is of special importance because loaded trailer's centre of gravity is higher (especially a high volume load), which reduces safety. Driving near ditches or channels is dangerous as there is a risk of the wheels sliding down the slope or the slope collapsing.
- Speed must be sufficiently reduced before making a turn or driving on an uneven road or a slope.
- When driving, avoid sharp turns especially on slopes.
- Please note that the braking distance of the tractor and trailer combination is substantially increased at higher speeds and loads.
- Monitor trailer's behaviour when travelling on an uneven terrain, and adjust driving speed to road conditions, slow down early enough when turning.

## ATTENTION



Prior to moving off with the trailer hitched, check whether:


- pins connecting the load box with the lower frame are secured against falling out,
- lug pins of wall extensions are secured against falling out.

Travel with a high-volume load by ruts, ditches roadside slopes etc. constitutes a great risk of overturning the trailer. Exercise particular caution.

## 4.6 UNLOADING

The trailer is equipped with the hydraulic tipping system and the hydraulic system for opening the rear wall (Pronar T663/4 SILO). Appropriate design of the frame and load box allows

tipping to side and rear. Tipping of the load box is controlled from driver's cab using external tractor hydraulic system manifold.

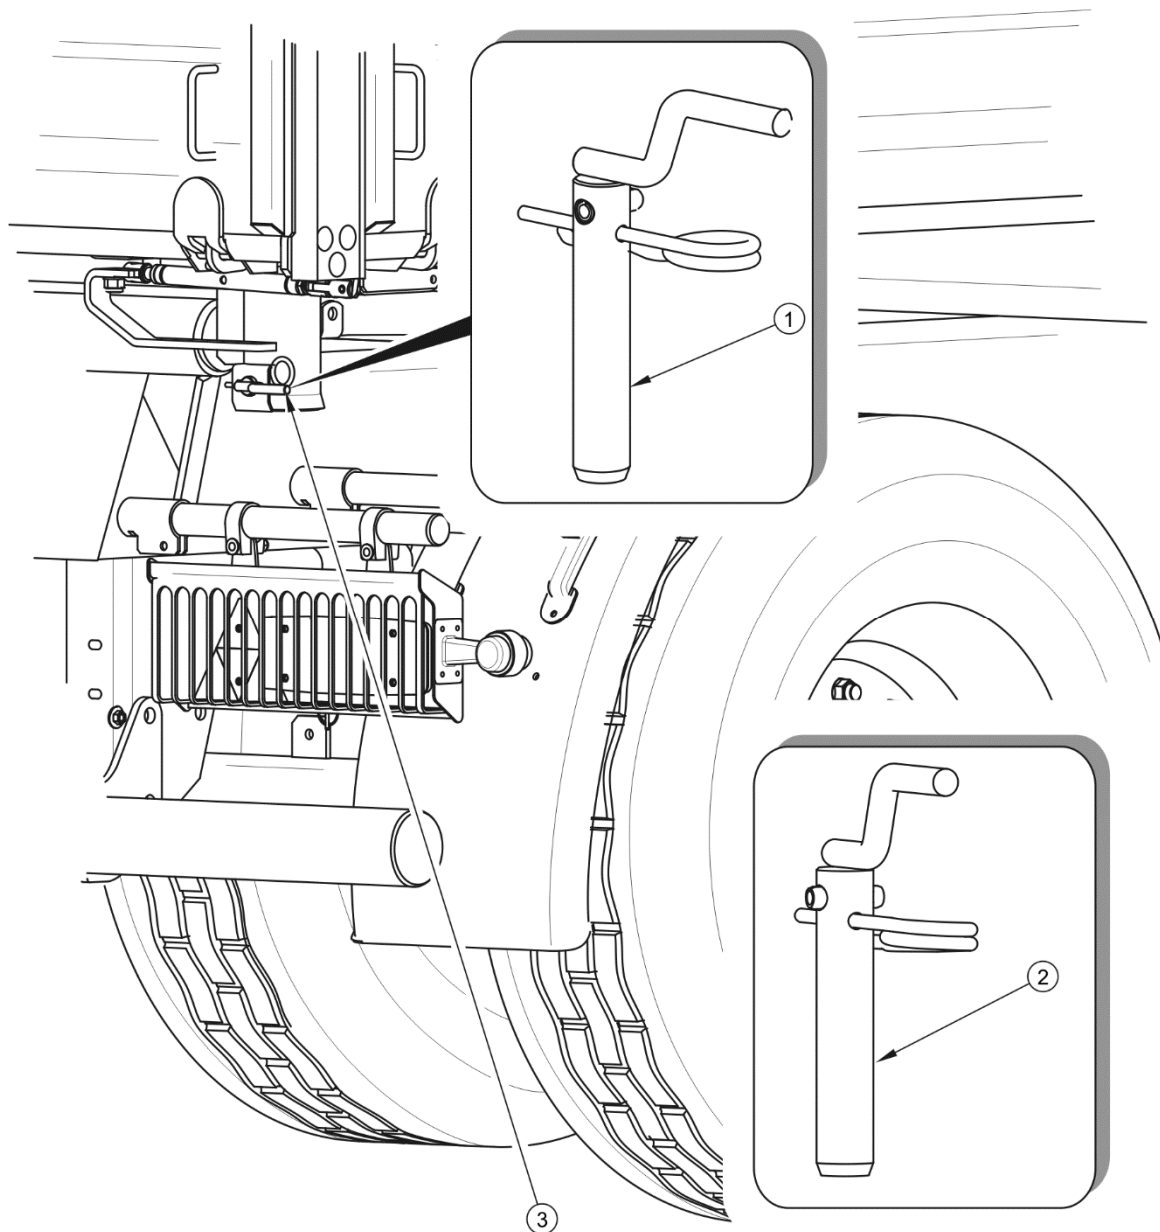

**FIGURE 4.4 Bolting of tipping pins**

*(1) tipping pin I, (2) tipping pin II, (3) tipping pin holder*

Unloading of the trailer is performed in the following sequence:

- ➔ tractor and trailer must be placed to drive forwards on flat and hard ground,
- ➔ immobilise tractor and trailer with parking brake; wheel chocks may be used to provide additional protection,

- ➡ if the load box tipping direction was not planned and set before, place tipping pins (1) and (2) on the unloading side and secure them properly - figure (4.4),
  - ⇒ pins and individual sockets are designed so it is impossible to place them on the opposite diagonal side of the load box, which would damage the trailer,
  - ⇒ holder (3) of correctly locked front pin is vertical (directed downward),
  - ⇒ holder (3) of correctly locked rear pin is directed sideways – figure (4.4),
- ➡ if the load box tipping direction was planned and set before, check the position of pin holders (3) – figure (4.4) and confirm that the wall extension lugs are secured (5) – figure (4.5),

## **DANGER**



**When opening the load box side wall locks take particular care because of the pressure applied by the load to the walls.**

**When using the trailer with additional set of wall extensions, pay attention to the trailer stability and risk of tipping over and monitor the trailer body movements on uneven ground.**

**When unloading, make certain that there is nobody near the load box.**


**To prevent injury, use protective gloves when opening/closing the wall bolts and locks.**

- ➡ open (unlock) the lower locks of the walls on the unloading side and, possibly, open the chute slide gate in the rear wall – figure (4.5),
  - ⇒ exercise caution while opening these components,
- ➡ open appropriate wall locks,
  - ⇒ exercise caution while opening these components,
- ➡ place the lever controlling the hydraulic tipping system circuits in position 1 -- tipping of the first trailer,
- ➡ initiate tipping of the load box by activating the hydraulic circuit supplying the hydraulic tipping system of the trailer.



- ➔ after unloading, lower load box, remove the residual material from the load box edges and walls,
- ➔ close and secure the walls and wall extensions or chute opening,
- ➔ before moving off, make sure that the tipping pins are in correct position and are protected with cotter pins.

If a second trailer is hitched, it should be unloaded only when the load box of the first trailer has been lowered and the hydraulic tipping system control lever is placed in position 2 -- tipping of the second trailer.

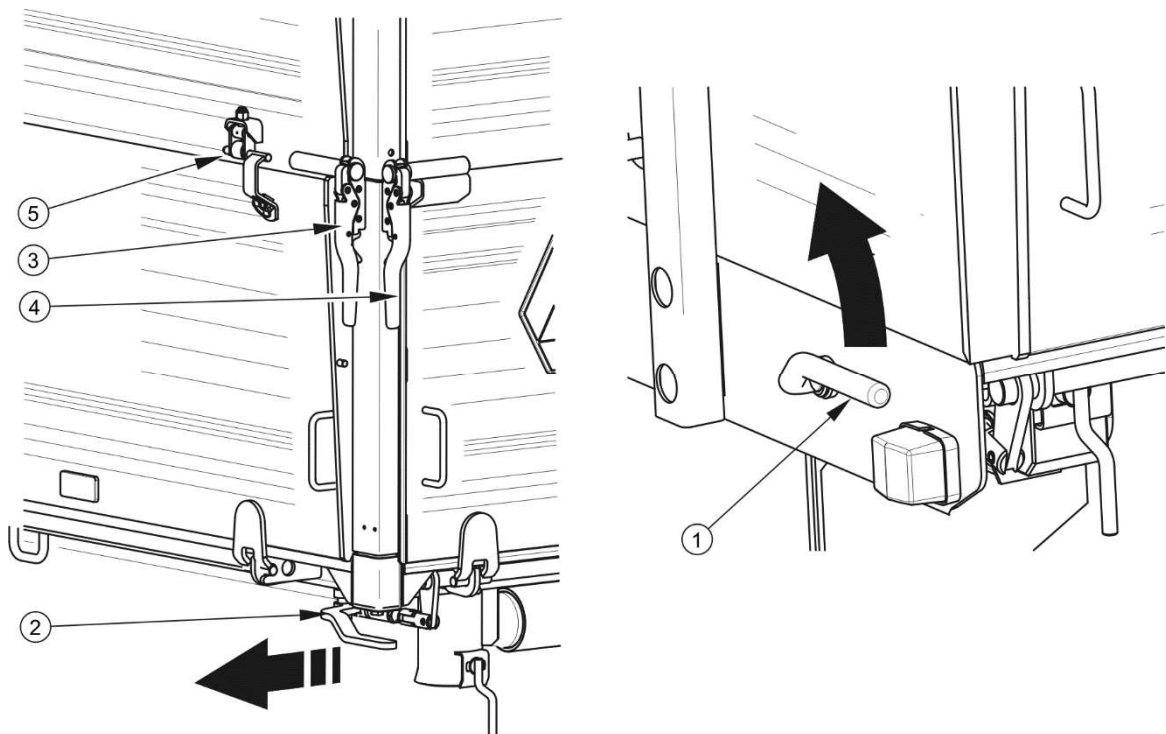


**FIGURE 4.5 Locks of load box walls and wall extensions**

*(1) left wall locking lever, (2) rear wall locking lever, (3) side wall lock (rear left), (4) rear wall lock (left), (5) wall extension lug*

The rear load box wall is equipped with the chute slide gate (1) – figure (4.6) and chute opening (2) (additional equipment) for unloading bulk materials. Chute design allows very accurate dosing of the material to packaging (sacks, boxes etc.).

The opening gap can be controlled using lever (3). In order to do that loosen the bolt interlocking slide gate (4), open the slide as required and lock again using the bolt. When unloading through the chute do not open wall locks or wall extension locks and tipping of the

load box must be done very slowly and without jerking. Raising the load box quickly will exert large pressure on the rear part of the load box due to displacement of the carried material and could compromise trailer's stability.

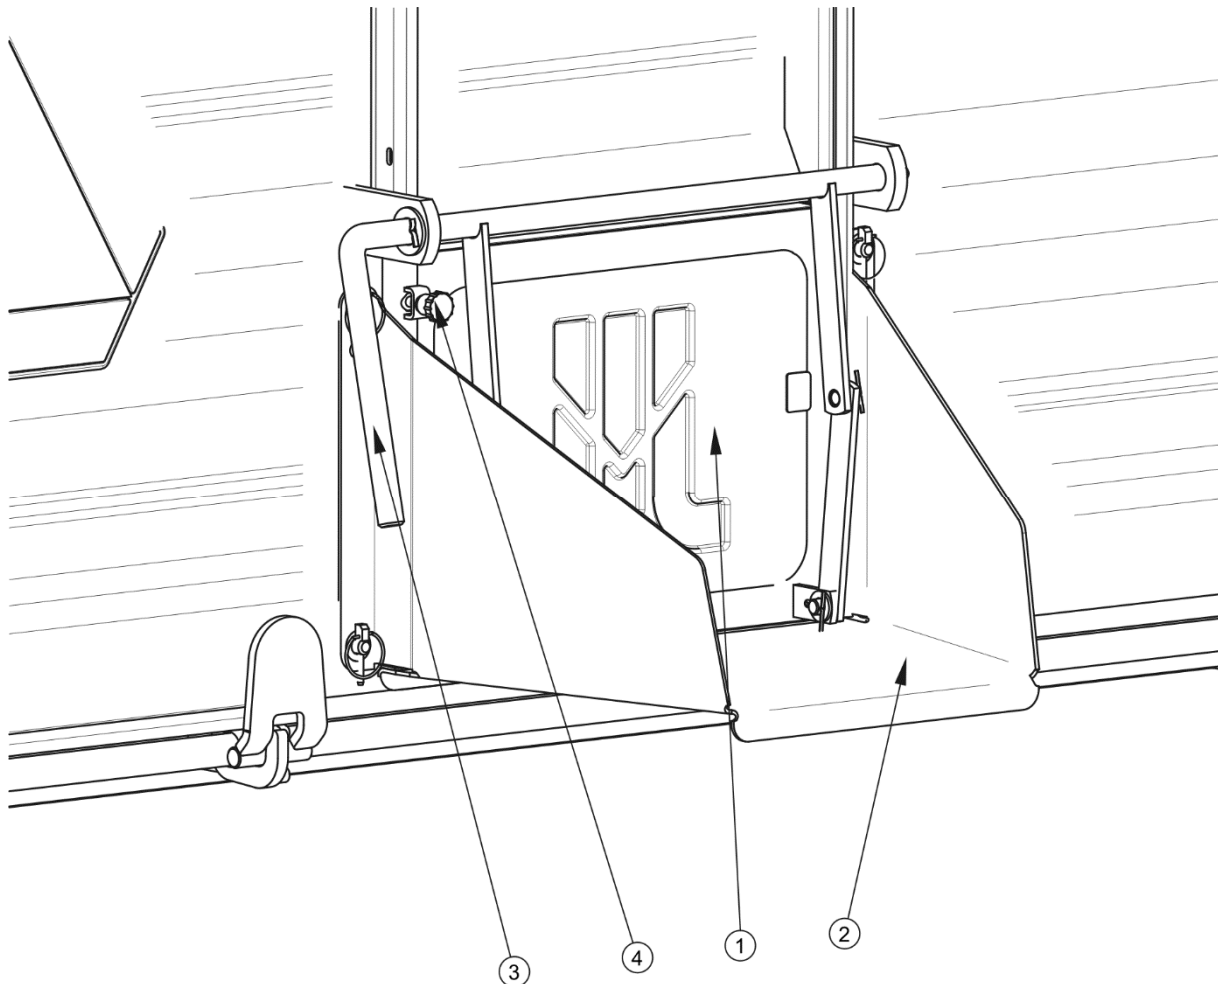

**FIGURE 4.6 Chute**

(1) chute slide gate, (2) chute, (3) lever, (4) locking bolt

While unloading bulky materials be especially careful. Do NOT tip load box on uneven or wet ground and move and jerk trailer during unloading. Bulky materials are normally difficult to unload therefore proceed cautiously and patiently. Careless operation of trailer may pose a danger to operators and bystanders can also cause damage to the machine.

**DANGER**

Tipping the load box must be done on hard and level ground.

Exercise particular caution while using the trailer equipped with the second set of wall extensions.

Use only original pins with a handle. Using third-party pins could damage the trailer. Tipping pins must be correctly interlocked.

Incorrectly secured tipping pins may cause serious damage to the trailer.

**ATTENTION**

It is not recommended to unload the load box by opening the walls downwards (when lower locks of the load box are locked). Load exerting pressure on the walls may hurt the operator or damage the trailer.

**TIP**

It is recommended to use wheel chocks in order to additionally secure the trailer during unloading.

When unloading high-volume materials, for example branches, the trailer's rear wall may be opened downwards. The help of a second person is recommended during unloading to avoid collision between the rear wall and the chassis components.

**DANGER**

When closing the rear chute gate or the walls take particular care to avoid crushing fingers.

Bulk materials loaded in excess of 1 m can be unloaded by tipping the load box to the rear only.

Ensure that during unloading nobody is near tipped load box or load material pouring out.

Tipping may only be performed when trailer is hitched to tractor.

Do NOT tip load box in strong gusty winds conditions.

Do NOT move off or drive when load box is raised.

## 4.7 PROPER USE AND MAINTENANCE OF TYRES

- When working on the tyres, chocks or other objects without sharp edges should be placed under the wheels of the trailer to prevent it from rolling. Wheels can be taken off the trailer axle only when the trailer is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Inspect tightness of nuts before the first use of trailer, after the first travel under load and then every 6 months of use or every 25,000 km. In the event of intensive work, check the nut tightening at least every 10,000 km. The inspection should be repeated individually if a wheel has been removed from the wheel axle.
- Regularly check and maintain correct air pressure in tyres according to Operator's Manual (especially if trailer is not used for a longer period).
- Air pressure in tyres should be also checked during the whole day of intensive work. Please note that higher temperatures could raise tyre pressure by as much as 1 bar. At high temperatures and pressure, reduce load or speed.
- Do not release air from warm tyres to adjust the pressure or the tyres will be underinflated when temperatures return to normal.
- Protect tyre valves using suitable caps to avoid soiling.
- Do not exceed the trailer's maximum design speed.
- When the trailer is operated all day, stop working for a minimum of one hour in the afternoon.
- Adhere to 30 minutes rest for cooling tyres after driving 75 km or after 150 minutes of continuous travel depending on which occurs first.
- Avoid potholes, sudden manoeuvres or high speeds when turning.

***SECTION***

**5**

---

**MAINTENANCE**

## 5.1 PRELIMINARY INFORMATION

When using the trailer, regular inspections of its technical condition are essential and the performance of maintenance procedures, which keep the machine in good technical condition. In connection with this the user of the trailer is obliged to perform all the maintenance and adjustment procedures defined by the Manufacturer.

Repairs during the warranty period may only be performed by authorised service points.

Detailed procedures and extent of activities which the user may perform by himself are described in this section. In the event of unauthorised repairs, changes to factory settings and other actions, which are not regarded as possible for the trailer operator to perform, the user shall invalidate the warranty.

## 5.2 MAINTENANCE OF BRAKES AND AXLES

### 5.2.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of axle and brakes elements should be entrusted to specialist establishments having the appropriate technology and qualifications for this type of work.

The responsibilities of the user are limited to:

- initial inspection of axle brakes,
- inspection and adjustment of slackness of axle bearings,
- mounting and dismounting wheel, inspection of wheel tightening,
- checking air pressure, evaluating technical condition of wheels and tyres,
- mechanical brakes adjustment,
- change of parking brake cable and adjustment of cable tension.

Procedures connected with:

- changing grease in axle bearings,
- changing bearings, hub seals,
- changing brake linings, repairing brake,


may be performed by specialist workshops.

**DANGER**

Do NOT use the trailer when brake system is unreliable.

**5.2.2 INITIAL INSPECTION OF AXLE BRAKES,**

After purchasing trailer, the user is responsible for general checking of brake system of trailer axle.

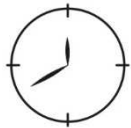


**Initial inspection of axle brakes must be conducted:**

- after first use,
- after first travel with load.

**Inspection procedures**

- ➔ Hitch trailer to tractor and place chocks under trailer wheel.
- ➔ Engage and release in turn the main brake and then the trailer parking brake.
  - ⇒ Main brake and parking brake should be engaged and released without great resistance and severity.
- ➔ Check means of securing cylinders and return springs.
- ➔ Check cylinders movement and correct return of piston to start position.
  - ⇒ The help of a second person is required, who shall engage trailer brake.
- ➔ Check if axle elements are in place, (cotter pins in castellated nuts, expansion rings etc.).
- ➔ Check hydraulic cylinders or pneumatic cylinders for tightness - compare sections 5.3.2 and 5.4.2.

### 5.2.3 CHECK WHEEL AXLE BEARINGS FOR SLACKNESS

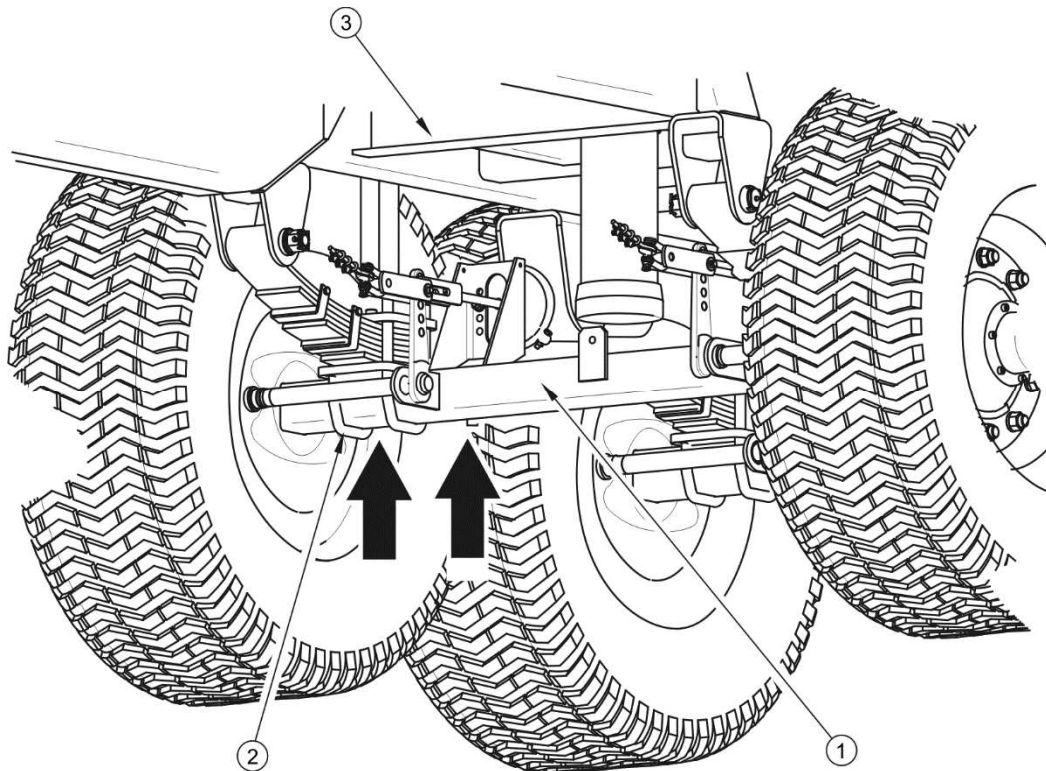

**FIGURE 5.1** Lifting jack support point

(1) wheel axle, (2) U bolt, (3) lower frame

#### TIP



If hub cover is damaged or missing, contamination and dampness enter the hub, which causes significantly faster wear of bearing and hub seals.

Bearing life is dependent on working conditions of trailer, loading, speed of travel and lubrication conditions.

#### Preparation procedures

- ➡ Hitch trailer to tractor, braking tractor with parking brake.
- ➡ Park tractor and trailer on hard level ground.
  - ⇒ Tractor must be placed to drive forward.
- ➡ Place securing chocks under one trailer wheel. Ensure that trailer shall not move during inspection.



- ➔ Raise the wheel (opposite to the side where chocks are placed).
  - ⇒ The lifting jack should be placed between U bolts (2) - figure (5.1) securing axle (1) to leaf springs, or as near as possible to leaf spring mounting. Recommended support points are marked with arrows. Lifting jack must be suitable for the weight of trailer.

**Checking wheel axle bearings for slackness:**

- after travelling the first 10,000 km,
- after intensive use of trailer,
- every six months use or every 25,000 km.

**Checking wheel axle bearings for slackness**

- ➔ Turning the wheel slowly in both directions check that movement is smooth and that the wheel rotates without excessive resistance.
- ➔ Turn the wheel so that it rotates very quickly, check that the bearing does not make any unusual sounds.
- ➔ Holding the wheel above and below, try to feel any slackness.
  - ⇒ You may use a lever placed under the wheel supporting the other end of the lever on the floor.
- ➔ Repeat the inspection procedure on the other wheels.

If slackness is felt, adjust bearings. Unusual sounds coming from bearing may be symptoms of excess wear, dirt or damage. In such an event the bearing, together with sealing ring, should be replaced with new parts, or cleaned and greased again.

**DANGER**

Before commencing work the user must read the instructions for lifting and adhere to the manufacturer's instructions.

The lifting jack must be stably supported by the ground and so must the axle.


Ensure that trailer shall not move during inspection of axle bearing slackness.

Check condition of hub cover, if necessary replace with a new cover. Inspection of bearing slackness may only be conducted, when the trailer is hitched to a tractor, and the load box is empty.

#### 5.2.4 ADJUSTMENT OF AXLE BEARING SLACKNESS

##### Preparation procedures

- ➔ Prepare tractor and trailer for adjustment procedures according to description provided in section 5.2.3.

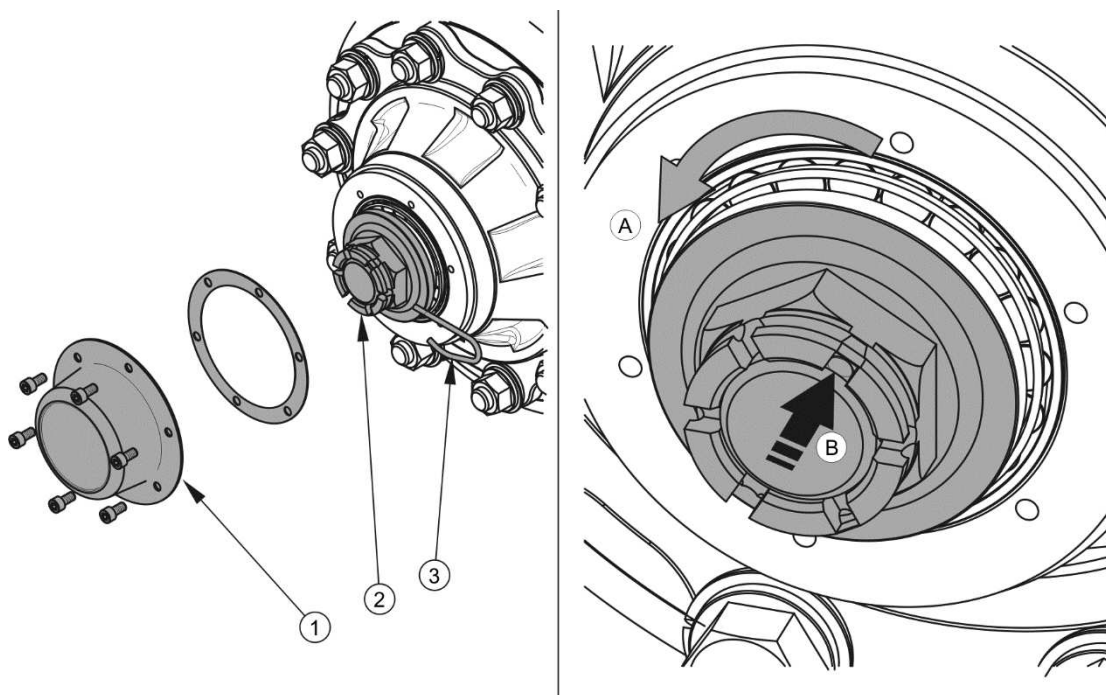

**FIGURE 5.2 Adjustment of axle bearings**

(1) hub cover, (2) castellated nut, (3) cotter pin

##### Adjustment of axle bearing slackness

- ➔ Take off hub cover (1), figure (5.2).
- ➔ Take out cotter pin (3) securing castellated nut (2).
- ➔ Tighten castellated nut in order to eliminate slackness.
  - ⇒ Wheel should rotate with insignificant resistance.

- ➔ Undo nut (not less than 1/3 rotation) to align the nearest thread groove with the opening in wheel axle pin. Wheel should rotate with insignificant resistance.
  - ⇒ Nut may not be excessively tightened. Do not apply excessive pressure because working conditions of the bearings may deteriorate.
- ➔ Secure castellated nut with cotter pin and mount the hub cap.
- ➔ Delicately tap hub cap with rubber or wooden hammer.

The wheel should turn smoothly without stiffness or detectable resistance not originating from abrasion of brake shoes in brake drum. Adjustment of bearing slackness may only be conducted when the trailer is hitched to tractor and the load box is empty.

**TIP**

If the wheel is dismantled, bearing slackness is easy to check and adjust.

### 5.2.5 MOUNTING AND DISMOUNTING WHEEL, INSPECTION OF WHEEL NUT TIGHTENING

#### Dismounting wheel

- ➔ Immobilise trailer with parking brake.
- ➔ Place chocks under the wheel that will not be dismantled.
- ➔ Ensure that trailer shall not move during wheel dismantling.
- ➔ Loosen wheel nuts according to sequence shown in figure (5.3).
- ➔ Place lifting jack and lift trailer.
- ➔ Dismount wheel.


#### Wheel mounting

- ➔ Clean axle pins and nuts of contamination.
  - ⇒ Do not grease thread of nuts and pins.
- ➔ Check condition of pins and nuts, if necessary replace them.

- ➔ Place wheel on hub, tighten nuts so that wheel rim adjoins hub exactly.
- ➔ Lower the trailer, tighten nuts according to recommended torque and given sequence.

**TIP**

Wheel nuts should be tightened using the torque of 270 Nm - M18x1.5 nuts.

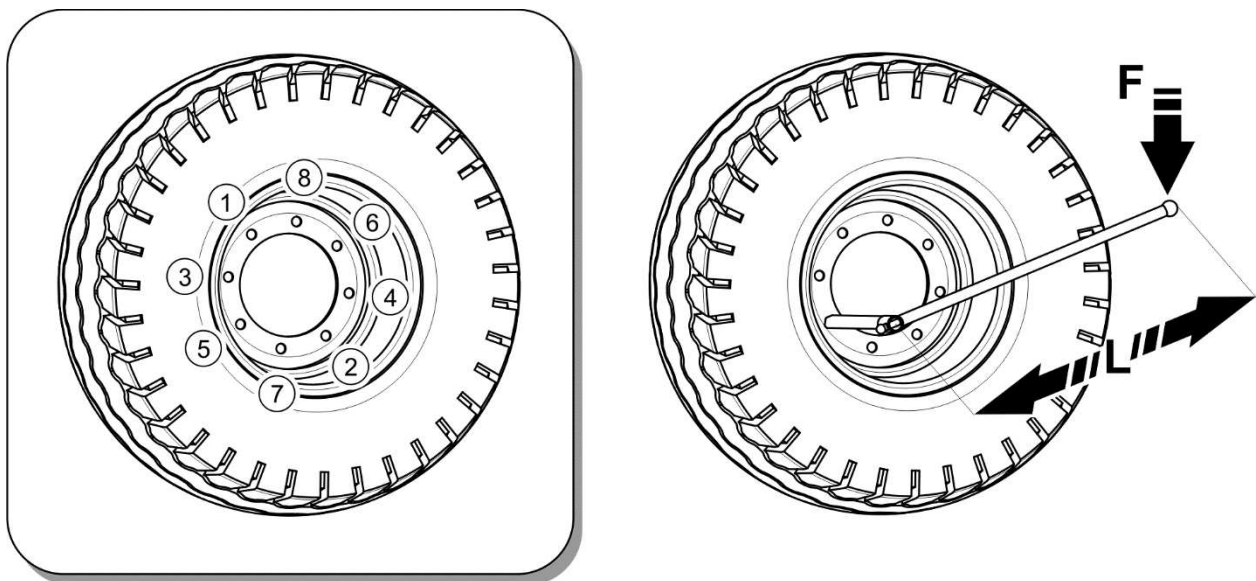

**FIGURE 5.3** Sequence of nut tightening

(1) - (6) sequence of nut tightening, (L) spanner length, (F) user weight

**Tightening nuts**

Nuts should be tightened gradually diagonally, (in several stages, until obtaining the required tightening torque) using a torque spanner. If a torque spanner is not available, one may use an ordinary spanner. The arm of the spanner (L) figure (5.3) should be selected according to the weight of the person (F) tightening the nut. Remember that this method of tightening is not as accurate as the use of a torque spanner.

**Checking wheel tightening:**

- after first use,
- after first travel with load,
- after travelling the first 10,000 km,
- every six months use or every 25,000 km.

In the event of intensive work check the nut tightening at least every 100 km. The above actions should be repeated individually if a wheel has been removed from the wheel axle.

**ATTENTION**

Axle nuts may not be tightened with impact wrench, because of danger of exceeding permissible tightening torque, the consequence of which may be breaking the thread connection or breaking off the hub pins.

The greatest precision is achieved using a torque spanner. Before commencing work, ensure that correct tightening torque value is set.

**TABLE 5.1 Spanner arm**

WHEEL TIGHTENING TORQUE	BODY WEIGHT (F)	ARM LENGTH (L)
[Nm]	[kg]	[m]
270	90	0.30
	77	0.35
	67	0.40
	60	0.45

### 5.2.6 CHECKING AIR PRESSURE IN TYRES, EVALUATING TECHNICAL CONDITION OF TYRES AND STEEL WHEELS

Air pressure in tyres should be checked each time after changing a spare wheel and at least once a month. In the event of intensive use, air pressure in tyres should be checked more frequently. During this time trailer must be unloaded. Checking should be done before travelling when tyres are not heated, or after an extended period of parking.

**TIP**

Tyre pressure values are specified in information decal, placed on wheel or on upper frame above trailer wheel.

**DANGER**

Damaged tyres or wheels may be the cause of a serious accident.

While checking pressure pay attention to technical condition of wheels and tyres. Look carefully at tyre sides and check the condition of tread.

In case of mechanical damage consult the nearest tyre service and check whether the tyre defect requires tyre replacement.

Wheels should be inspected with regard to distortion, breaking of material, breaking of welds, corrosion, especially in the area of welds and contact with tyre.

Proper technical condition and appropriate maintenance of wheels significantly extends the life of these components and ensures appropriate level of safety to trailer users.

**Checking air pressure in tyres and visual inspection of steel wheels:**

- every 1 month of use,
- if needed.

### 5.2.7 ADJUSTMENT OF MECHANICAL BRAKES

During trailer operation drum brake linings are subjected to wear. Piston stroke extends; after exceeding the limit value, the braking force declines.


Adjustment must be made when:

- piston stroke amounts to 2/3 of maximum stroke,
- expansion levers are not set in parallel to each other during braking,
- repairs are made to braking system.

Trailer wheels must brake simultaneously. *BRAKES ADJUSTMENT INVOLVES CHANGING THE POSITION OF THE EXPANDER ARM (1), FIGURE (5.4), in relation to expander shaft (2).*

#### Required maintenance activities

- ➔ Dismantle pin (3) fixing the cylinder fork (4) to expander arm (3).
- ➔ Mark position of expander arm (1) with regard to the shaft (2).
- ➔ Dismantle arm and set it in the appropriate position.
  - ⇒ in direction (A), if braking is too early,
  - ⇒ in direction (B), if breaking is too late.
- ➔ Repeat the process for the second arm.
- ➔ Replace the pin fixing the cylinder fork to expander arm.

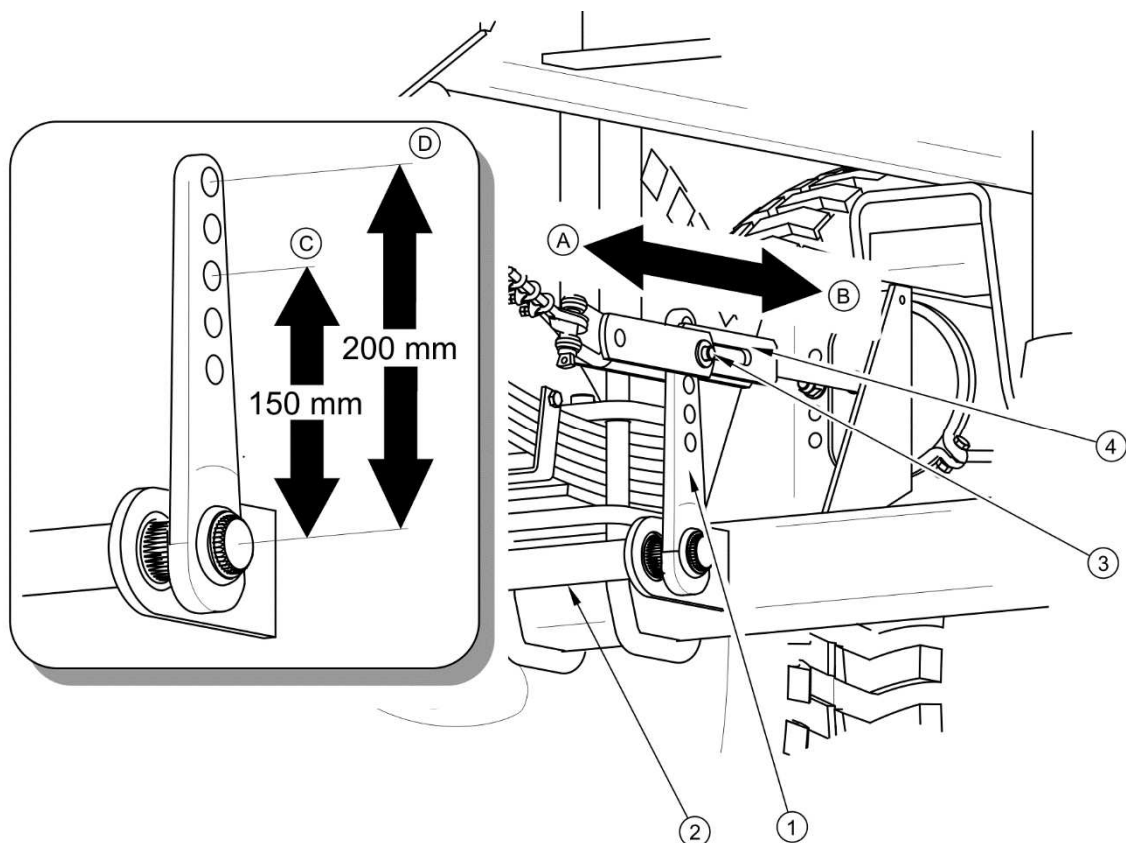

**FIGURE 5.4 Adjustment of axle mechanical brakes**

(1) expander arm, (2) expander shaft, (3) pin, (4) cylinder fork

Adjustment should be conducted separately for each wheel. Expander arm (1) should be moved by one notch in chosen direction. If the extent of cylinder action is still incorrect, move the lever again. After proper brake adjustment, at full braking, the expander arms should create the angle of 90° with the cylinder piston, and the stroke should amount to approximately half the length of the total stroke of the piston. After brake release expander arms may not be supported on any structural elements, because too little withdrawal of a piston ram may cause abrasion of brake shoes in drum and result in overheating trailer brakes. Expander arms must be positioned in parallel with regard to each other at full braking. If this is not so, adjust the position of the lever, which has the longer stroke.

**TABLE 5.2 POSITION OF PIN IN EXPANDER ARMS**

TYPE OF BRAKE SYSTEM	PIN POSITION FRONT AXLE [mm] (C)	PIN POSITION REAR AXLE [mm] (D)
Single conduit system	150	200
Double conduit system	150	200
Hydraulic system	150	200


### 5.2.8 CHANGE OF PARKING BRAKE CABLES AND ADJUSTMENT OF CABLE TENSION.

Proper operation of the parking brake is dependent on the effectiveness of the axle brake and the correct brake cables tension.

#### Replacing the parking brake cable

- ➡ Hitch the trailer to tractor. Park trailer and tractor on level surface.
- ➡ Place wheel chocks under trailer wheel.
- ➡ Fully unscrew the bolt of the brake crank mechanism (1),
- ➡ Dismantle shackles, remove pins of guide rollers (4),
- ➡ Unlock and remove crank mechanism pin (1),
- ➡ Loosen nuts of cable clamps (2).
- ➡ Dismantle cable (3).



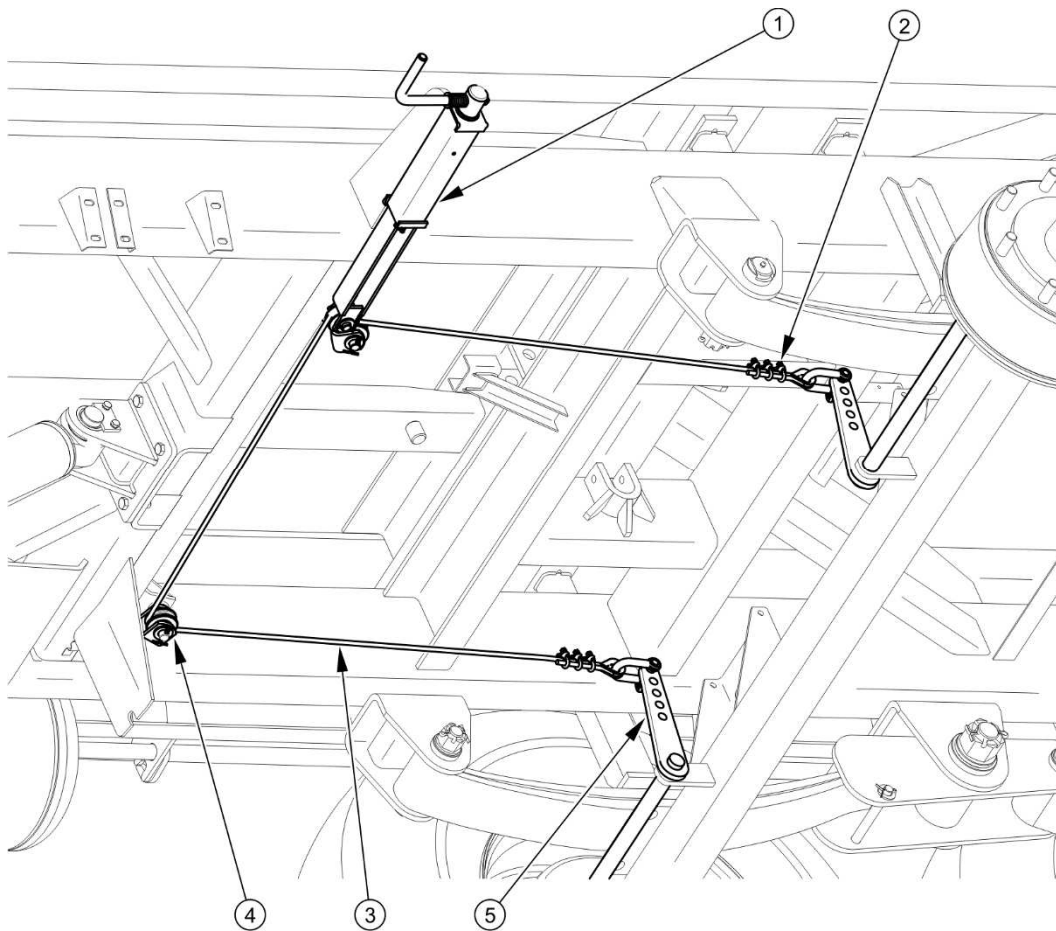


**FIGURE 5.5 Adjustment of parking brake cable tension**

(1) *brake crank mechanism*, (2) *bow clamp*, (3) *hand brake cable*, (4) *guide roller*, (5) *expander arm*

- ➔ Lubricate parking brake mechanism (1) and pins of cable guide rollers (4).
- ➔ Install a new cable.
  - ⇒ Parking brake cable must be fitted carefully.
  - ⇒ Thimbles and three clamps must be fitted at the ends of the cable.
  - ⇒ Clamps must be tightened. The distances between the clamps may not be less than 15 mm.
  - ⇒ Clamp jaws must be placed on the side of the load bearing cable - see figure (5.6).
  - ⇒ The first clamp should be placed directly on the thimble.
- ➔ Install bolts and new securing cotter pins.

- ➔ Adjust tension of parking brake cables.
- ➔ After first loading of the brake, check tension of brake cable. If necessary, correct the tension.

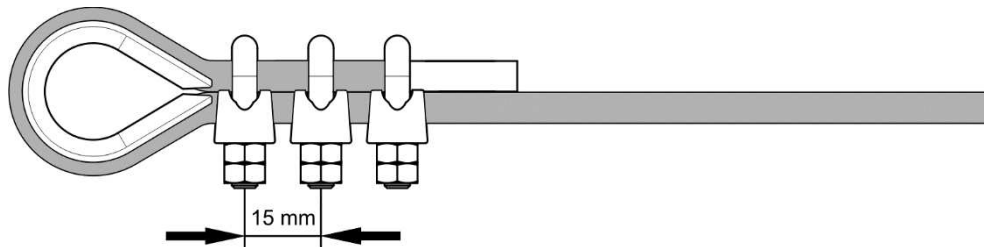

**FIGURE 5.6 Installing brake cable clamps**

#### **Adjustment of parking brake cable tension**

- ➔ Hitch the trailer to tractor. Park trailer and tractor on level surface.
- ➔ Place chocks under trailer wheel.
- ➔ Unscrew the brake bolt mechanism maximally (1) – figure (5.5), (anti clockwise).
- ➔ Loosen nuts of handbrake cable clamps (2).
- ➔ Tighten cable and tighten clamps.
  - ⇒ Length of parking brake cable should be so selected that at total release of working and parking brake the cable would be loose and hanging by 1 - 2 cm.

Adjustment of parking brake cable tension should be conducted in the event of:

- stretching of cable,
- loosening of parking brake cable clamps
- after adjustment of axle brakes,
- after repairs of axle brake system,
- after repairs in parking brake system.

Before commencing adjustment make certain that the main break is correctly regulated and is functioning properly.

**Checking and/or adjustment of parking brake:**

- every 12 months,
- if needed.

## 5.3 PNEUMATIC SYSTEM MAINTENANCE

### 5.3.1 PRELIMINARY INFORMATION

Work connected with repair, replacement or regeneration of system components (brake cylinders, conduits, control valve, braking force regulator, etc.) should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the operator connected with the pneumatic system include:

- checking tightness and visual inspection of the system,
- cleaning the air filter (filters),
- draining water from air tank,
- cleaning drain valve,
- cleaning and maintaining pneumatic conduit connections,

**DANGER**

Do NOT use the trailer when brake system is unreliable.

### 5.3.2 CHECKING AIR TIGHTNESS AND VISUAL INSPECTION OF PNEUMATIC SYSTEM

#### Checking air tightness of pneumatic system

- ➔ Hitch the trailer to tractor.
- ➔ Immobilise tractor and trailer with parking brake. Place chocks under trailer wheel.

- ➡ Start tractor in order to supplement air in trailer brake system tank.
  - ⇒ In single conduit systems air pressure should amount to approx. 5.8 bar.
  - ⇒ In double conduit systems air pressure should amount to approx. 8 bar.
- ➡ Turn off tractor engine.
- ➡ Check system components after releasing brake pedal in tractor.
  - ⇒ Give particular attention to conduit connections and brake cylinders.
- ➡ Repeat system check with depressed tractor brake pedal.
  - ⇒ The help of a second person is required.

In the event of the appearance of leaks, compressed air will escape at the places of damage, with a characteristic hiss. Lack of system tightness may be also detected by covering checked elements with washing fluid or other foaming preparations, which will not react aggressively with system components. It is recommended to supply preparations commercially available designed to facilitate detecting air leaks. Damaged components should be replaced or repaired. If leaks appear at connections then tighten the connections. If air continues to escape replace connection component or seal.

#### Check system tightness



- after travelling the first 1,000 km,
- each time after making repairs or changing system components,
- annually.

#### Visual assessment of system

During tightness inspection attention should additionally be given to technical condition and degree of cleanness of the system components. Contact of pneumatic conduit seals etc. with oil, grease, petrol etc. may cause damage and accelerate the ageing process. Bent, permanently deformed, cut or worn conduits should be replaced.

**Visual assessment of system**


- Conduct inspection of system at the same time as when checking tightness.

**ATTENTION**

Repair, exchange or regeneration of pneumatic system components may only be performed in a specialised workshop.

**5.3.3 CLEANING THE AIR FILTERS**

Depending on trailer working conditions, but not less than once in three months, take out and clean air filter elements, which are located in pneumatic system connection conduits. Filter elements are used many times and are not subject to change unless they are mechanically damaged.

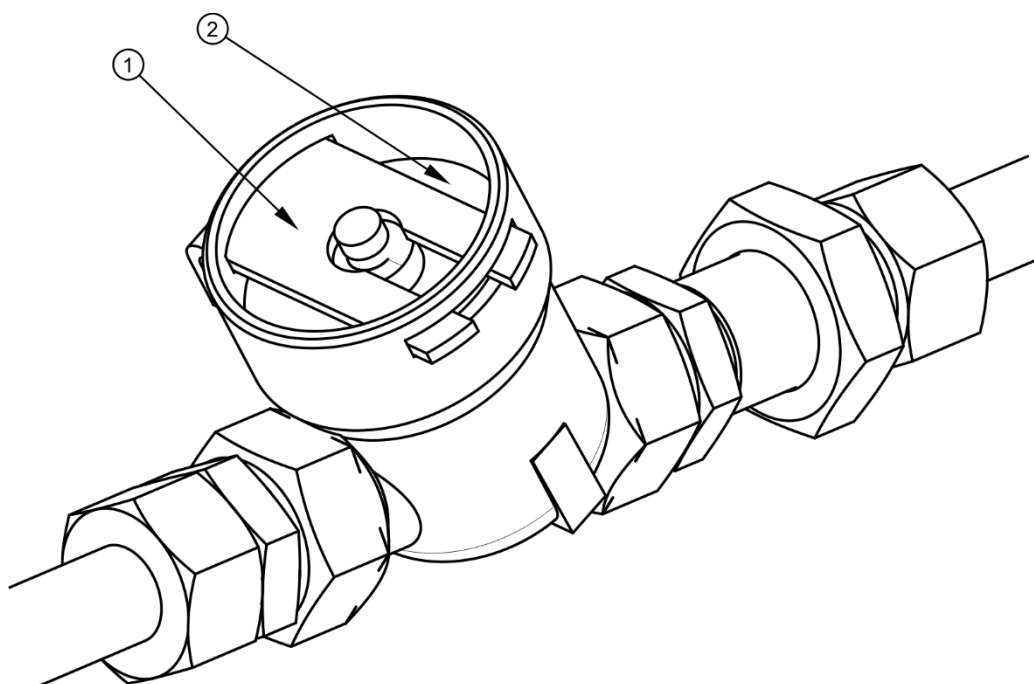

**FIGURE 5.7** Air filter

(1) securing slide lock, (2) air filter cover

### Required maintenance activities

- ➡ Reduce pressure in supply conduit.
  - ⇒ Pressure in conduit can be reduced by pressing the head of the pneumatic connection until resistance is felt.
- ➡ Slide out securing slide lock (1) – figure (5.7).
  - ⇒ Hold the filter cover (2) with the other hand. After removing slide lock, the cover is pushed off by the spring located in the filter housing.
- ➡ The filter element and the filter body should be carefully washed out and blown through with compressed air. Assembly should be done in reverse order.



#### **DANGER**

Before proceeding to dismantle filter, reduce pressure in supply conduit. While disengaging filter slide gate, hold cover with other hand. Stand away from filter cover vertical direction.



#### **Cleaning the air filter (filters):**


- every 3 months of use,

### 5.3.4 DRAINING WATER FROM AIR TANK

#### Required maintenance activities

- ➡ Open out drain valve (1) placed in lower part of tank (2) – the tank is placed on brackets of right longitudinal frame of lower frame.
  - ⇒ The compressed air in the tank causes the removal of water to the exterior.
- ➡ Released valve stem should automatically close and stop flow of air from the tank.

- ⇒ If the valve stem resists returning to its position, then the whole drain valve must be unscrewed and cleaned or replaced (if it is damaged) - see section 5.3.5.

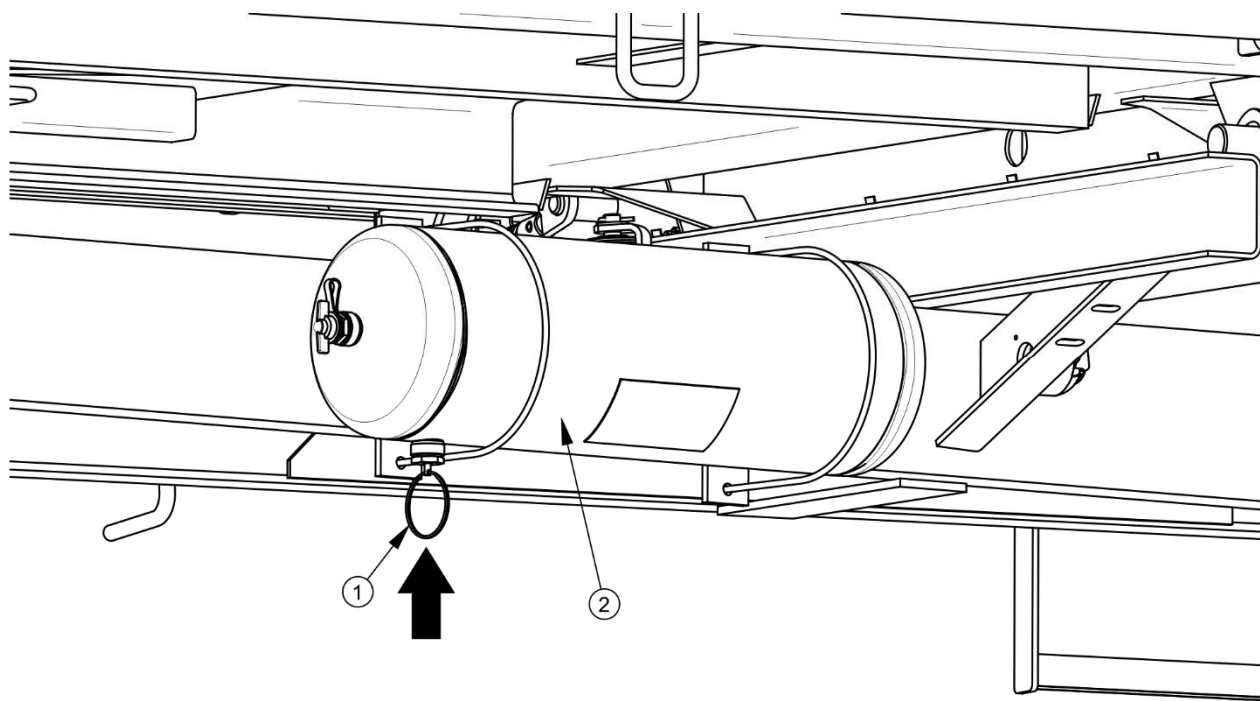

**FIGURE 5.8** Draining water from air tank

(1) drain valve, (2) air tank



**Draining water from air tank:**

- every seven days of use.

### 5.3.5 CLEANING THE DRAIN VALVE

#### Required maintenance activities

- ➔ Completely reduce pressure in air tank.
  - ⇒ Reduction of pressure in tank is achieved by tilting the drain valve stem.
- ➔ Unscrew valve.
- ➔ Clean valve, blow with compressed air.

- ➡ Change copper seal.
- ➡ Screw in valve, fill air tank, and check tank tightness.

**DANGER**

Release air from tank before dismantling drain valve.

**Cleaning valve:**

- every 12 months (before winter period).

### 5.3.6 CLEANING AND MAINTAINING PNEUMATIC CONDUIT CONNECTIONS AND PNEUMATIC SOCKETS

**DANGER**

Unreliable and dirty trailer connections may cause unreliability and faulty functioning of brake system.

Damaged connection body or connection sockets to second trailer should be replaced. In event of damage to cover or seal, change these elements for new reliable elements. Contact of pneumatic connector seals with oils, grease, petrol etc. may cause damage and accelerate ageing process.

**Inspecting trailer connections:**


- connection should be inspected every time before connecting trailer to tractor or second trailer.

If the trailer is unhitched from the tractor, connections should be protected by cover or placed in their designated socket. Before the winter period it is recommended to preserve the seal with special preparations (e.g. silicon grease for rubber elements).



Each time before connection of the machine inspect technical condition and cleanness of contacts and sockets in tractor. If necessary clean or repair tractor socket.

### 5.3.7 REPLACEMENT OF PNEUMATIC CONDUIT

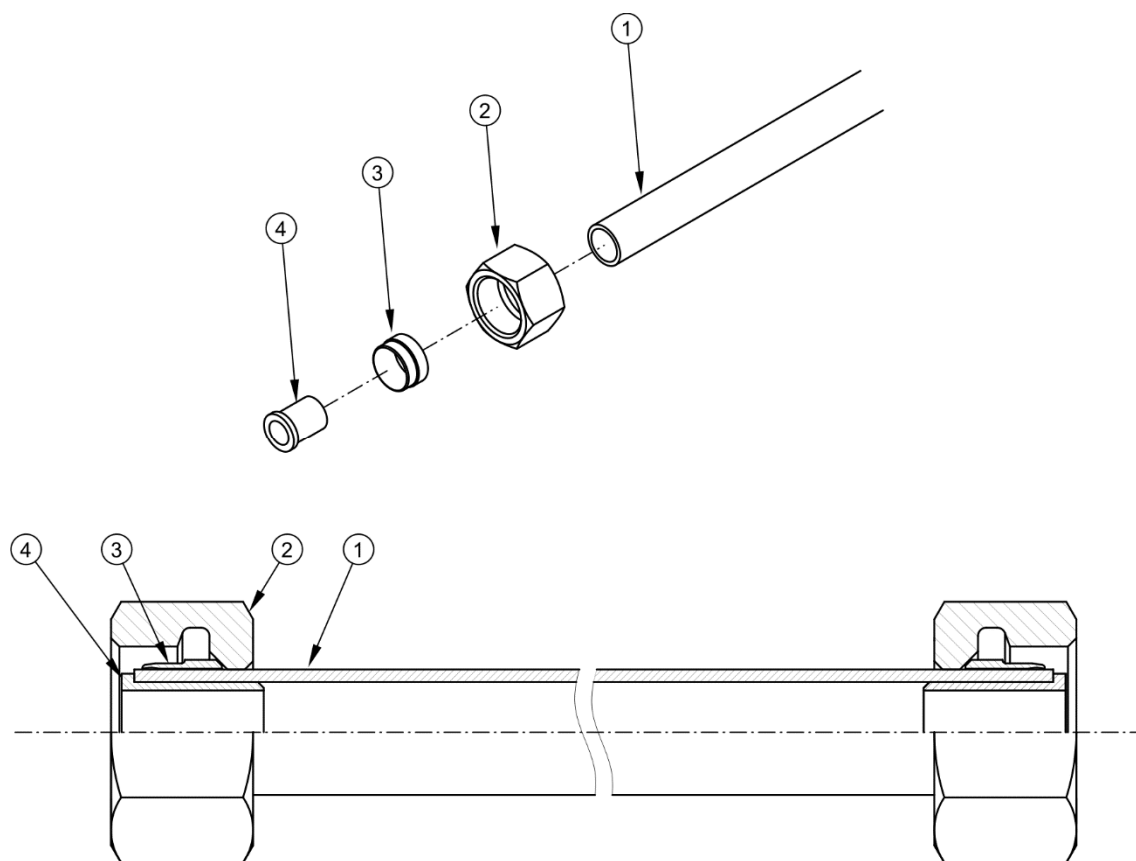

**FIGURE 5.9 Design of pneumatic conduit**

(1) pneumatic conduit, (2) connecting nut (3) clamping ring, (4) reinforcing sleeve

Pneumatic conduits should be replaced when permanently deformed, cut or frayed.

#### **Required service actions:**

- ➔ Reduce pressure in the system.
  - ⇒ Reduction of pressure is achieved by tilting the drain valve mandrel.
- ➔ Remove the pneumatic conduit by loosening the nut (2).
- ➔ Install a new conduit.
  - ⇒ The conduit interior should be clean.

- ⇒ The ends of the conduit (1) must be cut exactly at right angles.
  - ⇒ Clamping ring (3) should be fitted according to figure (5.9).
  - ⇒ Reinforcing sleeve (4) of the conduit must be thoroughly depressed.
- ➡ Check tightness of connections in accordance with section (5.3.2).

## 5.4 HYDRAULIC SYSTEM MAINTENANCE

### 5.4.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of hydraulic system components (tipping cylinder, valves etc.) should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The duties of the operator connected with the hydraulic system include:

- checking tightness and visual inspection of the system,
- checking technical condition of hydraulic connections.

#### **DANGER**



**Do NOT tip trailer with unreliable hydraulic tipping system.**

**Do not use the trailer if the support hydraulic system is out of order.**

**Do NOT tip trailer with unreliable hydraulic system of the rear wall.**

**Do NOT use the trailer if hydraulic brake system is unreliable.**

### 5.4.2 CHECKING HYDRAULIC SYSTEM TIGHTNESS

#### **Required maintenance activities**

- ➡ Hitch the trailer to tractor.
- ➡ Connect all hydraulic system conduits according to maintenance instructions.
- ➡ Clean fittings and cylinders (cylinders for tipping, support, rear wall and possibly hydraulic brake cylinders).
- ➡ Conduct test tipping of load box sideways and backwards.
- ➡ Open and close the rear wall several times (663/4 SILO),

- ➔ Press tractor brake pedal several times
  - ⇒ If trailer is equipped with hydraulic brake system.
- ➔ Check cylinders and hydraulic conduits for tightness.

If oil is found on hydraulic cylinder body, check origin of leak. Inspect hydraulic seals when hydraulic cylinder is completely extended. Minimum leaks are permissible with symptoms of "sweating", however in the event of noticing leaks in the form of "droplets" stop using the trailer until faults are remedied. If unreliability is evident in brake cylinders do NOT use trailer with damaged system until faults are remedied.

**Checking tightness:**

- after the first week of use,
- every 12 months of use.

### 5.4.3 CHECKING TECHNICAL CONDITION OF HYDRAULIC COUPLERS AND SOCKETS.

Hydraulic couplers and sockets designed for connection with second trailer must be in good working condition and kept clean. Each time before connecting check if sockets in tractor or connections of second trailer are maintained in good working condition. Tractor and trailer hydraulic systems are sensitive to the presence of permanent contamination, which may cause damage to precision system components (contamination may cause scratching of hydraulic valves, abrasion of piston surfaces etc.)

**Inspection of hydraulic couplers and sockets:**

- each time before connecting trailer to tractor or before connecting the second trailer.

### 5.4.4 REPLACEMENT OF HYDRAULIC CONDUITS

Rubber hydraulic conduits must be replaced every 4 years regardless of their technical condition. This should be entrusted to specialised workshops.

**Replacement of hydraulic conduits:**

- every 4 years,

## 5.5 MAINTENANCE OF ELECTRICAL SYSTEM AND WARNING ELEMENTS

### 5.5.1 PRELIMINARY INFORMATION

Work connected with the repair, change or regeneration of electrical system components should be entrusted to specialist establishments, having the appropriate technology and qualifications for this type of work.

The responsibilities of the user are limited to:

- technical inspection of electrical system and reflectors,
- changing bulbs

**ATTENTION**

Do NOT travel with out of order lighting system. Damaged lamp lenses, and burned-out bulbs must be replaced immediately before travelling. Lost or damaged reflective lights must be replaced.

### Required maintenance activities

- ➔ Connect trailer to tractor with appropriate connection lead.
  - ⇒ Check if the connection lead is reliable. Check connection sockets in tractor and trailer.
- ➔ Check completeness and technical condition of trailer lights.
- ➔ Check completeness of all reflectors.
- ➔ Check correct mounting of the slow-moving vehicle warning sign holder.
- ➔ Before driving on to public road check that the tractor is equipped with a warning reflective triangle.



**Checking technical condition of electrical system:**

- each time while connecting the trailer.



### TIP

Before driving away make certain that all lamps and reflective lights are clean.

## 5.5.2 REPLACEMENT OF BULBS

Compatible bulbs are shown in table (5.3). All light lenses are secured by screws and it is not necessary to dismantle whole lamp or trailer subassemblies.

**TABLE 5.3 List of bulbs**

LAMP	LAMP TYPE	BULB / QUANTITY IN 1 LAMP	NUMBER OF LAMPS
Rear left lamp assembly	WE 549L	R10W / 1 pc. P21W / 2 pcs.	1
Rear right lamp assembly	WE 549P	R10W / 1 pc. P21W / 2 pcs.	1
Licence plate light	LT-120	C5W / 1 pc.	2
Front parking light	LO-110PP	C5W / 1 pc.	2
Rear clearance light	J.K- 1.6	R5W / 1 pc.	2

## 5.6 TRAILER LUBRICATION

Trailer lubrication should be performed with the aid of a manually or foot operated grease gun, filled recommended grease. Before commencing work insofar as is possible remove old grease and other contamination. Remove and wipe off excess oil or grease.

Parts that should be lubricated with machine oil should be wiped with dry clean cloth and then a small quantity of oil should be applied to surfaces (using oil can or brush). Wipe off excess oil.

Change of grease in hub bearings should be entrusted to specialised service points, equipped with the appropriate tools. According to the recommendations of the axle Manufacturer, dismantle the entire hub, remove the bearing and individual sealing rings. After careful washing and inspection, mount lubricated elements. If necessary, bearing and seals should be replaced with new parts. Lubrication of axle bearings shall be performed at least once in 2 years or every 50,000 km. In the event of intensive use, lubrication should be performed more frequently.

Empty grease or oil containers should be disposed of according to the recommendations of the lubricant Manufacturer.

**TABLE 5.4 Trailer lubrication schedule**

ITEM	LUBRICATION POINT	NUMBER OF LUBRICATION POINTS	TYPE OF GREASE	FREQUENCY
1	Hub bearing	4	A	24M
2	Drawbar eye	1	B	14D
3	Expander shaft sleeve	4	A	3M
4	Sockets of tipping cylinder and cylinder suspension	4	B	1M
5	Tipping cylinder ball bearing <sup>(2)</sup>	1	B	3M
6	Parking brake mechanism	1	A	6M
7	Parking brake guide roller pins	2	A	6M
8	Articulated joints and sockets for installation of load box.	4	B	2M
9	Wall extension lugs	10 (16) <sup>(1)</sup>	A	1M

ITEM	LUBRICATION POINT	NUMBER OF LUBRICATION POINTS	TYPE OF GREASE	FREQUENCY
10	Linking cable release mechanism lever pin	4 (6) <sup>(1)</sup>	C	6M
11	Chute guides	2	C	1M
12	Chute string pins	6	C	1M
13	Wall pins and locks	8 (12) <sup>(1)</sup>	A	1M
14	Shear type support	1	B	3M
15	Shear type support cylinder bearings	2	B	3M
16	Leaf spring sliding surface	4	B	6M
17	Leaf spring	4	B	6M
18	Rocker arm pin	2	B	3M
19	Leaf spring pin	4	B	3M
20	Pin of wall guy cable mechanism <sup>(2)</sup>	2	A	2M
21	SILO attachment rotation pin <sup>(1)</sup>	2	B	3M
22	SILO attachment cylinder bearing <sup>(1)</sup>	2	B	3M
23	SILO attachment lock pin <sup>(1)</sup>	2	A	2M
24	SILO attachment locking pin <sup>(1)</sup>	2	A	2M

ITEM	LUBRICATION POINT	NUMBER OF LUBRICATION POINTS	TYPE OF GREASE	FREQUENCY
25	Side wall locking lever	2	A	6M

Lubrication periods – M months, D – days

<sup>(1)</sup> – PRONAR 663/1 SILO

<sup>(2)</sup> – not shown in figure

**TABLE 5.5 Recommended lubricants**

MARKING ACC. TO TAB. (5.4)	DESCRIPTION
A	machine general-purpose grease (lithium, alkaline),
B	permanent grease for heavily loaded elements with addition of MOS <sub>2</sub> or graphite
C	ordinary machine oil, silicon grease in aerosol





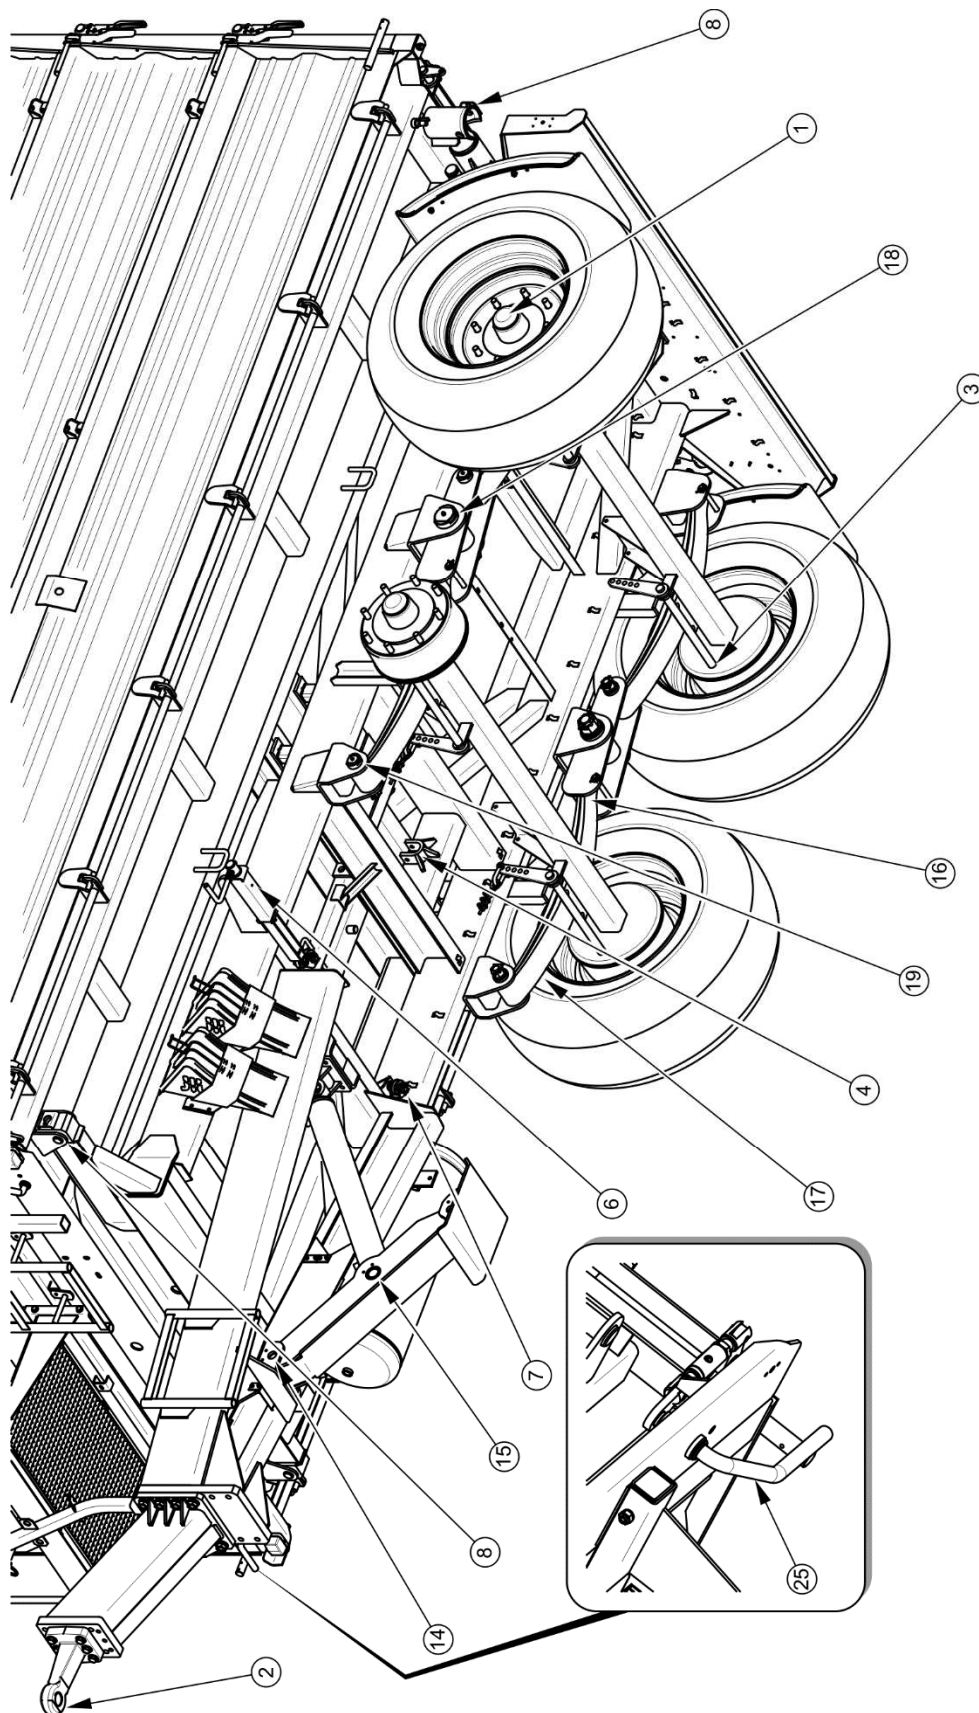


FIGURE 5.10 Trailer's lubrication points, part 1

**FIGURE 5.11** Trailer's lubrication points, part 2

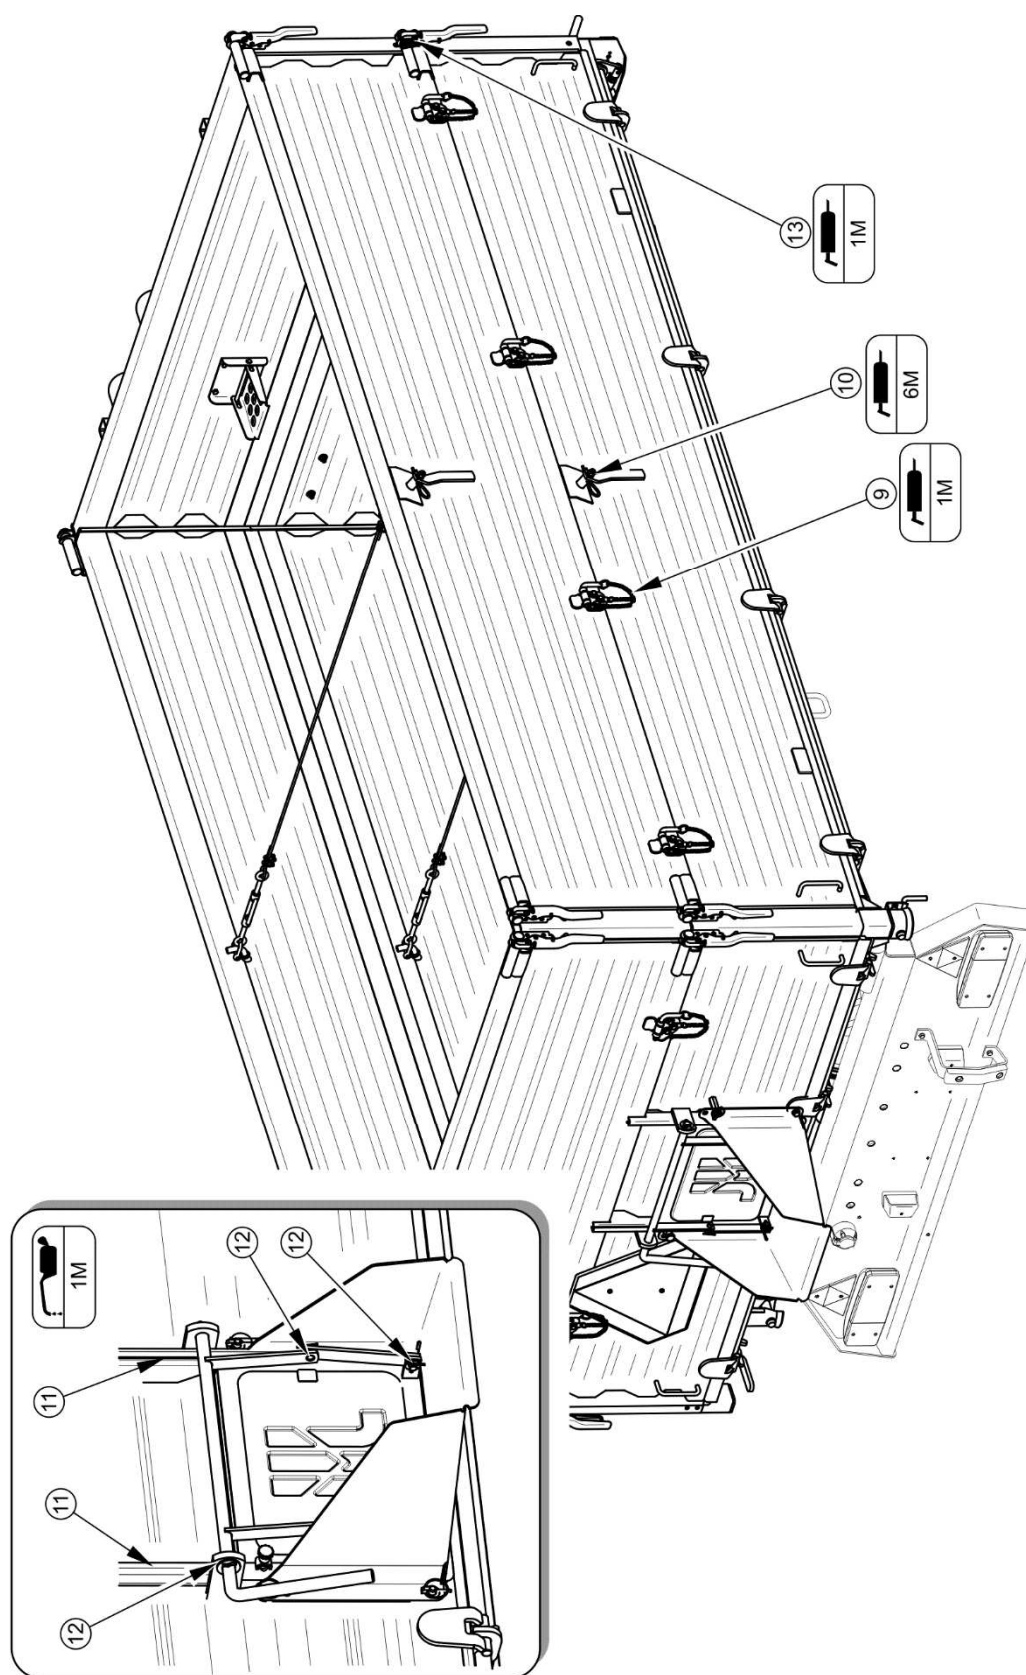

**FIGURE 5.12** Trailer's lubrication points, part 3

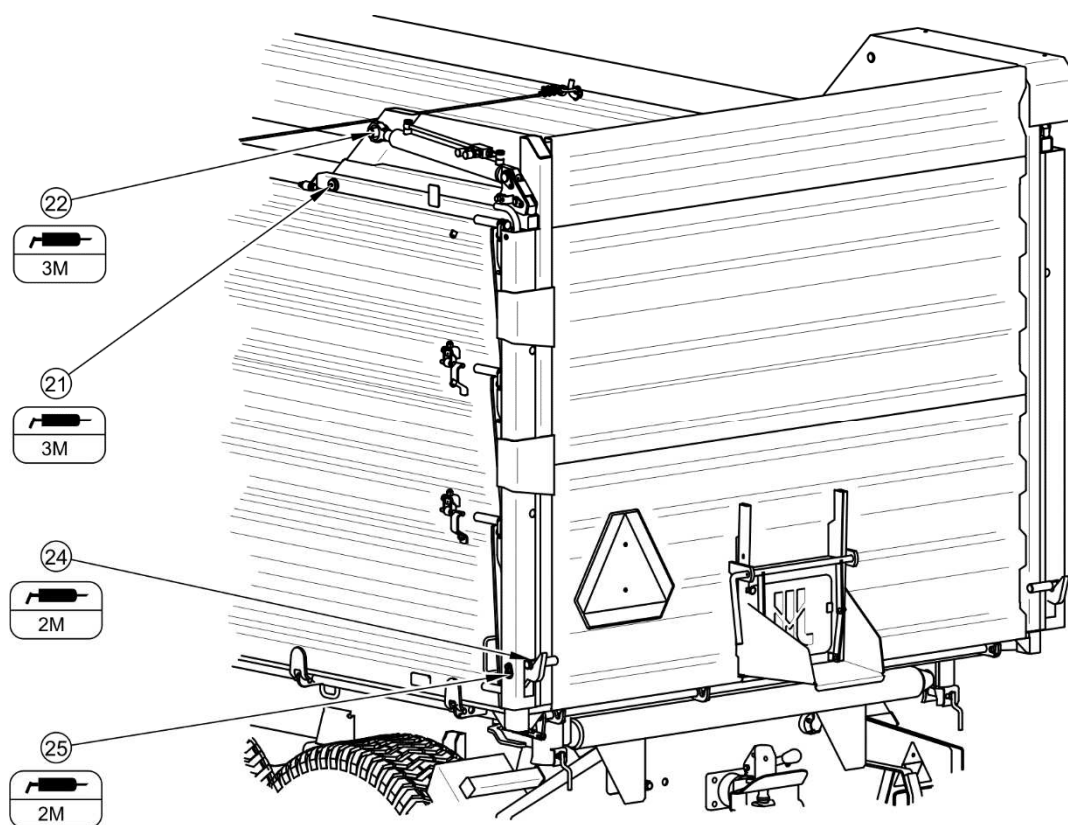

During trailer operation, the user is obliged to observe lubrication instructions according to attached lubrication schedule.

## 5.7 CONSUMABLES

### 5.7.1 HYDRAULIC OIL

Always adhere to the principle that the oil in the trailer hydraulic system and in the tractor hydraulic system are of the same type. In the event of application of different types of oil make certain that both hydraulic substances may be mixed together. Application of different oil types may cause damage to trailer or tractor. In a new machine, the hydraulic system is filled with L HL32 Lotos hydraulic oil.

**TABLE 5.6 L-HL 32 Lotos hydraulic oil characteristics**

ITEM	NAME	UNIT	VALUE
1	ISO 3448VG viscosity classification	-	32
2	Kinematic viscosity at 40°C	mm <sup>2</sup> /s	28.8 – 35.2
3	ISO 6743/99 quality classification	-	HL
4	DIN 51502 quality classification	-	HL
5	Flash-point	C	230

If it is necessary to change hydraulic oil for another oil, check the recommendations of the oil Manufacturer very carefully. If it is recommended to flush the system with the appropriate preparation, then comply with these recommendations. Attention should be given, so that chemical substances used for this purpose do not damage the materials of the hydraulic system. During normal trailer use change of hydraulic oil is not necessary, but if required, this operation should be entrusted to a specialist service point.

Because of its composition, the oil is not classified as a dangerous substance, however long-term action on the skin or eyes may cause irritation. In the event of contact of oil with skin wash the place of contact with water and soap. Do NOT apply organic solvents (petrol, kerosene). Contaminated clothing should be changed to prevent access of oil to skin. In the event of contact of oil with eye, rinse with large quantity of water and in the event of the occurrence of irritation consult a doctor. Hydraulic oil in normal conditions is not harmful to the respiratory tract. A hazard only occurs when oil is strongly atomised (oil vapour), or in the case of fire during which toxic compounds may be released. Oil fires should be quenched with the use of carbon dioxide, foam or extinguisher steam. Do not use water to quench oil fires.

### 5.7.2 LUBRICANTS

For parts under great load it is recommended to apply lithium grease with molybdenum disulphide (MOS<sub>2</sub>) or graphite additive. In the case of less loaded sub-assemblies the application of general purpose machine greases is recommended, which contain anticorrosion additive and have significant resistance to being washed away by water. Aerosol preparations (silicon greases and anticorrosive-lubricating substances) should have similar characteristics.

Before starting to use greases acquaint oneself with the content of the information leaflet for the chosen product. Particularly relevant are safety rules and handling procedures for a given lubricant as well as waste disposal procedure (used containers, contaminated rags etc.). Information leaflet (material safety data sheet) should be kept together with grease.

## 5.8 CLEANING THE TRAILER

Trailer should be cleaned depending on requirements and before longer idle periods (e.g. before winter period). Before using pressure washer the user is obliged to acquaint himself with the operating principles and recommendations concerning safe use of this equipment.

### Trailer cleaning guidelines

- Before washing trailer open all sides and extensions. Carefully clean load remains from the load box (sweep out or blow out with compressed air), especially where sides and extensions join and.
- To clean the trailer, use only clean running water or water with a cleaning detergent additive with neutral pH.
- Using pressure washer increases washing effectiveness, but particular care must be taken during work. During washing, washer nozzle may not be closer than 50 cm from the surface being cleaned.
- Water temperature shall not exceed 55°C.
- Do not direct water stream directly at system elements and equipment of the trailer i.e. control valve, braking force regulator, brake cylinders, pneumatic, electric and hydraulic plugs, lights, electrical connections, information and warning decals, identification plate, conduit connections and lubrication points etc. Great water jet pressure may damage these elements.
- For cleaning and maintenance of plastic coated surfaces it is recommended to use clean water or special preparations designed for this purpose.
- Do not apply organic solvents, preparations of unknown origin or other substances, which may cause damage to lacquered, rubber or plastic surfaces. In the event of doubt it is recommended to make a test on an unseen surface area.

- Surfaces smeared with oil or grease should be cleaned by application of benzene or other degreasing agents and then washed with clean water with added detergent. Comply with recommendations of the Manufacturer of cleaning agents.

**DANGER**

Carefully read the instructions for application of detergents and maintenance preparations.

While washing with detergents wear appropriate protective clothing and goggles protecting against splashing.


- Detergents should be kept in original containers, optionally in replacement containers, but very clearly marked. Preparations may not be stored in food and drink containers.
- Ensure cleanliness of elastic conduits and seals. The plastic from which these elements are made may be susceptible to organic substances and some detergents. As a result of long-term reaction of some substances, the ageing process may be accelerated and risk of damage increased. Rubber elements should be maintained with the aid of special preparations after previous thorough washing.
- After completed washing wait until the trailer is dry and then grease all inspection points according to recommendations. Remove excess oil or grease with a dry cloth.
- Observe environmental protection principles and wash trailer in a place designed for this purpose.
- Washing and drying of the trailer must take place at temperatures above 0°C.
- After washing and drying, trailer should be greased at all control points regardless of last lubrication period.

## 5.9 STORAGE

- Trailer should be kept in a closed or roofed building.
- If the machine will not be used for a long time, it is essential to protect it from adverse weather, especially rust and accelerated tyre deterioration. During this time the machine must be unloaded. Trailer should be very carefully washed and dried.
- Corroded places should be cleaned of rust, degreased and protected using undercoat paint and then painted with surface paint according to colour scheme.
- In the event of prolonged work stoppage, it is essential to lubricate all elements regardless of the date of the last lubrication.
- Wheel rims and tyres should be carefully washed and dried. During longer storage of unused trailer it is recommended that every 2 to 3 weeks the machine may be moved a bit so that the place of contact of tyres with ground is changed. The tyres will not be deformed and maintain proper geometry. Also tyre pressure should be inspected from time to time, and if necessary pressure should be increased to appropriate value.

## 5.10 TIGHTENING TORQUE FOR NUT AND BOLT CONNECTIONS

Unless other tightening parameters are given, during maintenance repair work apply appropriate torque to tighten nut and bolt connections. Recommended tightening torque for the most frequently used nut and bolt connections are given in table below. Given values apply to non-lubricated steel bolts.

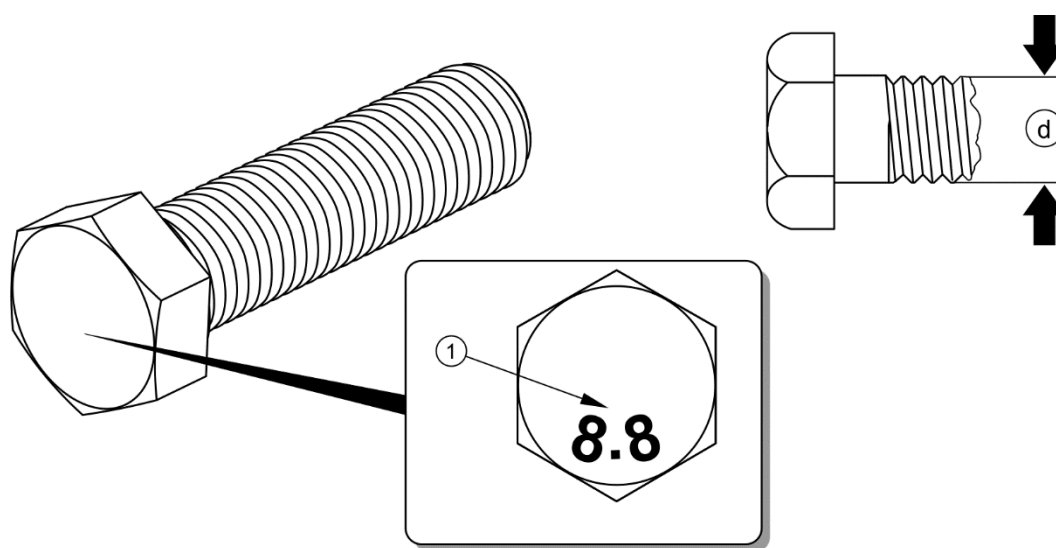**FIGURE 5.13 Bolt with metric thread**

(1) resistance class, (d) thread diameter

**TABLE 5.7 Tightening torque for nut and bolt connections**

METRIC THREAD	5.8 <sup>(1)</sup>	8.8 <sup>(1)</sup>	10.9 <sup>(1)</sup>
	Md [Nm]		
M10	37	49	72
M12	64	85	125
M14	100	135	200
M16	160	210	310
M20	300	425	610
M24	530	730	1 050
M27	820	1,150	1,650
M30	1,050	1,450	2,100

<sup>(1)</sup> – strength class according to DIN ISO 898 standard

Hydraulic conduits should be tightened using torque of 50 – 70 Nm.



## 5.11 INSTALLATION AND DISMOUNTING OF WALL EXTENSIONS



### DANGER

Installation and dismantling of wall extensions should be carried out with the use of appropriate platforms, ladders or when standing on a ramp. These tools must be in good condition to fully protect the persons working on them against falling. Work should be performed by at least two persons. Exercise particular caution.

#### Installation of wall extensions

- ➔ Secure rear extension stakes to rear side stakes.
- ➔ Install front wall extension.
- ➔ Install rear wall extension.
- ➔ Install side wall extensions.
  - ⇒ First place upper pins of extension in appropriate rear stake locks and front walls, and after that secure base of extensions with the aid of pin lugs to upper part of side walls.
- ➔ screw down the wall extension ladder to the front wall.


Dismounting of wall extensions should be performed in reverse order.

## 5.12 ADJUSTMENT OF DRAWBAR POSITION

Adjustment of drawbar position is achieved by changing the drawbar body position (1) in relation to the trailer's lower frame.

#### Required actions

- ➔ Immobilise trailer with parking brake.
- ➔ Place wheel chocks under trailer wheels.
- ➔ Unscrew drawbar body from frame.

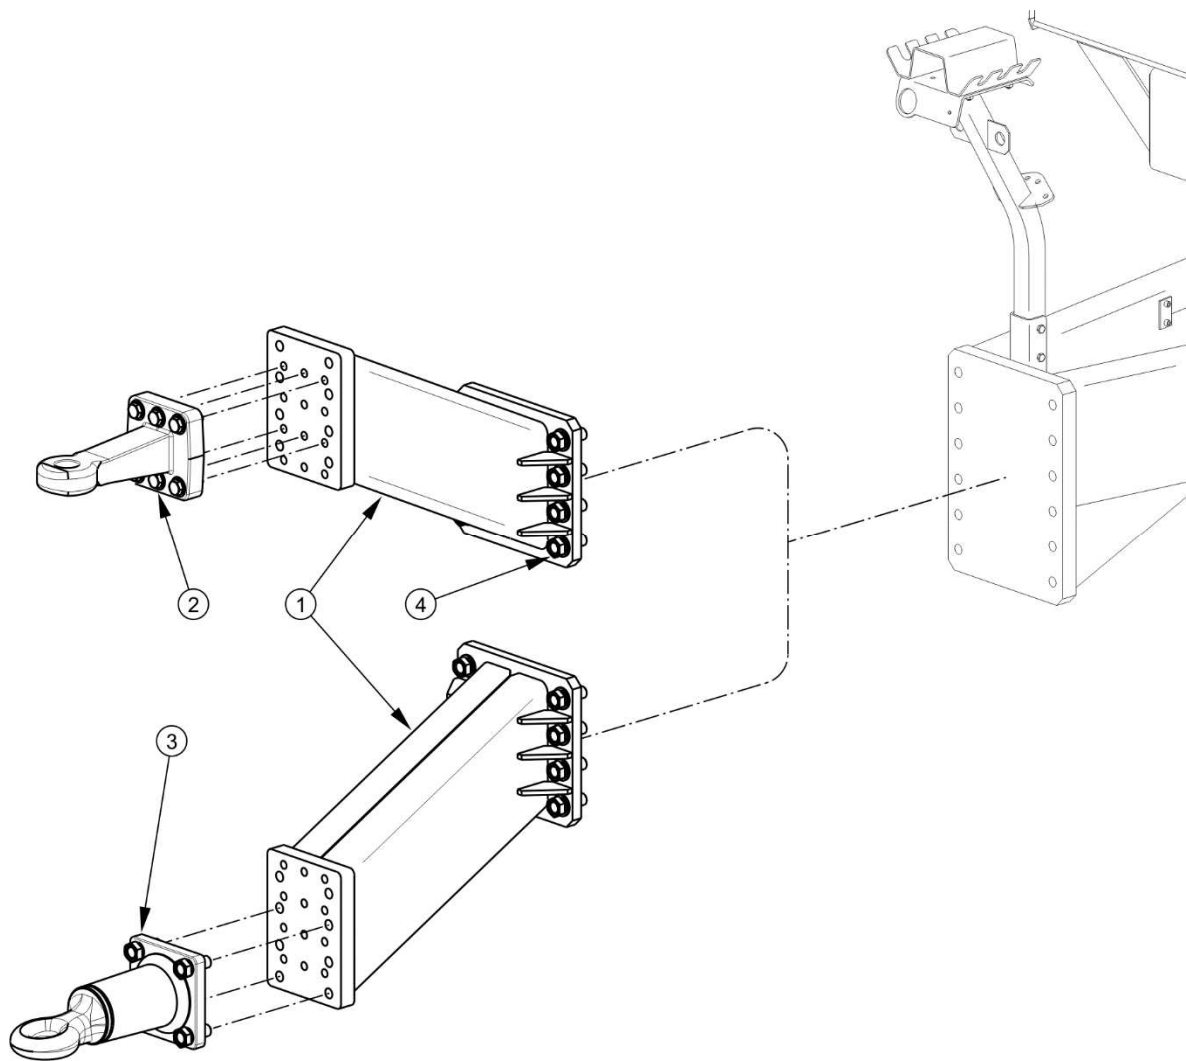

**FIGURE 5.14 Adjustment of drawbar position**

(1) drawbar body, (2) fixed drawbar eye, (3) rotating drawbar eye, (4) bolt connection

- Set drawbar body in new position and tighten with appropriate torque.
  - ⇒ The frame design provides 6 combination possibilities for positioning the drawbar body, compare figure (5.14).
- Check degree of tightening of drawbar eye and drawbar body after the first travel under load.

## 5.13 TROUBLESHOOTING

**TABLE 5.8 Troubleshooting**

FAULT	CAUSE	REMEDY
Problem with moving off	Brake system conduits not connected	Connect brake conduits (applies to pneumatic systems)
	Applied parking brake	Release parking brake.
	Damaged pneumatic system connection conduits	Replace.
	Leaking connections	Tighten, replace washers or seal sets, replace conduits.
	Damaged control valve or brake force regulator	Check valve, repair or replace.
Noise in axle hubs	Excessive bearing slackness	Check slackness and adjust if needed
	Damaged bearing	Replace bearing
	Damaged hub parts	Replace
Poor reliability of braking system	Insufficient pressure in system	<p>Check pressure on tractor pressure gauge, wait till compressor fills tank to required pressure.</p> <p>Damaged air compressor in tractor Repair or replace.</p> <p>Damaged brake valve in tractor. Repair or replace.</p> <p>Leaking system conduits or connections. Check system for tightness.</p>
Excessive heating of axle hubs	Incorrect main or parking brake adjustment	Regulate setting of expander arms
	Worn brake linings	Change brake shoes
Incorrect hydraulic system operation	Improper hydraulic oil viscosity	<p>Check oil quality, make sure that the oil in both machines is of the same type. If necessary change</p>

FAULT	CAUSE	REMEDY
		oil in tractor or in trailer
	Insufficient tractor hydraulic pump output, damaged tractor hydraulic pump.	Check tractor hydraulic pump.
	Damaged or contaminated cylinder	Check cylinder piston (bending, corrosion), check cylinder for tightness (piston seal), in case of need repair or replace cylinder.
	Excessive cylinder loading	Check mechanism controlled by cylinder for mechanical damage
	Damaged hydraulic conduits	Check and ascertain that hydraulic conduits are tight, not fractured and properly tightened. If necessary replace or tighten.

# NOTES

[illegible]



# ZAŁĄCZNIK A

Rozmiary ogumienia

WERSJA PRZYCZEPY	OŚ PRZEDNIA / TYLNA
T663/4, T663/4 SILO	385/55 R 22.5 TL HN 809 (HA) 385/55 R 22.5 TL KLS 03 (VA) 385/55 R 22.5 160F XZA2 RE

koło tarczowe 11.75x22.5" ET=0