

# INTRODUCTION

Information contained herein is current at date of publication. As a result of improvements, some numerical values and illustrations contained in this publication may not correspond to the factual specification of the machine supplied to the user. The manufacturer reserves the right to introduce design changes in machines produced that facilitate operation and improve the quality of their work, without making minor amendments to this Operator's Manual.

This Operator's Manual is an integral part of the machine's documentation. Before using the machine, the user must carefully read this Operator's Manual and observe all recommendations. This guarantees safe operation and ensures malfunction free work of the machine. The machine is designed to meet obligatory standards, documents and legal regulations currently in force.

The manual describes the basic safety rules and operation of mobile trommel screen PRONAR MPB20.55.

If the information stated in the Operator's Manual needs clarification then the user should refer for assistance to the sale point where the machine was purchased or to the Manufacturer.

## MANUFACTURER'S ADDRESS:

PRONAR Sp. z o.o.  
ul. Mickiewicza 101A  
17-210 Narew

## CONTACT TELEPHONES

+48 085 681 63 29  
+48 085 681 63 81

+48 085 681 64 29  
+48 085 681 63 82

## SYMBOLS APPEARING IN THIS OPERATOR'S MANUAL

Information, descriptions of danger and precautions and also recommendations and prohibitions associated with user safety instructions are marked:



and also preceded by the word "**DANGER**". Failure to observe the instructions may endanger the machine operator's or other person's health or life.

Particularly important information and instructions, the observance of which is essential, are distinguished in the text by the sign:



and also preceded by the word "**ATTENTION**". Failure to observe the instructions may lead to damage to the machine as a result of improper operation, adjustment or use.

Additional tips and advice for machine operation are marked:



and also preceded by the word "**TIP**".

## DIRECTIONS USED IN THIS OPERATOR'S MANUAL

Left side – side to the left hand of the operator facing in the direction of machine's forward travel.

Right side – side to the right hand of the operator facing in the direction of machine's forward travel.

Rotation to the right – clockwise rotation of a mechanism (the operator is facing the mechanism).

Rotation to the left – counterclockwise rotation of a mechanism (the operator is facing the mechanism).

## GLOSSARY OF TERMS USED IN THE OPERATOR'S MANUAL

Commercial truck - motor vehicle designed for transporting goods; this term refers also to goods and passenger carrying vehicles that are designed for carrying goods and people (from 4 to 9 persons including a driver).

Truck tractor - motor vehicle designed exclusively for towing a trailer; this term refers to semi-trailer truck and ballast tractor.

Agricultural tractor - motor vehicle designed for use in combination with implements for agricultural, forestry and horticultural work; the agricultural tractor can be also adapted for towing a trailer and for earthwork.

ABS - Antilock Braking System – the system that prevents vehicle wheel locking during braking.

ALB - Automatic load dependent brake control - automatic adjustment of braking force dependent on trailer load

CAN - Controller Area Network – serial communication bus

ECU - Electronic Control Unit – electronic controller of braking system

TEBS G2- Trailer Electronic Braking System – the second generation electronic braking system for trailers



**PRONAR Sp. z o.o.**

ul. Mickiewicza 101 A  
17-210 Narew, Polska

tel./fax (+48 85) 681 63 29, 681 63 81, 681 63 82,  
681 63 84, 681 64 29

fax (+48 85) 681 63 83

http://www.pronar.pl

e-mail: pronar@pronar.pl

## EC DECLARATION OF CONFORMITY OF THE MACHINERY

PRONAR Sp. z o.o. declares with full responsibility, that the machine:

Description and identification of the machinery	
Generic denomination and function:	<b>Mobile drum screen</b>
Type:	<b>MP-1</b>
Model:	<b>MPB20.55</b>
Serial number:	
Commercial name:	<b>Mobile drum screen PRONAR MPB20.55</b>

to which this declaration relates, fulfills all the relevant provisions of the Directive **2006/42/EC** of The European Parliament and of The Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (Official Journal of the EU, L 157/24 of 09.06.2006).

The person authorized to compile the technical file is the Head of Research and Development Department at PRONAR Sp. z o.o., 17-210 Narew, ul. Mickiewicza 101A, Poland.

This declaration relates exclusively to the machinery in the state in which it was placed on the market, and excludes components which are added and/or operations carried out subsequently by the final user.

Narew, the 2014-12-05

*Place and date*

Z-CIA DYREKTORA  
d/s technicznych  
członek zarządu

*Román Omelianiuk*

*Full name of the empowered person  
position, signature*

# Table of contents

<b>BASIC INFORMATION</b>	<b>1.1</b>
1.1 IDENTIFICATION OF THE MACHINE AND ITS MAIN COMPONENTS _____	1.2
1.1.1. IDENTIFICATION OF TROMMEL SCREEN _____	1.2
1.1.2. AXLE IDENTIFICATION _____	1.4
1.1.3. IDENTIFICATION OF COMBUSTION ENGINE _____	1.4
1.1.4. LIST OF SERIAL NUMBERS _____	1.5
1.2 PROPER USE _____	1.5
1.3 EQUIPMENT _____	1.7
1.4 TERMS & CONDITIONS OF WARRANTY _____	1.8
1.5 TRANSPORT _____	1.8
1.5.1. TRANSPORT ON VEHICLE _____	1.9
1.5.2. INDEPENDENT TRANSPORT BY THE USER _____	1.11
1.6 ENVIRONMENTAL HAZARDS _____	1.11
1.7 WITHDRAWAL FROM USE _____	1.12
<b>SAFETY ADVICE</b>	<b>2.1</b>
2.1 SAFETY INFORMATION _____	2.2
2.1.1. BASIC SAFETY RULES _____	2.2
2.1.2. HITCHING AND UNHITCHING FROM TRUCK TRACTOR _____	2.3
2.1.3. HYDRAULIC AND PNEUMATIC SYSTEM _____	2.3
2.1.4. MAINTENANCE _____	2.4
2.1.5. DRIVING ON PUBLIC ROADS _____	2.5
2.1.6. OPERATION OF THE TROMMEL SCREEN _____	2.6
2.1.7. SAFETY DURING BATTERY MAINTENANCE _____	2.6
2.1.8. SAFETY RULES DURING ENGINE MAINTENANCE _____	2.7
2.1.9. SAFE OPERATION OF BELT CONVEYORS _____	2.7
2.1.10. TYRES _____	2.8
2.1.11. SAFETY WHEN WORKING WITH MAGNETIC SEPARATOR _____	2.8
2.1.12. REMOTE CONTROL SYSTEM OPERATION _____	2.9
2.2 DESCRIPTION OF RESIDUAL RISK _____	2.9
2.3 INFORMATION AND WARNING DECALS _____	2.10
<b>DESIGN AND OPERATION</b>	<b>3.1</b>
3.1 SPECIFICATION _____	3.2
3.2 TROMMEL SCREEN — FEATURES AND COMPONENTS _____	3.3
3.3 ENGINE DESIGN _____	3.7
3.4 ELECTRIC LIGHTING SYSTEM _____	3.9
3.5 PNEUMATIC BRAKE SYSTEM _____	3.9
3.5.1. LOOSENING-PARKING VALVE _____	3.14
3.5.2. TEBS G2 MODULATOR _____	3.15

3.5.3. ABS FUNCTION _____	3.16
<b>3.6 CONTROL PANELS _____</b>	<b>3.16</b>
3.6.1. MAIN CONTROL PANEL _____	3.16
3.6.2. LCD DISPLAY _____	3.16
3.6.3. AUXILIARY CONTROL PANEL _____	3.24
<b>3.7 TROMMEL SCREEN HYDRAULIC SYSTEM _____</b>	<b>3.24</b>
<b>3.8 MAGNETIC SEPARATORS _____</b>	<b>3.25</b>
<b>3.9 HOPPER GRID _____</b>	<b>3.25</b>
<b>3.10 RADIO CONTROL _____</b>	<b>3.26</b>
<b>CORRECT USE _____</b>	<b>4.1</b>
<b>4.1 CHECK THE TROMMEL SCREEN AFTER DELIVERY _____</b>	<b>4.2</b>
4.1.1. PRELIMINARY INFORMATION _____	4.2
4.1.2. CHECKING THE TROMMEL SCREEN AFTER DELIVERY _____	4.3
4.1.3. TEST RUN _____	4.4
<b>4.2 HITCH AND UNHITCH THE TROMMEL SCREEN _____</b>	<b>4.5</b>
<b>4.3 INSPECTIONS DURING DAILY OPERATION _____</b>	<b>4.7</b>
4.3.1. HYDRAULIC OIL LEVEL CHECK _____	4.7
4.3.2. CHECK FUEL LEVEL _____	4.8
4.3.3. CHECK LEVEL OF ENGINE LUBRICATING OIL _____	4.9
4.3.4. CHECK THE LUBRICATION PUMP SETTINGS _____	4.10
4.3.5. CHECK GREASE LEVEL _____	4.11
4.3.6. CHECK ENGINE COOLANT LEVEL _____	4.12
4.3.7. OTHER CHECKS _____	4.13
<b>4.4 START THE TROMMEL SCREEN _____</b>	<b>4.14</b>
4.4.1. PRELIMINARY INFORMATION _____	4.14
4.4.2. POSITION THE MACHINE IN ITS WORKING LOCATION _____	4.15
4.4.3. START THE ENGINE _____	4.17
4.4.4. OPERATE HYDRAULIC SUPPORTS _____	4.19
4.4.5. UNFOLD LATERAL CONVEYOR _____	4.22
4.4.6. FOLD LATERAL CONVEYOR _____	4.24
4.4.7. UNFOLD REAR CONVEYOR _____	4.25
4.4.8. FOLD REAR CONVEYOR _____	4.28
4.4.9. CHECK CONVEYOR OPERATION _____	4.29
<b>4.5 START THE TROMMEL SCREEN DRIVES _____</b>	<b>4.30</b>
4.5.1. START THE DRIVES IN MANUAL MODE _____	4.31
4.5.2. START AND STOP THE SCREEN DRIVES IN AUTOMATIC MODE _____	4.34
4.5.3. ADJUST THE ENGINE SPEED, STOP THE ENGINE _____	4.35
<b>4.6 SCREENING _____</b>	<b>4.37</b>
<b>4.7 STOP THE TROMMEL SCREEN _____</b>	<b>4.39</b>
4.7.1. STOP THE TROMMEL SCREEN IN NORMAL MODE _____	4.39
4.7.2. STOP THE TROMMEL SCREEN IN EMERGENCY MODE _____	4.40
4.7.3. START THE TROMMEL SCREEN AFTER EMERGENCY STOP _____	4.41
4.7.4. STOP THE TROMMEL SCREEN IN ALARM CONDITION _____	4.42
<b>4.8 BRUSH _____</b>	<b>4.43</b>
<b>4.9 OPEN THE GUARDS _____</b>	<b>4.44</b>
4.9.1. ENGINE COMPARTMENT GUARDS _____	4.44

4.9.2. RIGHT GUARD OF SCREENING DRUM _____	4.45
4.9.3. LEFT GUARD OF SCREENING DRUM _____	4.46
4.10 ENGINE FRAME _____	4.47
4.11 TOO MUCH CHARGE MATERIAL _____	4.48
4.12 LATERAL UNDER-RUN PROTECTION DEVICE _____	4.49
4.13 TOW THE TROMMEL SCREEN ATTACHED TO AN AGRICULTURAL TRACTOR _____	4.50
4.14 TOW THE TROMMEL SCREEN USING A LOADER _____	4.51
4.15 OPERATE THE RADIATOR CLEANING SYSTEM _____	4.53
4.16 PREPARE THE TROMMEL SCREEN FOR PUBLIC ROAD TRANSPORT _____	4.54
4.17 PROPER USE AND MAINTENANCE OF TYRES _____	4.56
4.18 WATER TANK (OPTION) _____	4.57
4.19 FOLD AND UNFOLD CONVEYOR CHUTES _____	4.58

## MAINTENANCE 5.1

5.1 PRELIMINARY INFORMATION _____	5.2
5.2 TECHNICAL INSPECTION _____	5.2
5.2.1. DRAIN WATER FROM FUEL TANK _____	5.6
5.2.2. REPLACE AND CLEAN THE AIR FILTER _____	5.7
5.2.3. REPLACE OIL _____	5.9
5.2.4. REPLACE OIL FILTER _____	5.10
5.2.5. CLEAN AND INSPECT THE COOLER _____	5.11
5.2.6. CHECK THE BELT TENSIONER AND REPLACE THE BELT _____	5.12
5.2.7. REPLACE FUEL PRE-FILTER AND WATER SEPARATOR _____	5.13
5.2.8. REPLACE FINE FUEL FILTER _____	5.14
5.2.9. BLEED THE FUEL SYSTEM _____	5.15
5.2.10. DRAIN FUEL PRE-FILTER WATER SEPARATOR _____	5.16
5.2.11. INSPECT THE STARTER AND THE ALTERNATOR _____	5.17
5.2.12. INSPECT THE BATTERY _____	5.18
5.2.13. ADJUST GUIDANCE AND TENSION OF CONVEYOR BELTS _____	5.20
5.2.14. CLEAN AND ADJUST SCRAPER _____	5.23
5.2.15. CHECK AND CLEAN THE BRUSH _____	5.25
5.2.16. ADJUST BRUSH POSITION _____	5.26
5.2.17. INSPECT AND CLEAN THE SUPPORTING ROLLERS _____	5.27
5.2.18. CHECK AND CLEAN THE REAR GUIDE ROLLER AND THE FRONT GUIDE ROLLER _____	5.28
5.2.19. INSPECT AND ADJUST THE SCREENING DRUM DRIVE WHEEL _____	5.29
5.2.20. INSPECT AND CLEAN THE BELT CONVEYOR ROLLERS _____	5.31
5.2.21. CHECK HYDRAULIC SYSTEM TIGHTNESS _____	5.32
5.2.22. REPLACE THE HYDRAULIC LINES _____	5.33
5.2.23. CHANGE HYDRAULIC OIL _____	5.34
5.2.24. REPLACE OIL FILTERS _____	5.35
5.2.25. CLEAN AND INSPECT THE HYDRAULIC OIL COOLER _____	5.36
5.2.26. CHECK AIR TIGHTNESS OF PNEUMATIC SYSTEM _____	5.37
5.2.27. CLEAN AIR FILTERS, INSPECT THE CONNECTIONS _____	5.38
5.2.28. DRAIN WATER FROM AIR TANK, CLEAN DRAIN VALVE _____	5.39
5.2.29. CHECK WHEEL AXLE BEARING PLAY _____	5.40
5.2.30. ADJUST WHEEL AXLE BEARING PLAY _____	5.42
5.2.31. INSPECT TIGHTNESS OF NUTS, INSTALL AND REMOVE THE WHEEL _____	5.43
5.2.32. CHECKING THE AIR PRESSURE AND ASSESS THE CONDITION OF THE WHEELS _____	5.45

5.2.33. CHECK THICKNESS OF BRAKE SHOE LININGS _____	5.46
5.2.34. CLEAN THE TROMMEL SCREEN _____	5.47
5.2.35. LUBRICATION _____	5.49
5.2.36. CHECK OIL LEVEL AND CHANGE TRANSMISSION OIL _____	5.53
5.3 REPLACE DRUM _____	5.54
5.4 EMERGENCY RELEASE OF DIAPHRAGM-SPRING ACTUATOR _____	5.56
5.5 EMERGENCY AERATION OF BRAKE SYSTEM _____	5.57
5.6 ADJUST REAR CONVEYOR _____	5.58
5.7 CONSUMABLES _____	5.59
5.8 STORAGE _____	5.60
5.9 CHECK THE TIGHTENING TORQUE OF NUT AND BOLT CONNECTIONS _____	5.61
5.10 ENGINE ERROR CODES _____	5.62
5.11 TROUBLESHOOTING _____	5.63
ANNEX A	A.1
ANNEX B	B.1
ANNEX C	C.1
ANNEX D	D.1



SECTION


**1**

---

**BASIC INFORMATION**

## 1.1 IDENTIFICATION OF THE MACHINE AND ITS MAIN COMPONENTS

### 1.1.1. IDENTIFICATION OF TROMMEL SCREEN

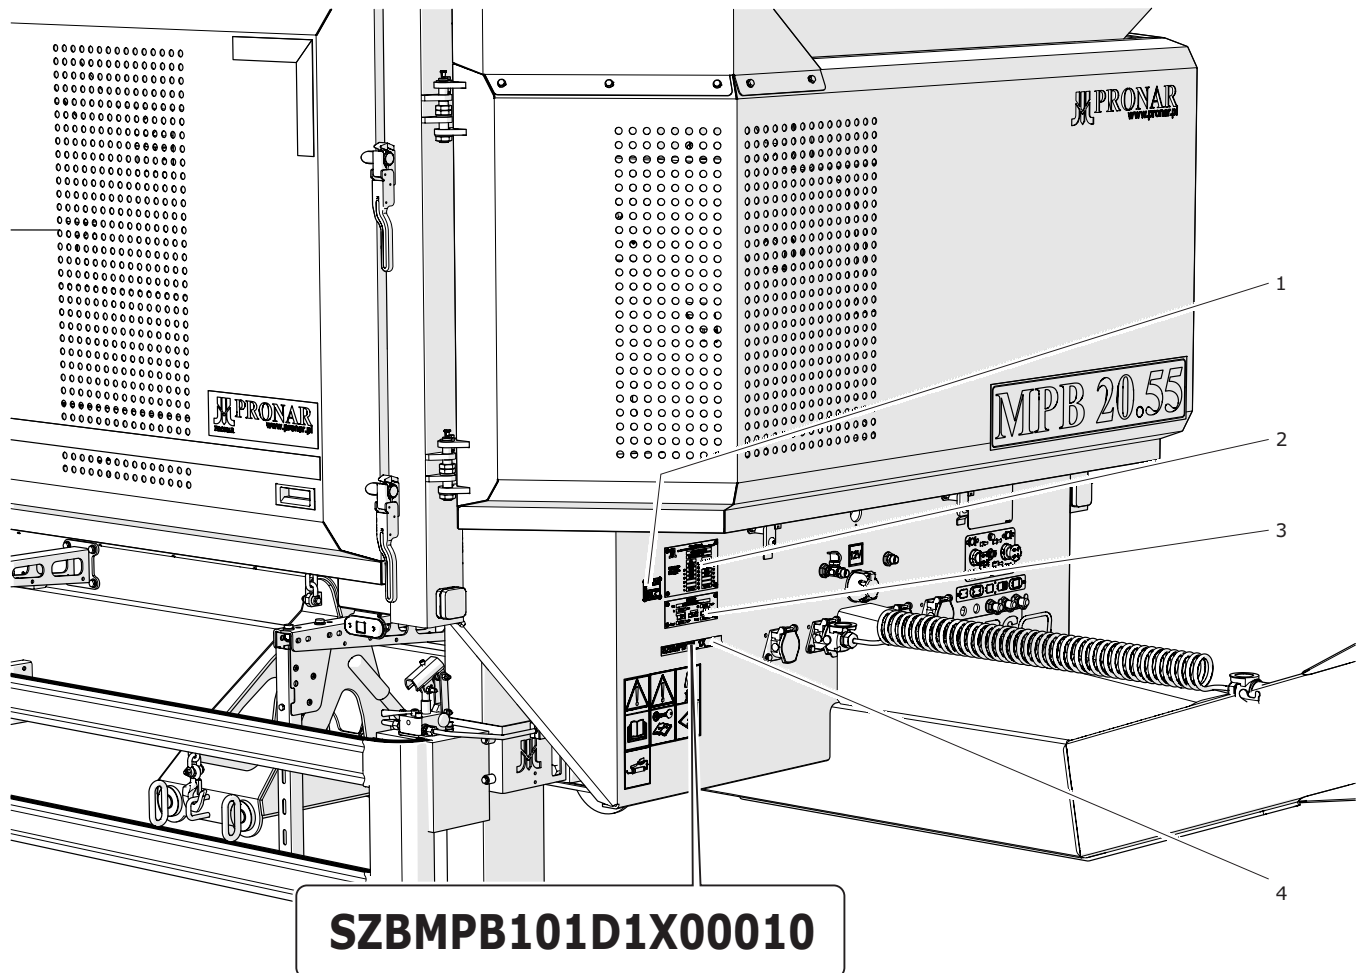

**Figure 1.1** Marking of mobile trommel screen

(1) data plate


(2) data plate

(3) dimensional plate

(4) example of VIN number


Markings of the mobile trommel screen in the form of a dimensional plate, two data plates and VIN number are located on the front profile of the lower frame on the right side of the machine – figure (1.1). When buying the machine check that the serial numbers on the machine agree with the number written in the WARRANTY BOOK and in

the sales documents.

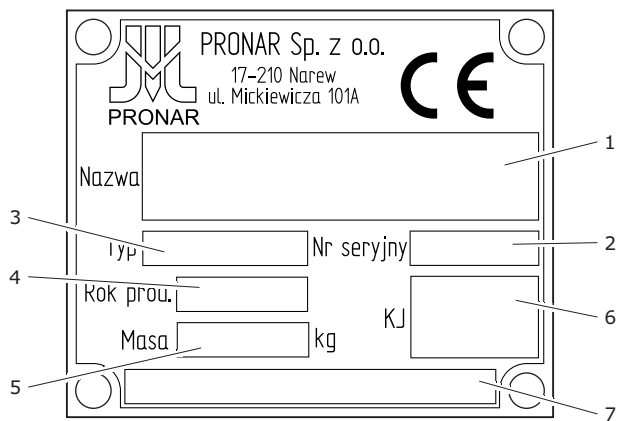


**Figure 1.2** Data plate

- (1) machine name
- (2) serial number
- (3) type
- (4) year of manufacture
- (5) gross weight
- (6) Quality Control stamp
- (7) machine name, name extension

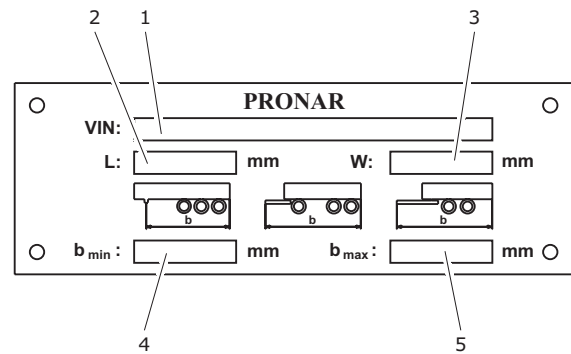

**Figure 1.4** Dimensional plate

- (1) VIN number
- (2) total length
- (3) total width
- (4) minimum length measured to the hitch axis
- (5) maximum length measured to the hitch axis

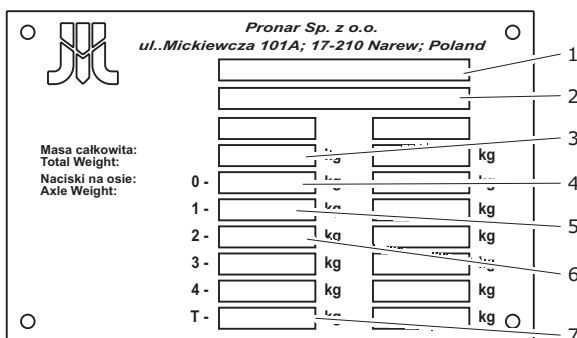

**Figure 1.3** Data plate

- (1) official certificate number
- (2) VIN number
- (3) gross weight
- (4) hitch load
- (5) axle 1 load
- (6) axle 2 load
- (7) maximum gross weight for a group of axles

## 1.1.2. AXLE IDENTIFICATION

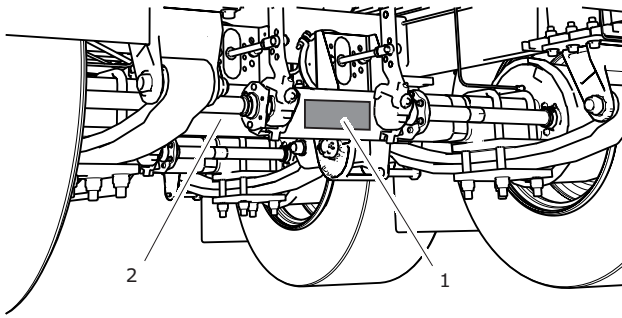


Figure 1.5 Location of the axle data plate

(1) data plate

(2) wheel axle

## 1.1.3. IDENTIFICATION OF COMBUSTION ENGINE

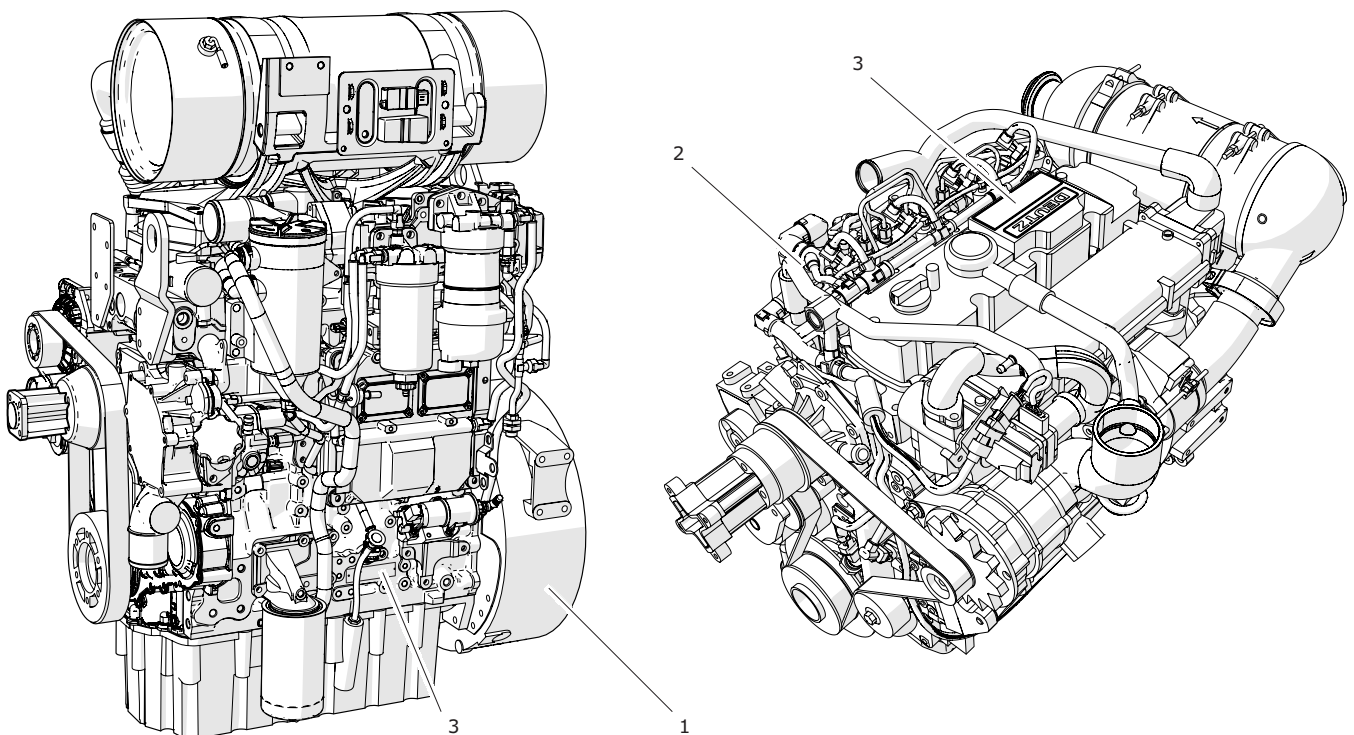


Figure 1.6 Location of the engine data plate

(1) CATERPILLAR

(2) DEUTZ

(3) data plate

1.1.4. LIST OF SERIAL NUMBERS


MACHINE SERIAL NUMBER

**S Z B M P B 1 0 1**   **X**

SERIAL NUMBER OF FRONT AXLE

SERIAL NUMBER OF REAR AXLE

ENGINE SERIAL NUMBER



**TIP**  
After your purchase, we recommend that you write down serial numbers of individual components

## 1.2 PROPER USE

Mobile trommel screen Pronar MPB20.55 is designed for screening charge material into fractions and sorting charge material. Depending on the drum installed, the machine can be used for screening disintegrated municipal waste and construction waste, construction materials (sand, gravel), compost, earth, wood chips and bark, ash, slag, biomass and similar materials. The trommel screen is designed only for processing dry materials. The machine is not intended for screening the following materials:

- lump materials (large pieces of rubble, stones, wood),
- long materials (steel bars, wooden beams and slats, steel strips, flat bars),
- dangerous, toxic and caustic materials,
- semi-fluid materials,
- and other materials whose weight, shape or chemical properties may cause damage to conveyor belts, drum and other structural

elements of the machine.

Using it as intended also involves all actions connected with the safe and proper operation and maintenance of the machine.

In connection with this the user is obliged to:

- carefully read the OPERATOR'S MANUAL of the trommel screen and the WARRANTY BOOK and conform with the recommendations contained in these documents,
- understand the machine's operating principle and how to operate it safely and correctly,
- adhere to the established maintenance and adjustment plans,
- comply with general safety regulations while working,
- prevent accidents,
- comply with the road traffic regulations in force in a given country, in which the trommel screen is used,
- carefully read the truck tractor Operator's

Manual and comply with its recommendations,

- only hitch the trommel screen to a truck tractor which fulfils all the requirements specified by the trommel screen's Manufacturer.

The trommel screen may only be used by persons, who:

- are familiar with the contents of the publications and documents delivered with the machine and with the contents of the truck tractor Operator's Manual,
- have been trained in trommel screen service and safe operation,
- are qualified to drive truck tractors, in the event of the machine transport.

The machine is designed to be operated with truck tractors which meet the requirements specified in table (1.1).

The mobile trommel screen is designed according

to current safety requirements and engineering standards. The maximum design speed of the



### IMPORTANT

The mobile trommel screen must not be used for purposes other than those for which it is intended.

Screening of forbidden materials will void the warranty.

truck tractor with the trommel screen is 100 km/h.

**Table 1.1.** Requirements for truck tractor

CONTENTS	UNIT	REQUIREMENTS
<b>Brake system</b>		
Pneumatic control socket (yellow)	-	according to DIN 1728
Pneumatic supply socket (red)	-	according to DIN 1728
Supply socket for EBS+CAN	-	7-pin or 5-pin socket, 24V DIN 7638-1996
<b>Electrical system</b>		
Electrical system voltage	V	24
Supply socket 24-V-N <sup>(1)</sup>	-	according to DIN ISO 1185
Supply socket 24-V-S <sup>(1)</sup>	-	according to DIN ISO 3731
15-pin socket		according to ISO 12098

CONTENTS	UNIT	REQUIREMENTS
<b>Hitch</b>		
Hitch diameter	mm	50
Minimum vertical load capacity	kg	1,000

(1)- Interchangeable with 15 pin socket To connect, use the suitable connecting cord.

## 1.3 EQUIPMENT

Table 1.2. Equipment

OPTIONAL EQUIPMENT		OPTIONAL EQUIPMENT	
Operator's Manual	S	Front support legs, mechanical	S
Warranty book	S	Ball attachment	D
Magnetic separator, rear	D	Toolbox	S
Magnetic separator, lateral	D	Water tank	D
Hopper grid	D	Drawbar eye 57 mm	O
Chute	D	Radio control	D
Front support legs, hydraulic	O	Side wall protection	D

EQUIPMENT:

STANDARD; ADDITIONAL; OPTIONAL

Information concerning tyres is provided at the end of this manual in ANNEX A.

Density and shape of screening drum perforations should be agreed before purchase of the machine.

## 1.4 TERMS & CONDITIONS OF WARRANTY



### TIP

Demand that the seller carefully and precisely fills out the Warranty Book and warranty repair coupons. A missing date of purchase or sale point stamp, may make the user ineligible for any warranty repair or refund.

PRONAR Sp. z o.o. Narew guarantees the reliable operation of the machine when it is used according to its intended purpose as described in the OPERATOR'S MANUAL. The repair period is specified in the WARRANTY BOOK.

The warranty does not apply to those parts and sub-assemblies of the machine, which are subject to wear in normal usage conditions, regardless of the warranty period. Consumables include the following parts/sub-assemblies:

- drawbar hitching eye,
- tyres,
- bulbs,
- seals,
- bearings,
- rubber conveyor belts,
- brushes,
- polyurethane drum rolls,
- runners.

The warranty service only applies to factory defects and mechanical damage that is not due to

the user's fault.

In the event of damage arising from:

- mechanical damage which is the user's fault, caused by road accidents,
- screening of forbidden materials,
- inappropriate use, adjustment or maintenance, use of the trommel screen for purposes other than those for which it is intended,
- use of damaged machine,
- repairs carried out by unauthorised persons, improperly carried out repairs,
- making unauthorised alterations to machine design,

the user will lose the right to warranty service.

The user is obliged to report immediately on noticing any wear in the paint coating or traces of corrosion, and to have the faults rectified whether they are covered by the warranty or not. For detailed Terms & Conditions of Warranty, please refer to the WARRANTY BOOK attached to each machine.

Modification of the machine without the written consent of the Manufacturer is forbidden. In particular, do NOT weld, drill holes in, cut or heat the main structural elements of the machine, which have a direct impact on the machine operation safety.

## 1.5 TRANSPORT

The mobile trommel screen is ready for sale completely assembled. The purchased machine



is delivered with the OPERATOR'S MANUAL, WARRANTY BOOK and possible additional equipment. The trommel screen is delivered to the user either transported on a vehicle or, after being

### 1.5.1. TRANSPORT ON VEHICLE

Before loading onto a transport vehicle, the trommel screen should be prepared according to instructions contained in section 4.

Loading and unloading of the trommel screen from vehicle shall be conducted using a loading ramp or ramps of a low chassis trailer. When loading and unloading the trommel screen, make sure that the rear lights support beam does not hit the platform's structural elements or the ground. If there is such a risk, dismantle the lights support beam. During work adhere to the general principles of Health and Safety at Work applicable to reloading work. Persons operating reloading equipment must have the qualifications required to operate these machines.

The trommel screen should be attached firmly to the platform of the transport vehicle using straps, chains, stays or other securing measures fitted with a tightening mechanism. Fasteners must be fixed to the mounting lugs (1) - Figure 1.7. Chocks, wooden blocks or other objects without sharp edges should be placed under the wheels of the trommel screen to prevent it from rolling. Wheel blocks must be nailed to the vehicle load platform planks or secured in another manner preventing their movement.

Use certified and technically reliable securing measures. Worn straps, cracked securing catches, bent or corroded hooks as well as other damage

attached to a truck tractor, independently (the trommel screen is towed by a truck tractor).

may disqualify use of the given element from use. Carefully read the information stated in the Operator's Manual for the given securing measure.

The number of securing elements (cables, straps, chains and stay etc.) and the force necessary for their tensioning depend on a number of things, including weight of the trommel screen, construction of the vehicle carrying the trommel screen, speed of travel and other conditions. For this reason it is impossible to define the securing plan precisely.

A correctly secured machine does not change its position with regard to the transport in vehicle. The securing elements must be selected according to the guidelines of the Manufacturer of these elements. In case of doubt apply a greater number of securing straps in order to immobilise the trommel screen. If necessary, sharp edges of the trommel screen should be protected at the same time protecting the securing elements from breaking during transport.

During reloading work, particular care should be taken not to damage parts of the machine's fittings or the lacquer coating. Weight and dimensions of the trommel screen are given in table (3.1).

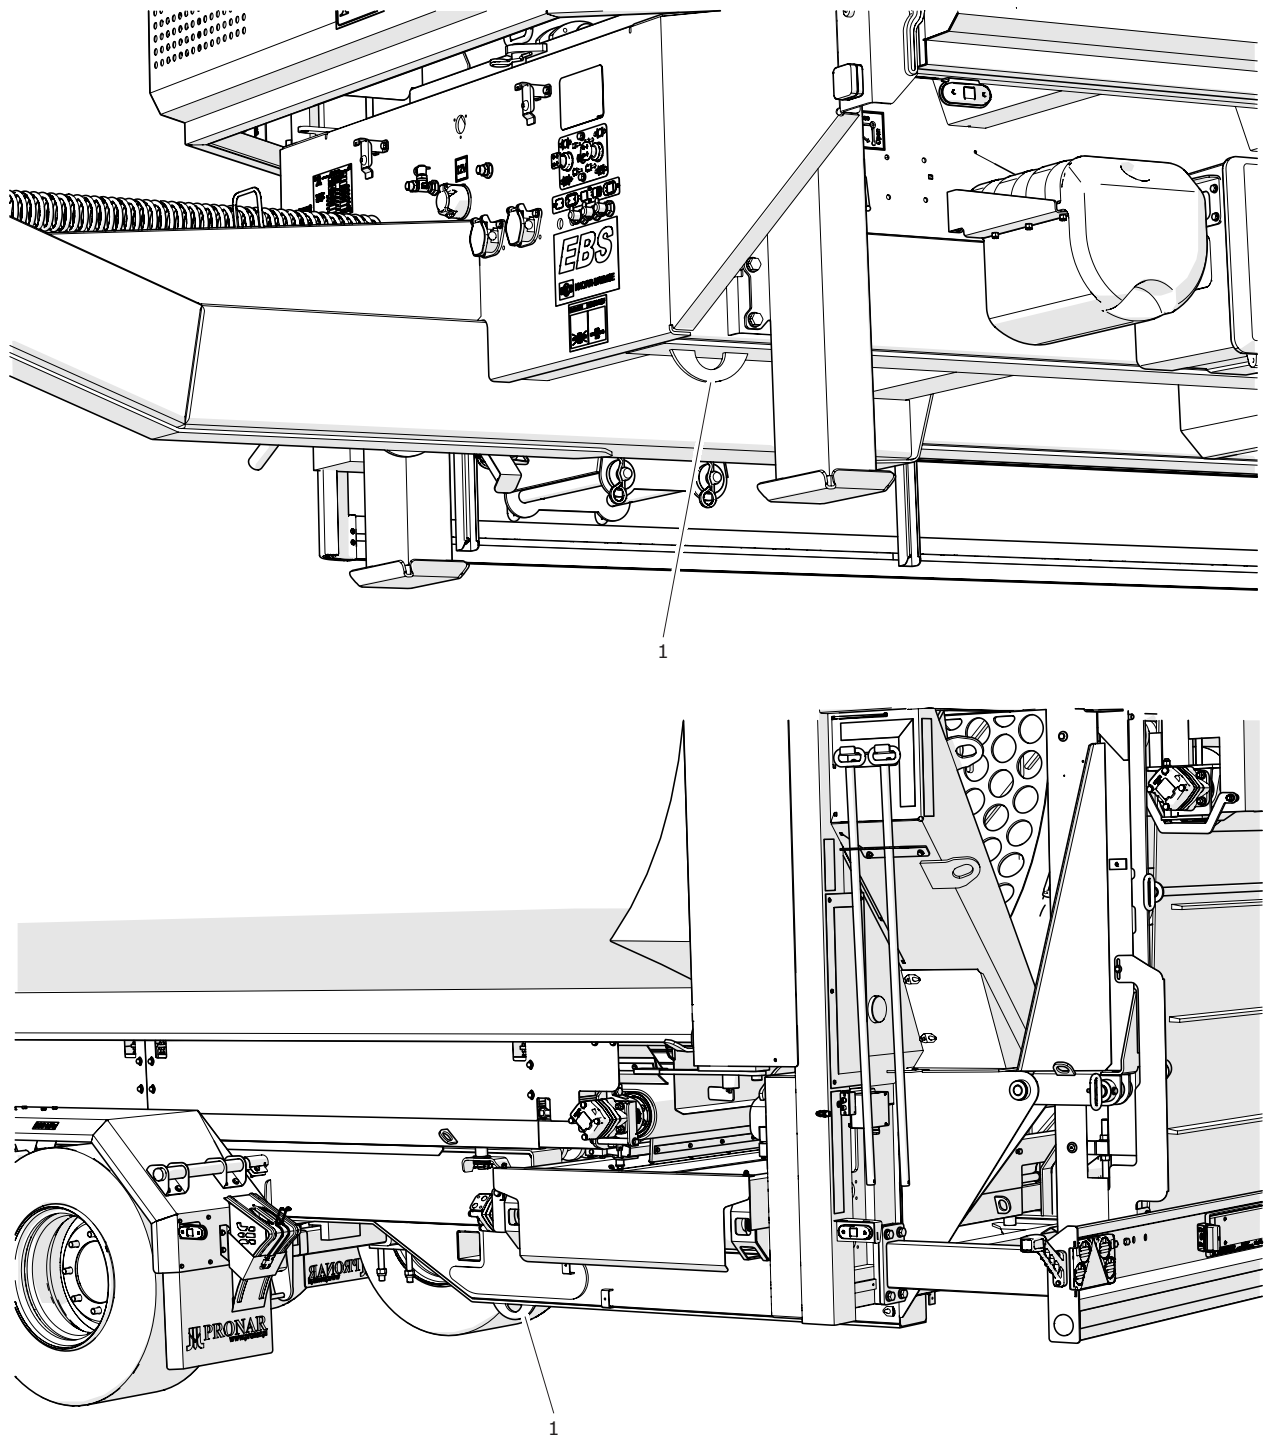


Figure 1.7 Recommended mounting points

(1) transport lugs

**DANGER**

Incorrect application of securing measures may cause an accident.



Driver of the vehicle should be particularly careful during travel. This is due to the vehicle's centre of gravity shifting upwards when loaded with the machine.

**DANGER**

When being road transported on a motor vehicle the trommel screen must be mounted on the vehicle's platform in accordance with the transport safety requirements and the regulations.



Use only certified and technically reliable securing measures. Carefully read the manufacturer's instructions for the securing measures.

**1.5.2. INDEPENDENT TRANSPORT BY THE USER**

In the event of independent transport by the user, carefully read the Operators Manual and follow its recommendations. Independent transport involves towing the machine with own truck tractor to its destination. During transport adjust travel speed to the prevailing road conditions, but do not exceed the maximum design speed.

**ATTENTION**

Before transporting independently, the truck tractor driver must carefully read this Operator's Manual and observe its recommendations.

**1.6 ENVIRONMENTAL HAZARDS**

A leak of hydraulic, lubricating or diesel oil constitutes a direct threat to the natural environment owing to limited biodegradability of oil. Information concerning consumables used is given in section 5 of this Operator's Manual.

While carrying out maintenance and repair work, which involves the risk of an oil leak, this work should take place on an oil resistant floor or surface. In the event of oil leaking into the environment, first of all contain the source of the leak, and then collect the leaked oil using available means. Remaining oil should be collected using sorbents, or by mixing the oil with sand, sawdust

or other absorbent materials. The oil pollution, once gathered up, should be kept in a sealed, marked, hydrocarbon resistant container, and then passed on to the appropriate oil waste recycling centre. The container should be kept away from heat sources, flammable materials and food.

Oils, which have been used up or are unsuitable for further use owing to a loss of its properties should be stored in its original packaging in the conditions described above.

**ATTENTION**

Waste oil should only be taken to the appropriate facility dealing with the re-use of this type of waste. Do NOT pour oils into sewerage or water tanks.

**DANGER**

Used oil or gathered remains mixed with absorbent material should be stored in a precisely marked container. Do not use food packaging for this purpose.

## 1.7 WITHDRAWAL FROM USE

In the event of decision by the user to withdraw the trommel screen from use, comply with the regulations in force in the given country concerning withdrawal from use and recycling of machines withdrawn from use. Worn out or damaged parts that cannot be reclaimed should be taken to a collection point for recyclable raw materials. Hydraulic oil, engine oil and engine coolant should be taken to the appropriate facility dealing with the re-use of this type of waste.

**DANGER**

During dismantling, use the appropriate tools, equipment (overhead travelling crane, crane or hoist etc.) and use personal protection equipment, i.e. protective clothing, footwear, gloves and eye protection etc.

SECTION

**2**

---

**SAFETY ADVICE**

## 2.1 SAFETY INFORMATION

### 2.1.1. BASIC SAFETY RULES

- Before using the mobile trommel screen, the user must carefully read this Operator's Manual. When operating the machine, the operator must comply with all the recommendations included in the Operator's Manual.
- The user is obliged to acquaint himself with all control elements and operation control indicators of the machine. It must be done before using the machine. Do NOT start the machine without knowledge of its function.
- The user is obliged to acquaint himself with the construction, action and the principles of safe usage of the machine.
- Before using the trommel screen always check whether it is properly prepared for work, especially in terms of safety.
- If the information contained in the Operator's Manual is difficult to understand, contact a seller, who runs an authorised technical service on behalf of the manufacturer, or contact the manufacturer directly.
- Entering the machine is only allowed when the machine is absolutely motionless. Turn off ignition key of the vehicle (truck tractor or agricultural tractor), if the trommel screen is connected to the vehicle, and turn off and remove the ignition key of the trommel screen engine. Before entering the trommel screen, immobilise it with parking brake.
- Careless and improper use and operation of the trommel screen and also non-observance of the recommendations contained in this Operator's Manual, endanger health and life of third persons and/or machine operator.
- The trommel screen may only be used when all the safety guards and other protective elements are technically sound and correctly positioned.
- Be aware of the existence of a residual risk, and for this reason the fundamental basis for using this trommel screen should be the application of safety rules.
- The machine must never be used by unauthorised persons, including children and people under the influence of alcohol or other drugs. The trommel screen may be transported only by persons who have appropriate and valid authorisation for driving the truck tractor.
- The trommel screen must not be used for purposes other than those for which it is intended. Anyone who uses the machine in any other way than the way intended takes full responsibility for any consequences of this use. Use of the trommel screen for purposes other than those for which it is intended by the Manufacturer may invalidate the guarantee.
- Any modification to the trommel screen frees Pronar from any responsibility for damage or detriment to health which may arise as a

- result.
- Before using the machine always check its technical condition, especially in terms of safety.
- Do NOT overload the trommel screen's mechanisms.
- Do NOT exceed permissible travel speed of tractor and machine assembly.
- The trommel screen is not intended to transport any load (including people and animals).

### 2.1.2. HITCHING AND UNHITCHING FROM TRUCK TRACTOR

- Before hitching the trommel screen to the tractor or truck tractor check that both machines are in good technical condition.
- Be especially careful when hitching the machine to the tractor or truck tractor.
- When hitching the trommel screen, use the appropriate hitch of the truck tractor. After hitching the machines, check the hitch lock. Carefully read the truck tractor Operator's Manual. If the truck tractor is equipped with an automatic hitch, make certain that the hitching operation is completed.
- When hitching, there must be nobody between the truck tractor and the trommel screen.
- Do NOT hitch the trommel screen to the truck tractor if it does not fulfil the requirements made by the Manufacturer.
- The trommel screen when unhitched from the tractor must stand on level ground and be supported with the aid of a support. Conduit terminals should be protected against contamination by placing them in proper holding sockets. Make sure that the trommel screen is immobilised with parking brake.

### 2.1.3. HYDRAULIC AND PNEUMATIC SYSTEM

- The hydraulic system is under high pressure when the trommel screen is operating.
- Regularly check the condition of the connections and the hydraulic and pneumatic leads. There must not be any leaks of hydraulic oil and any loss of air from leaky pneumatic system.
- In the event of malfunction of the hydraulic or pneumatic system, do not use the trommel screen until the malfunction is corrected.
- Do NOT tow the trommel screen when the pneumatic system is out of order.
- Before proceeding to maintenance-repair work, make certain that the hydraulic system is not under pressure.
- Rubber hydraulic conduits must be replaced every 4 years regardless of their technical condition.
- Use the hydraulic oil recommended by the Manufacturer.
- Do not store hydraulic oil in packaging designed for storing food or foodstuffs.

- In the event of injuries being caused by pressurised hydraulic oil, contact a doctor immediately. Hydraulic oil may find its way under the skin and cause infections. In the event of contact of oil with eye, rinse with large quantity of water and in the event of the occurrence of irritation consult a doctor. In the event of contact of oil with skin wash the area of contact with water and soap. Do NOT

#### 2.1.4. MAINTENANCE


- Do NOT perform maintenance or repair work when the engine is turned on. Before commencing work, turn off the trommel screen engine and remove key from ignition. Protect the machine against rolling by placing chocks under the wheels. Immobilise the trommel screen with parking brake.
- Regularly check the condition of the bolt and nut connections.
- During the warranty period, any repairs may only be carried out by Warranty Service authorised by the manufacturer. After the expiry of the warranty period it is recommended that possible repairs to the trommel screen be performed by specialised workshops.
- While performing maintenance work, use proper, close-fitting protective clothing, gloves, protective shoes, protective goggles and appropriate tools.
- In the event of any fault or damage whatsoever, do not use the machine until the fault has been corrected.
- Servicing and repair work should be carried

apply organic solvents (petrol, kerosene).

- After changing the hydraulic oil, the used oil should be properly disposed of. Used oil or oil which has lost its properties should be stored in original containers or replacement containers resistant to action of hydrocarbons. Replacement containers must be clearly marked and appropriately stored.

out in line with the general principles of workplace health and safety. In the event of injury, the wound must be immediately cleaned and disinfected. In the event of more serious injuries, seek a doctor's advice.

- Service inspections of the trommel screen and its subassemblies should be carried out

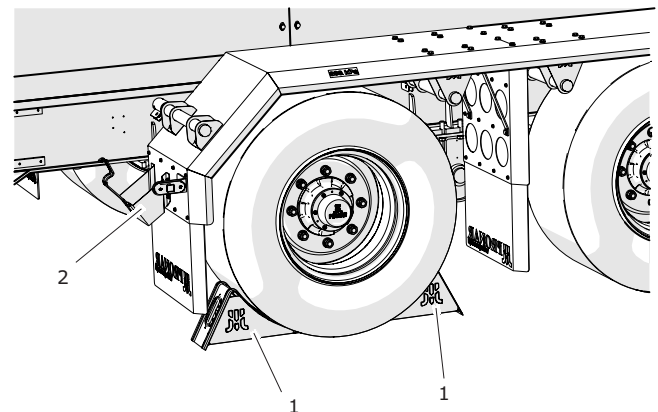

**Figure 2.1** Arrangement of chocks  
(1) chock (2) chock bracket

according to the frequency specified in this Operator's Manual.

- Before welding or electrical work, the trommel screen should be disconnected from



the power supply (disconnect (-) and (+) leads from the battery). The paint coating should be cleaned. Burning paint fumes are poisonous for people and animals. Welding work should be carried out in a well lit and well ventilated space. Welding return lead should be connected near the place of repair.

- During welding work pay attention to flammable or fusible elements (parts of the electric, hydraulic and pneumatic systems, plastic and rubber parts). If there is a risk that they will catch fire or be damaged, they should be removed or covered with non-flammable material before commencing welding work. Before beginning work, prepare a CO<sub>2</sub> or foam extinguisher.
- In the event of work requiring the trommel screen to be raised, use properly certified hydraulic or mechanical lifts for this purpose. After lifting the machine, stable and durable supports must also be used. Do NOT carry out work under a machine, which has only been raised with the lift jack.
- The trommel screen must not be supported using fragile elements (bricks or concrete blocks).
- The drum can be replaced only using a lifting device with proper lifting capacity. The machine operator must have proper qualifications for operating a crane, overhead travelling crane etc.
- After completing work associated with

lubrication, remove excess oil or grease. The trommel screen should be kept clean and tidy.

- Exercise particular caution when climbing on top of the trommel screen. The machine must be protected against rolling by means of chocks, its engine must be stopped and the ignition key must be removed.
- The user must not repair by himself the components of the power hydraulics and brake system automation. In the event of damage to these elements, repair should be entrusted to authorised service point or replace elements with new parts.
- Do NOT make repairs to drawbar and drawbar eye (straightening, pad welding or welding). Damaged drawbar eye should be replaced.
- Do NOT install additional appliances or fittings not according to the specifications defined by the Manufacturer.
- The trommel screen may only be towed when axles and wheels, brake system and lighting system are reliable.
- Regularly check technical condition and mounting of all guards and protective elements.
- Should it be necessary to change individual parts, use only original parts or those indicated by the Manufacturer. Non-adherence to these requirements may put the user and other people's health and life at risk, and also damage the machine.

### 2.1.5. DRIVING ON PUBLIC ROADS

- During transport, adjust travel speed to road

conditions. If possible avoid travelling on

uneven terrain and unexpected corners. Do not exceed the maximum design speed.

- When driving on public roads, comply with the road traffic regulations.
- Before driving off, the trommel screen should be prepared for transport according to instructions contained in section 4.
- Reckless driving and excessive speed may cause accidents.
- Before driving off, make sure that the trommel screen is correctly hitched to the truck tractor and check if the brake system and electrical system are correctly connected.
- Vertical load borne by the trommel screen drawbar eye affects the steering of the truck

tractor.

- Do NOT attempt to climb the machine while travelling.
- Do NOT park the machine on slope.
- The machine must NOT be left unsecured. When disconnected from the truck tractor, the trommel screen must be protected against rolling with chocks or other objects without sharp edges placed under the front and back wheels. Immobilise the trommel screen with parking brake.
- Do NOT travel with unfolded belt conveyors.
- When driving on public roads, the yellow beacon light should be turned on.

#### 2.1.6. OPERATION OF THE TROMMEL SCREEN

- The machine may be started only if it is fully operational.
- The trommel screen may only be used by appropriately trained persons.
- Do NOT start the trommel screen if its safety guards are open or removed.
- Before starting the trommel screen, make certain that there are no bystanders near the danger zones and that there are no obstacles preventing faultless machine operation.
- Ensure sufficient area for the trommel screen operation.
- Dismantle transport locks of the belts of the side conveyor and rear conveyor.
- The trommel screen may be operated only on level and stable surface.
- Charging hopper should be loaded using a proper loader. Keep a safe distance from the working loader.
- Do NOT stand near working belt conveyors and the chute.
- After completed operation of the trommel screen, set the battery switch to SWITCHED OFF position.

#### 2.1.7. SAFETY DURING BATTERY MAINTENANCE

- Do NOT use an open flame and do NOT produce sparks near the battery. Danger of explosion.
- Smoking near the battery is forbidden.
- Keep a proper sequence when disconnecting the battery terminals. First disconnect

terminal (-) and then disconnect terminal (+). The leads should be connected in reverse order.

- Before commencing electric welding, disconnect the machine from power source. To do this, disconnect both battery leads.
- Do NOT short the battery leads. Risk of fire or explosion.
- The battery contains caustic sulfuric acid. Contact of the acid with skin can cause very severe chemical burns. In case of

contamination with electrolyte, immediately take off contaminated clothes and rinse skin or eyes contaminated with acid using plenty of running water. If swallowed, do not induce vomiting. Drink plenty of cold water. Consult a doctor immediately.

- When handling the battery, use rubber gloves and protective goggles.
- The battery should be charged in rooms with efficiently operating ventilation.

### 2.1.8. SAFETY RULES DURING ENGINE MAINTENANCE

- Lost or damaged fuel filler plug should always be replaced with original replacement plug.
- Do NOT remove the fuel filler plug when the engine is running or near an open flame.
- Immediately wipe away spilt fuel. The engine and engine compartment should be kept clean and tidy.
- Do NOT approach the engine with an open flame. There is a risk that fuel fumes or oil will catch fire.
- Do not approach the rotating parts of the engine.
- Keep a safe distance from hot elements of

the engine. Risk of burn injuries.

- All maintenance and repair works should be performed only when the engine is stopped and the ignition key is removed. Before starting work, set the ground switch to SWITCHED OFF position.
- Do not unscrew the engine coolant filler plug when the engine is running or hot. Risk of burn injuries.
- Slowly unscrew the engine coolant filler plug in order to safely release coolant fumes.
- Add coolant only when the engine is cold.

### 2.1.9. SAFE OPERATION OF BELT CONVEYORS

- Do NOT stand on belt conveyors during machine operation and standstill.
- Rear and side belt conveyors may be unfolded only by one person. The conveyor should be unfolded in a smooth manner, according to proper sequence.

- Before unfolding the conveyors, make sure there are no bystanders near the machine.
- Do NOT unfold the conveyors if steel securing cables are disassembled.
- Before beginning work, make sure that all transport locks are dismantled.

- Do not stand under the conveyor during its working and unfolding.
- Do not allow overloading of conveyors. If a large amount of material is accumulated, reduce rotational speed of the screening drum.
- The belt conveyors (rear conveyor and side conveyor) are equipped with emergency safety switches which are used for stopping the trommel screen if health and life of people is endangered or if there is a risk of serious machine damage. After emergency stopping of the trommel screen pull the emergency switch mushroom push-button, wait for 10 seconds and restart the engine.
- After finishing work, remove remains of screened material from conveyor belts.

#### 2.1.10. TYRES

- When working with tyres, the trommel screen should be secured against rolling by placing chocks under the wheels. Wheels can be taken off only when the trommel screen is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Regularly check if the nuts fixing the wheels are properly tightened.
- Avoid potholes, sudden manoeuvres or high speeds when turning.
- Regularly check air pressure in the tyres.
- Protect tyre valves using suitable caps to avoid soiling.

#### 2.1.11. SAFETY WHEN WORKING WITH MAGNETIC SEPARATOR

- Activities associated with the assembly, installation, repair and servicing of equipment can be performed by trained personnel only.
- Magnetic roller is a source of constant magnetic field. A safe distance from the roller is 2 meters.
- Persons with pacemakers or similar devices must not approach to a distance of less than 2 meters from the magnetic roller.
- The magnetic field may have a negative impact on living organisms, so do not stay near the equipment for longer than 8 hours during a day (50 cm from the equipment).
- The magnetic roller may attract clothing elements such as buttons, zippers, steel tools, which is why you must not approach the magnetic roller during operation – the risk of crushing the limbs.
- The magnetic field of the roller may interfere or permanently damage the electrical or electronic equipment. A safe distance from the roller is 2 meters.

### 2.1.12. REMOTE CONTROL SYSTEM OPERATION

- The trommel screen can be remotely controlled trained adults only.
- The trommel screen must not be used by unauthorized persons or those under the influence of alcohol, drugs or other intoxicants.
- Do NOT leave the remote control unattended.
- After you finish work, make sure that the remote controller is disabled.
- The system operator must ensure adequate visibility of the trommel screen working area.
- In the event of damage to the remote control or the receiver, report it to the dealership for repair or replacement.
- Do not independently adjust the transmitting and receiving frequency or contradict any other instructions in this book.

## 2.2 DESCRIPTION OF RESIDUAL RISK

Pronar Sp. z o. o. in Narew has made every effort to eliminate the risk of accidents. There is, however, a certain residual risk, which could lead to an accident, and this is connected mainly with the actions described below:

- use of the trommel screen for purposes other than those for which it is intended by the Manufacturer,
- being between the tractor and the trommel screen while hitching,
- being on the machine while the engine is running,
- operating the trommel screen with removed or faulty safety guards,
- not maintaining a safe distance while the trommel screen is in operation,
- operation of the machine by persons under the influence of alcohol,
- cleaning, maintenance and technical checks of the machine,
- work of machine on unstable and sloping surface,

- making modifications to the machine without the consent of the Manufacturer,
- presence of persons, animals or obstacles in areas invisible from the operator's position.

The residual risk may be kept to a minimum by following the recommendations below:

- prudent and unhurried operation of the machine,
- maintaining a safe distance from forbidden or dangerous places,
- sensible adherence to the remarks and recommendations stated in the Operator's Manual,
- carrying out repair and maintenance work according to safe operation principles, performing maintenance and repair work by trained persons,
- using close fitting protective clothing, and appropriate tools,
- ensuring unauthorised persons have no access to the machine, especially children,
- a ban on being on the machine during travel,

loading and screening.

## 2.3 INFORMATION AND WARNING DECALS

The trommel screen is marked with information and warning decals referred to in table (2.1). The symbols are positioned as presented in figures (2.2) to (2.6). Throughout the time it is in use, the user of the machine is obliged to take care that notices and warning and information symbols located on the trommel screen are clear and legible. In the event of their destruction, they must be replaced with new ones. Safety decals can be purchased

from the Manufacturer of the trommel screen or your PRONAR dealer. Part numbers of information decals are given in table (2.1) and in SPARE PARTS LIST. New assemblies, changed during repair, must be labelled once again with the appropriate safety signs. When cleaning your trommel screen do not use solvents which may damage the label coating. Do not use a strong water jet.

**Table 2.1.** Information and warning decals

ITEM	DESCRIPTION	PART NUMBER
1	Information decal.	422N-97000003
2	Information decal.	422N-97000001
3	Attention! Before starting work, carefully read the <i>OPERATOR'S MANUAL</i> .	70RPN-00.00.00.04
4	Before beginning servicing or repairs, switch off the tractor's engine and the trommel screen's engine and remove keys from ignition. Ensure that unauthorised persons do not have access to the tractor cab.	70RPN-00.00.00.05
5	Grease the trommel screen according to the lubrication schedule included in the <i>OPERATOR'S MANUAL</i> .	104RPN-00.00.00.04
6	Danger of crushing or severing.	123N-00000004

ITEM	DESCRIPTION	PART NUMBER
7	Information decal	187N-00000033C
8	Information decal	187N-00000016C
9	Air pressure in the tyres	67N-00000004
10	Information decal (optional)	361N-71000024
11	Information decal of connection socket of 12V electrical system.	361n-70000001
12	Information decal. The trommel screen is equipped with EBS system.	II39799F
13	Before driving off, make sure that the EBS supply conduit is correctly connected.	II39796F
14	Control connectors information decal	
15	Information decal. Support leg hydraulic system valve positions.	450N-03000004
16	Warning decal. Persons with pacemakers or similar devices must not stay in vicinity of strong magnetic field. The safe distance is 2 metres.	
17	Warning decal. Risk of damage to electrical or electronic devices placed near the magnetic roller. The safe distance is 2 metres.	
18	Hydraulic pump information decal.	450N-03000002

<b>ITEM</b>	<b>DESCRIPTION</b>	<b>PART NUMBER</b>
19	Hydraulic support leg control system decal.	450N-03000005
20	Information decal.	361N-90010006
21	Information decal - lateral conveyor disassembly order.	450N-97000004



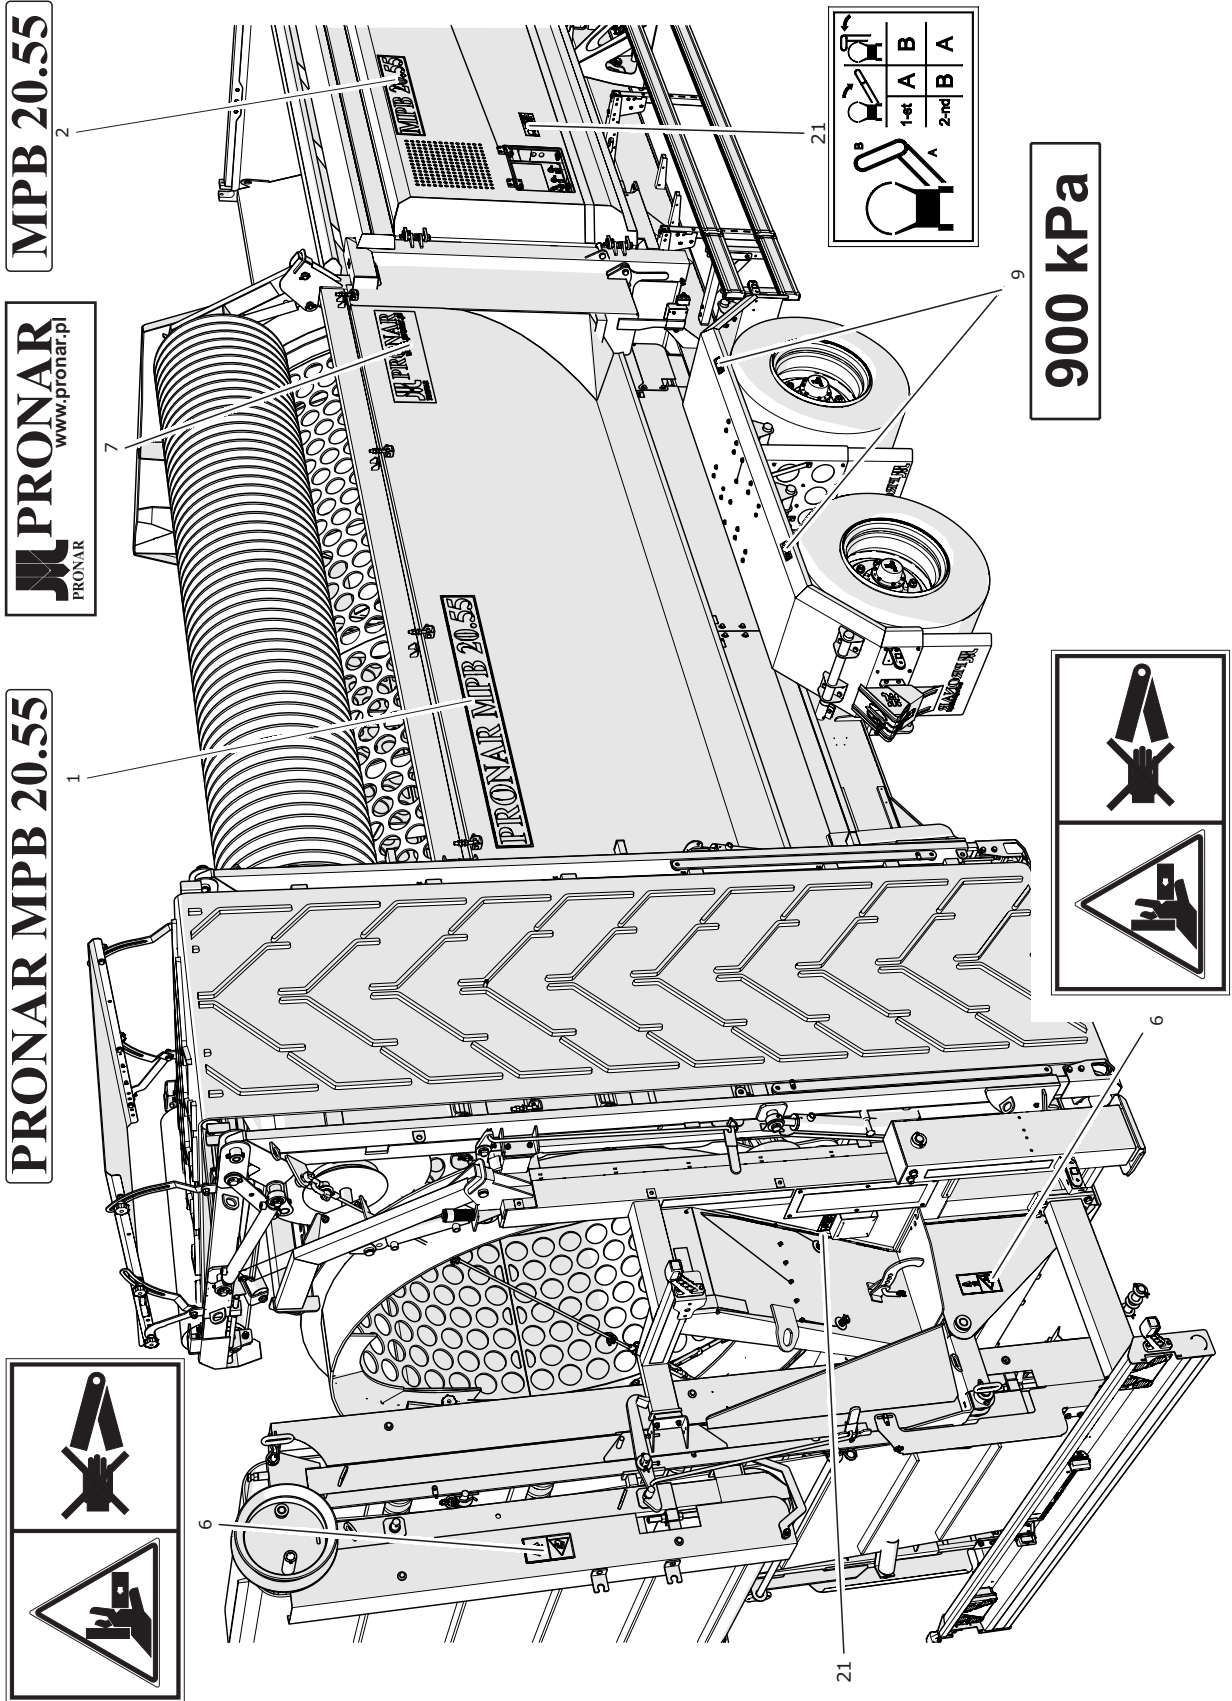


Figure 2.2 Locations of information and warning decals, view 1.

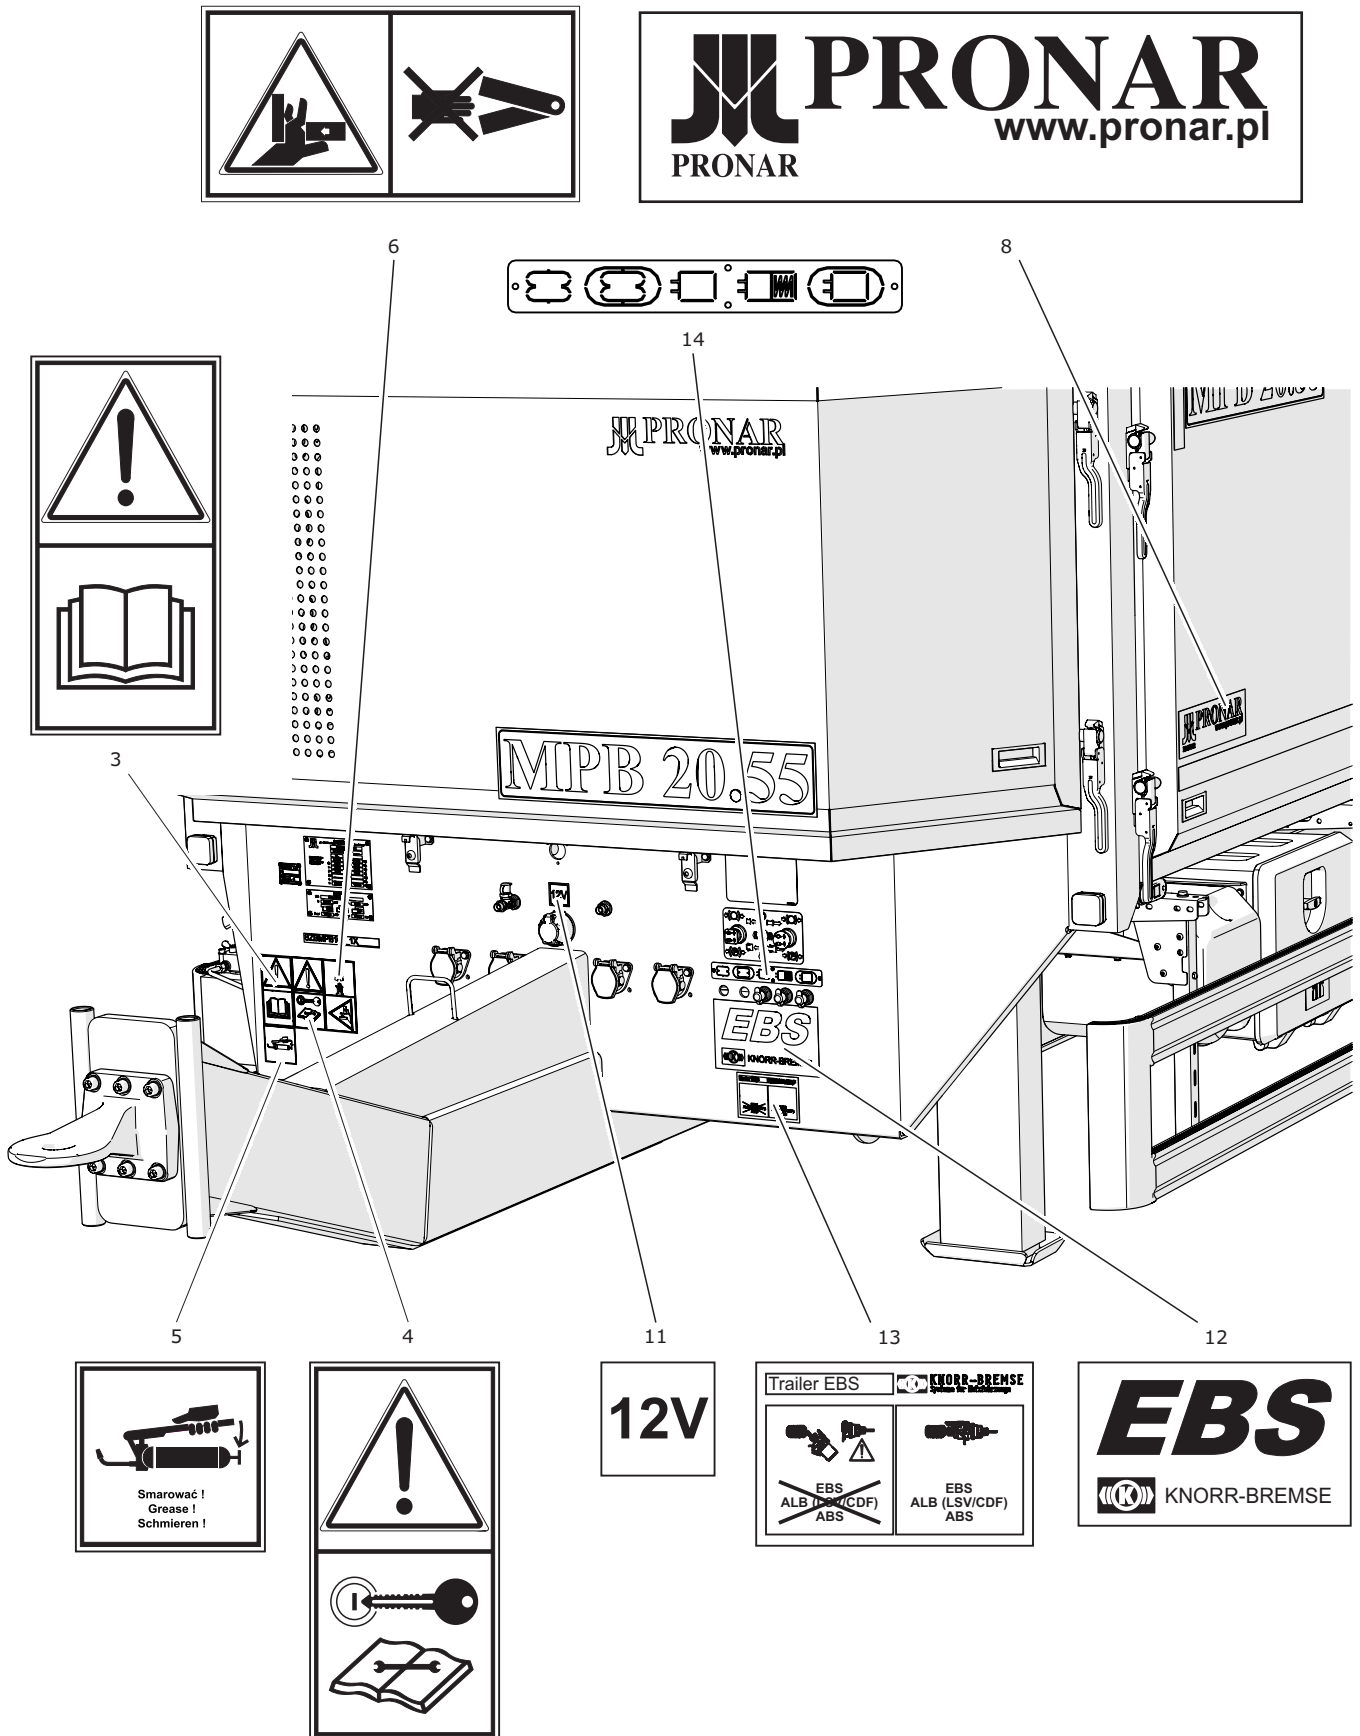


Figure 2.3 Locations of information and warning decals, view 2.

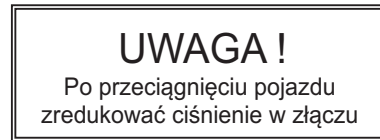
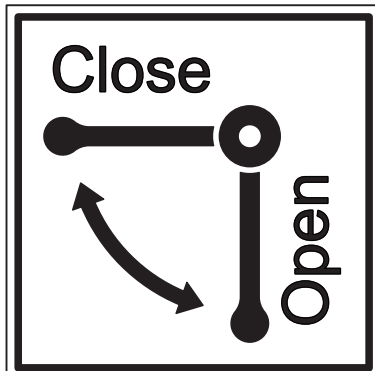
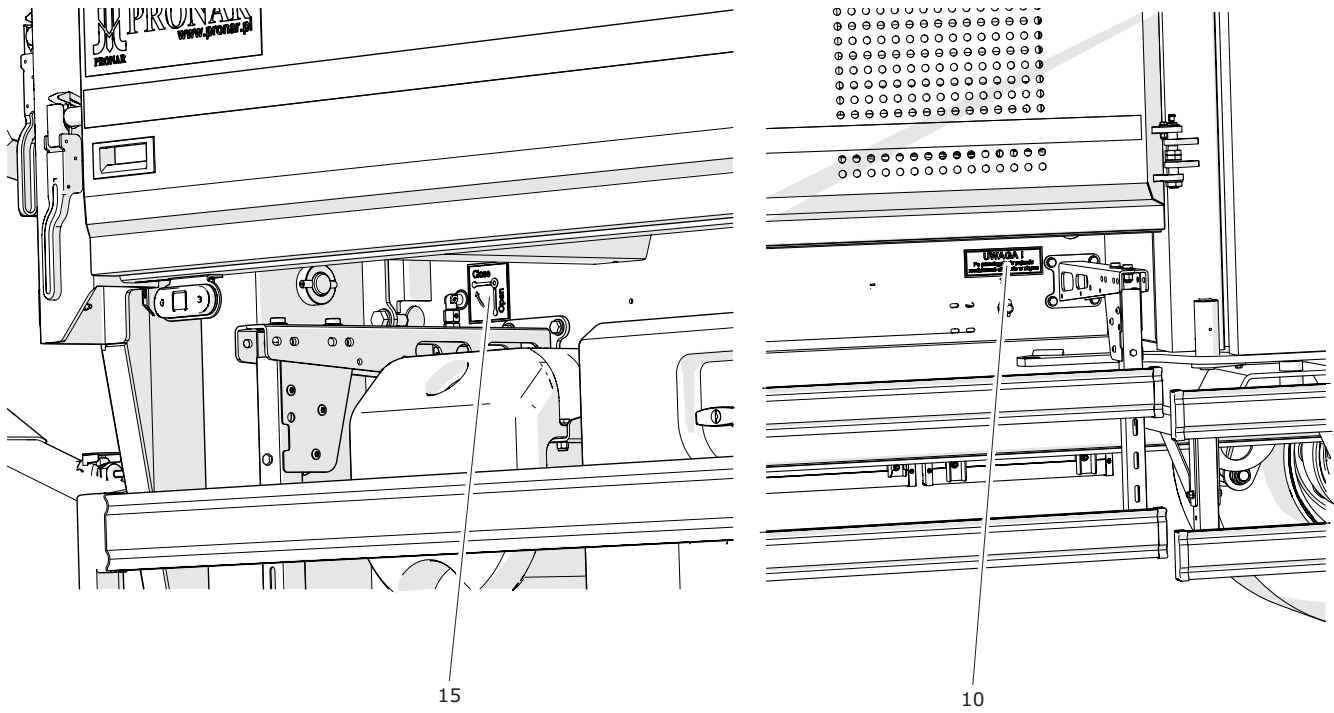


Figure 2.4 Locations of information and warning decals, view 3.

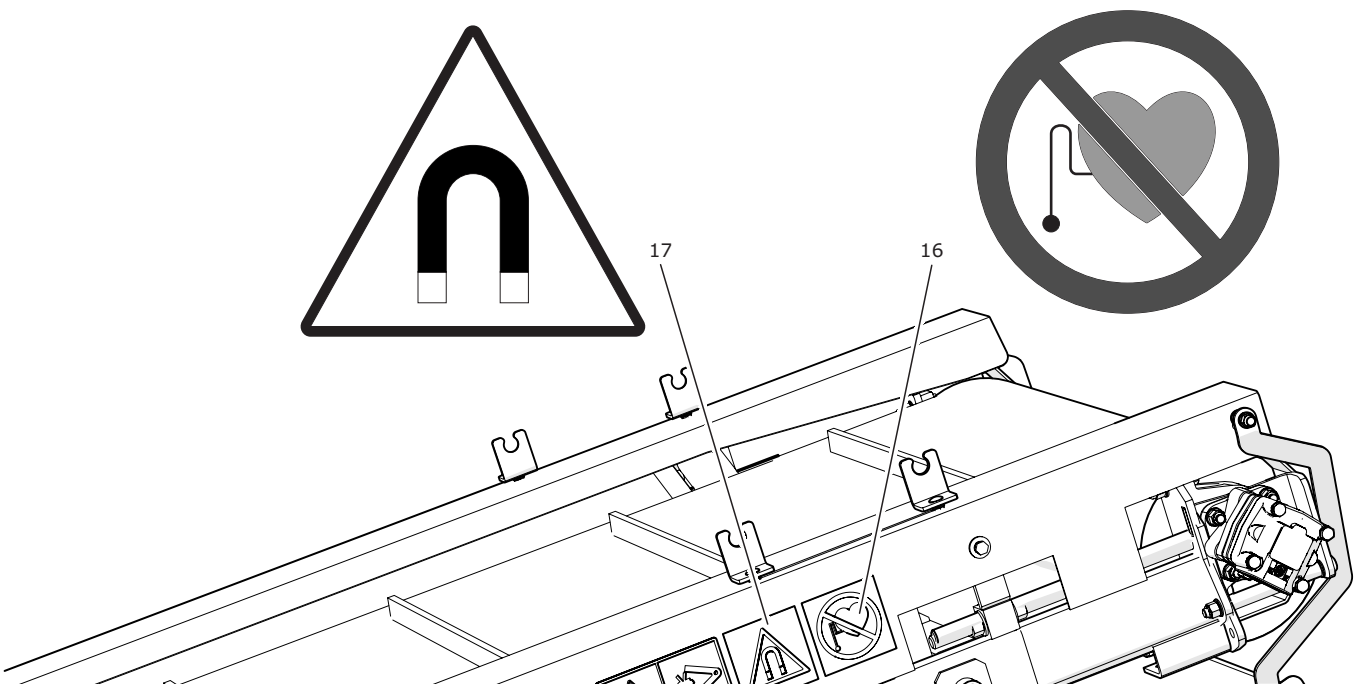


Figure 2.5 Locations of information and warning decals, view 4.

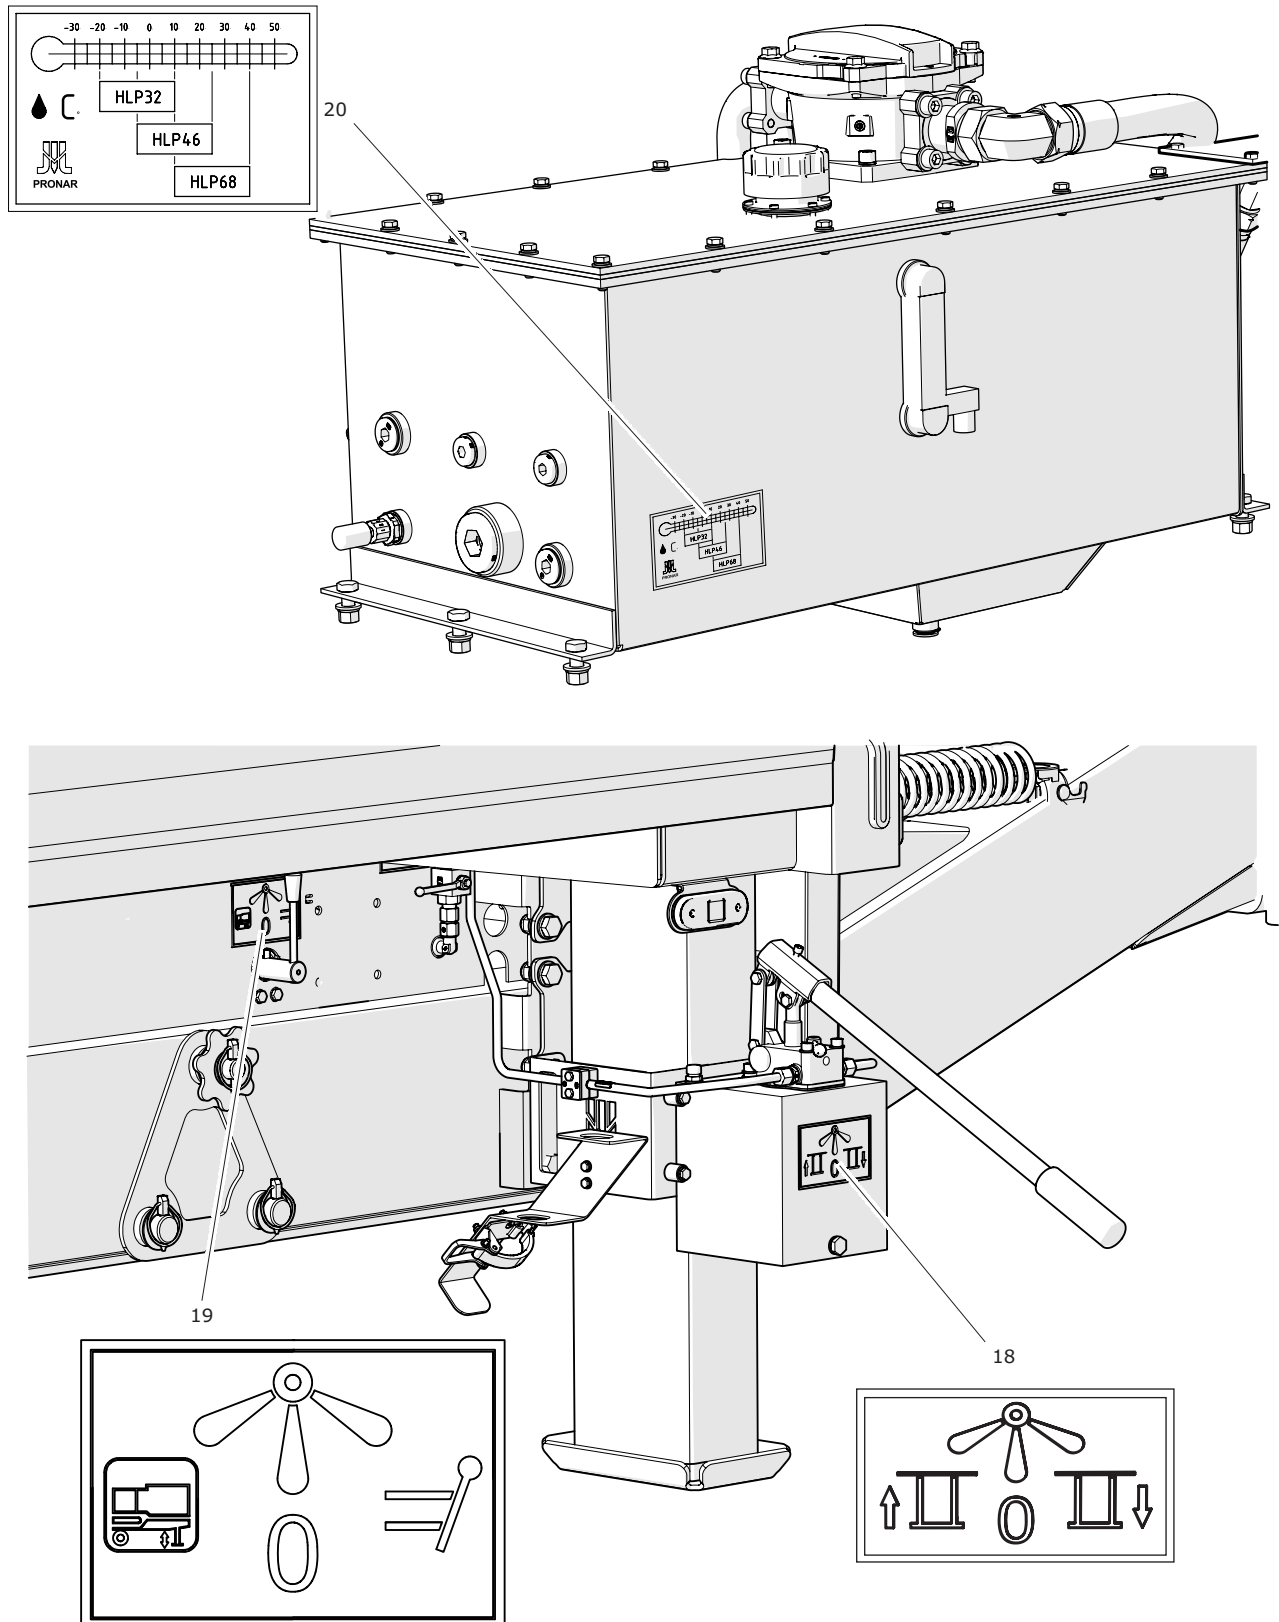


Figure 2.6 Locations of information and warning decals, view 5.

SECTION

**3**

---

**DESIGN AND OPERATION**

## 3.1 SPECIFICATION

Table 3.1. Basic technical specification of the trommel screen

CONTENTS	UNIT	MPB20.55
<b>Dimensions</b>		
<b>Transport position</b>		
Length	mm	12,000
Width	mm	2,550
Height	mm	4,000
<b>Working position</b>		
Length <sup>(1)</sup>	mm	~ 15,200
Width <sup>(1)</sup>	mm	~ 6,500
Height	mm	~3,900
<b>Axle system</b>		
Axle base	mm	1,350
Wheel track	mm	2,045
<b>Screening drum</b>		
Effective screen area	m <sup>2</sup>	29.8
External diameter of screen surface	mm	2,000
Length	mm	5,500
<b>Lateral belt conveyor</b>		
Belt width	mm	1,000
Total length	mm	4,900
<b>Rear belt conveyor</b>		
Belt width	mm	1,000
Total length	mm	4,900
<b>Other information</b>		
Maximum design speed	km/h	100

CONTENTS	UNIT	MPB20.55
Permissible vertical hitch load	kg	1,000
Electrical system voltage	V	24 / 12
Sound power level LWA	dB (A)	
Acoustic pressure level at working position	dB (A)	
<b>Weights</b>		
Tare weight	kg	16,000
Permissible weight of screening drum	kg	2,300
<b>Magnetic drum</b>		
Magnetic field range	mm	70
Maximum conveyor belt speed	m/s	0.7
Operating temperature	C	-20 ÷ +40

(1) - when conveyor unfolded to 60°


## 3.2 TROMMEL SCREEN – FEATURES AND COMPONENTS

Mobile trommel screen features and components are presented in figures (3.1), (3.2) and (3.3).

Material to be screened is loaded to charging hopper (1), figure (3.1), and then transported to screening drum by means of belt conveyor (2). Engine, hydraulic pump, hydraulic manifolds, control panel and hydraulic oil tank are located behind shield (5).

Material delivered from charging hopper is screened during transport in screening drum (1) — Figure (3.3). As a result of drum rotation, small fractions of material fall onto feeder located below the drum.


Larger fractions of material are transported further to the rear belt feeder which discharges material onto a pile. Smaller fractions of material fall onto transverse belt feeder (4), figure (3.3), and then onto side conveyor (2), figure (3.2).

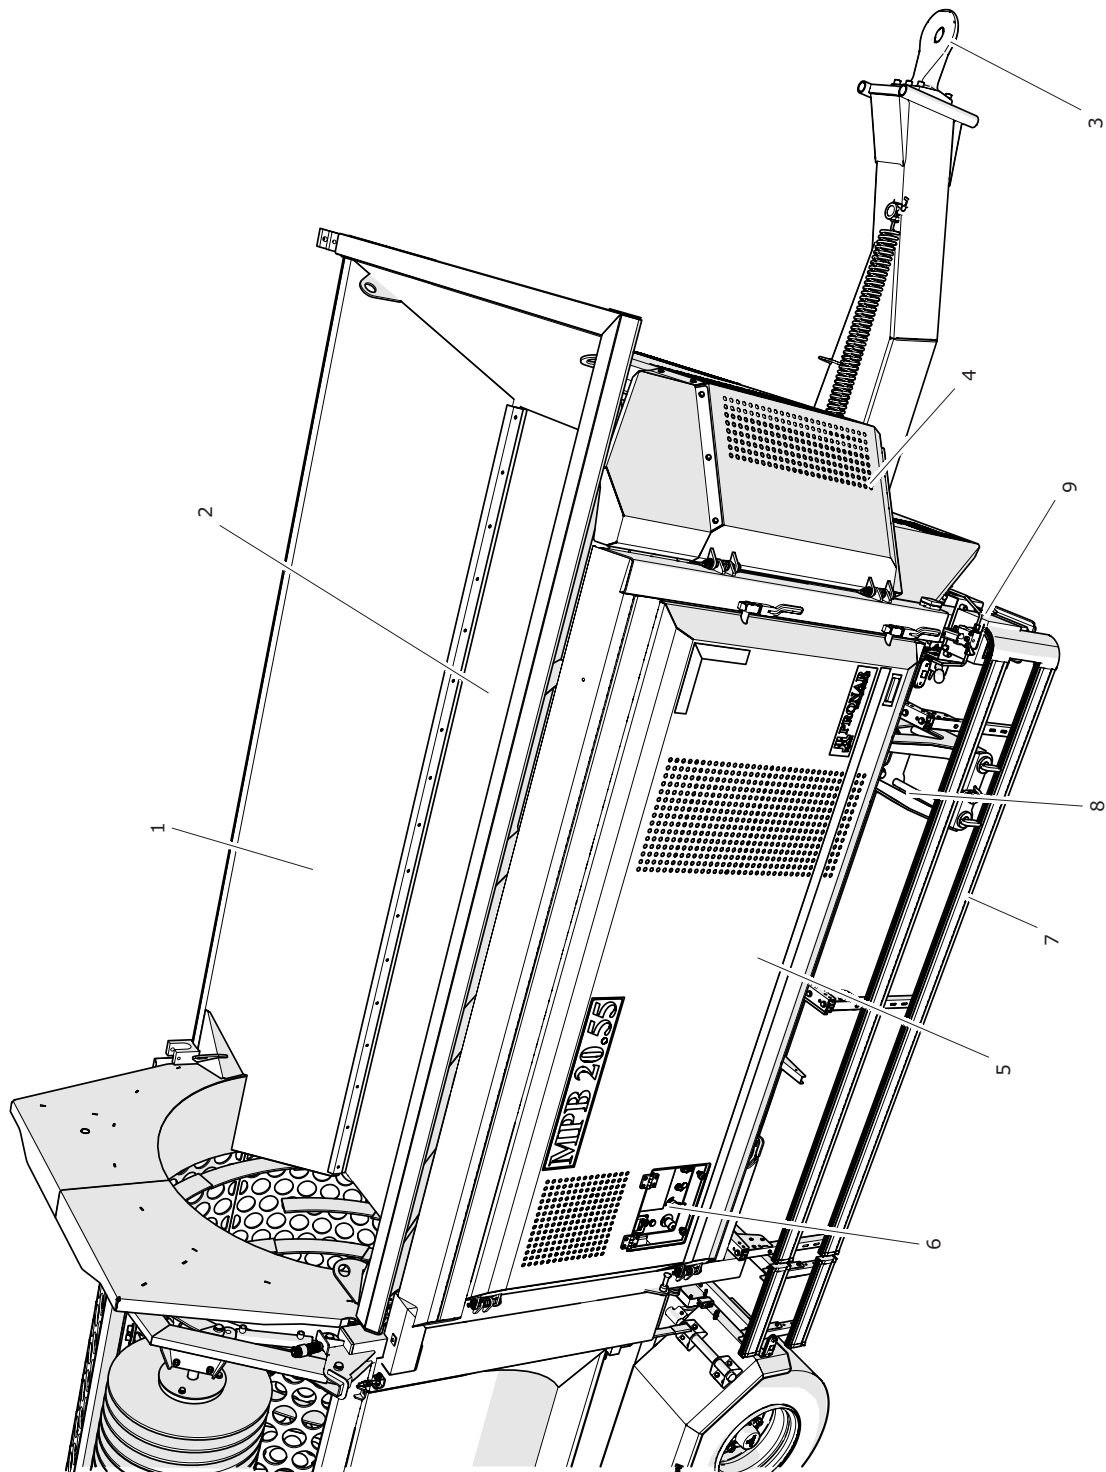

**Figure 3.1** Trommel screen features and components, view 1


- |                                     |                                     |                              |
|-------------------------------------|-------------------------------------|------------------------------|
| (1) charging hopper                 | (2) charging hopper conveyor        | (3) drawbar hitching eye     |
| (4) front shield of charging hopper | (5) right shield of charging hopper | (6) control panel door       |
| (7) lateral overrun guards          | (8) drawbar hitching eye cap        | (9) front hydraulic supports |



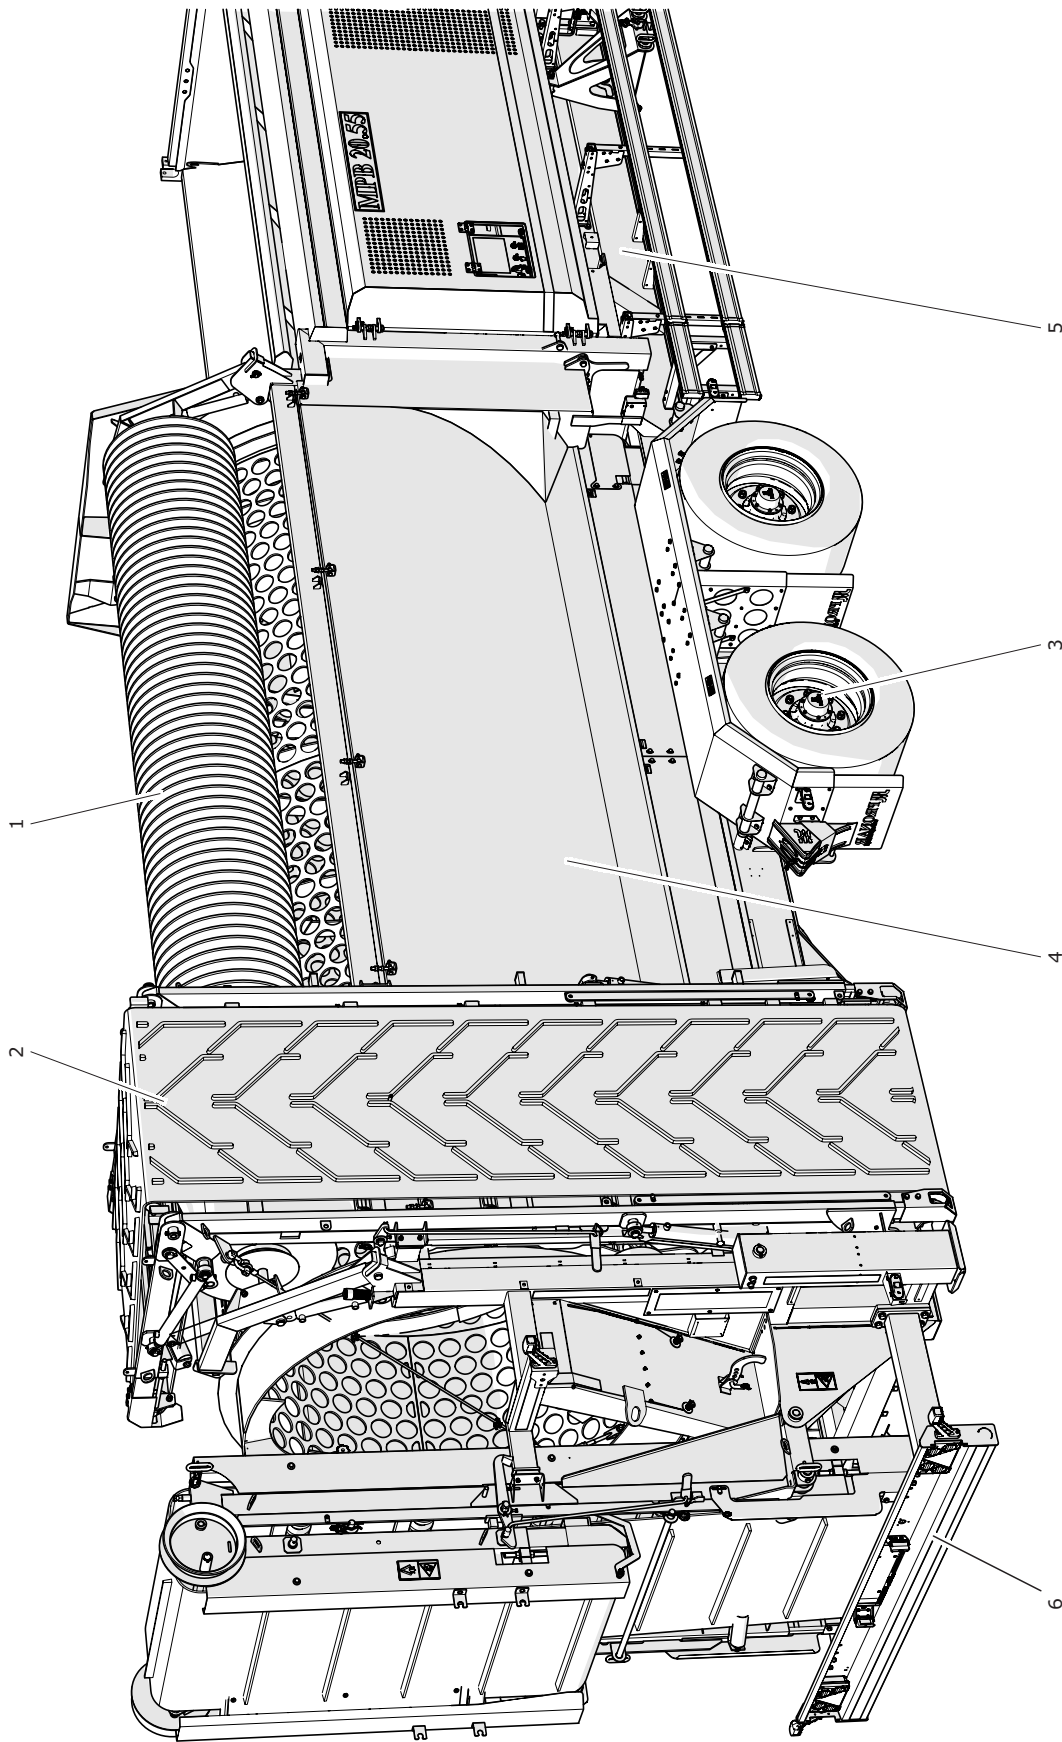

**Figure 3.2** Trommel screen features and components, view 2


- |                                    |                   |                              |
|------------------------------------|-------------------|------------------------------|
| (1) brush                          | (2) side conveyor | (3) axle system              |
| (4) right shield of screening drum | (5) lower frame   | (6) rear lights support beam |

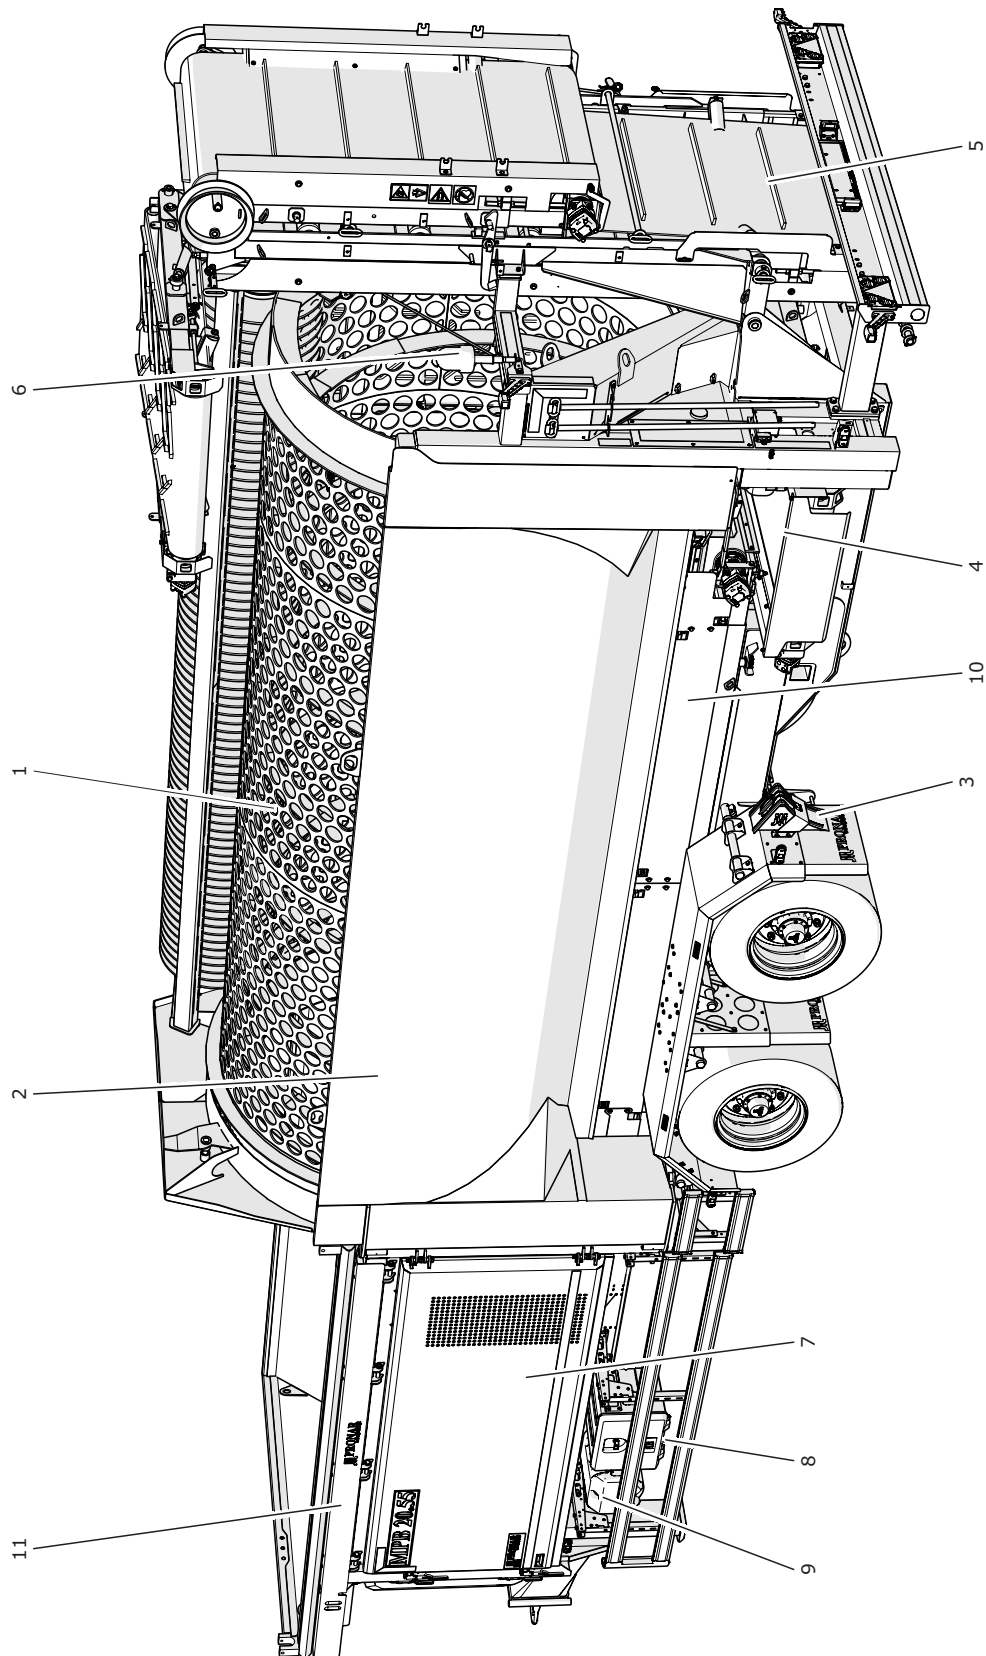

**Figure 3.3** Trommel screen features and components, view 3


- |                                    |                                   |                         |
|------------------------------------|-----------------------------------|-------------------------|
| (1) screening drum                 | (2) left shield of screening drum | (3) wheel chock         |
| (4) transverse conveyor            | (5) rear conveyor                 | (6) yellow beacon light |
| (7) left shield of charging hopper | (8) Toolbox                       | (9) water tank (option) |
| (10) longitudinal conveyor         | (11) chute (option)               |                         |

### 3.3 ENGINE DESIGN

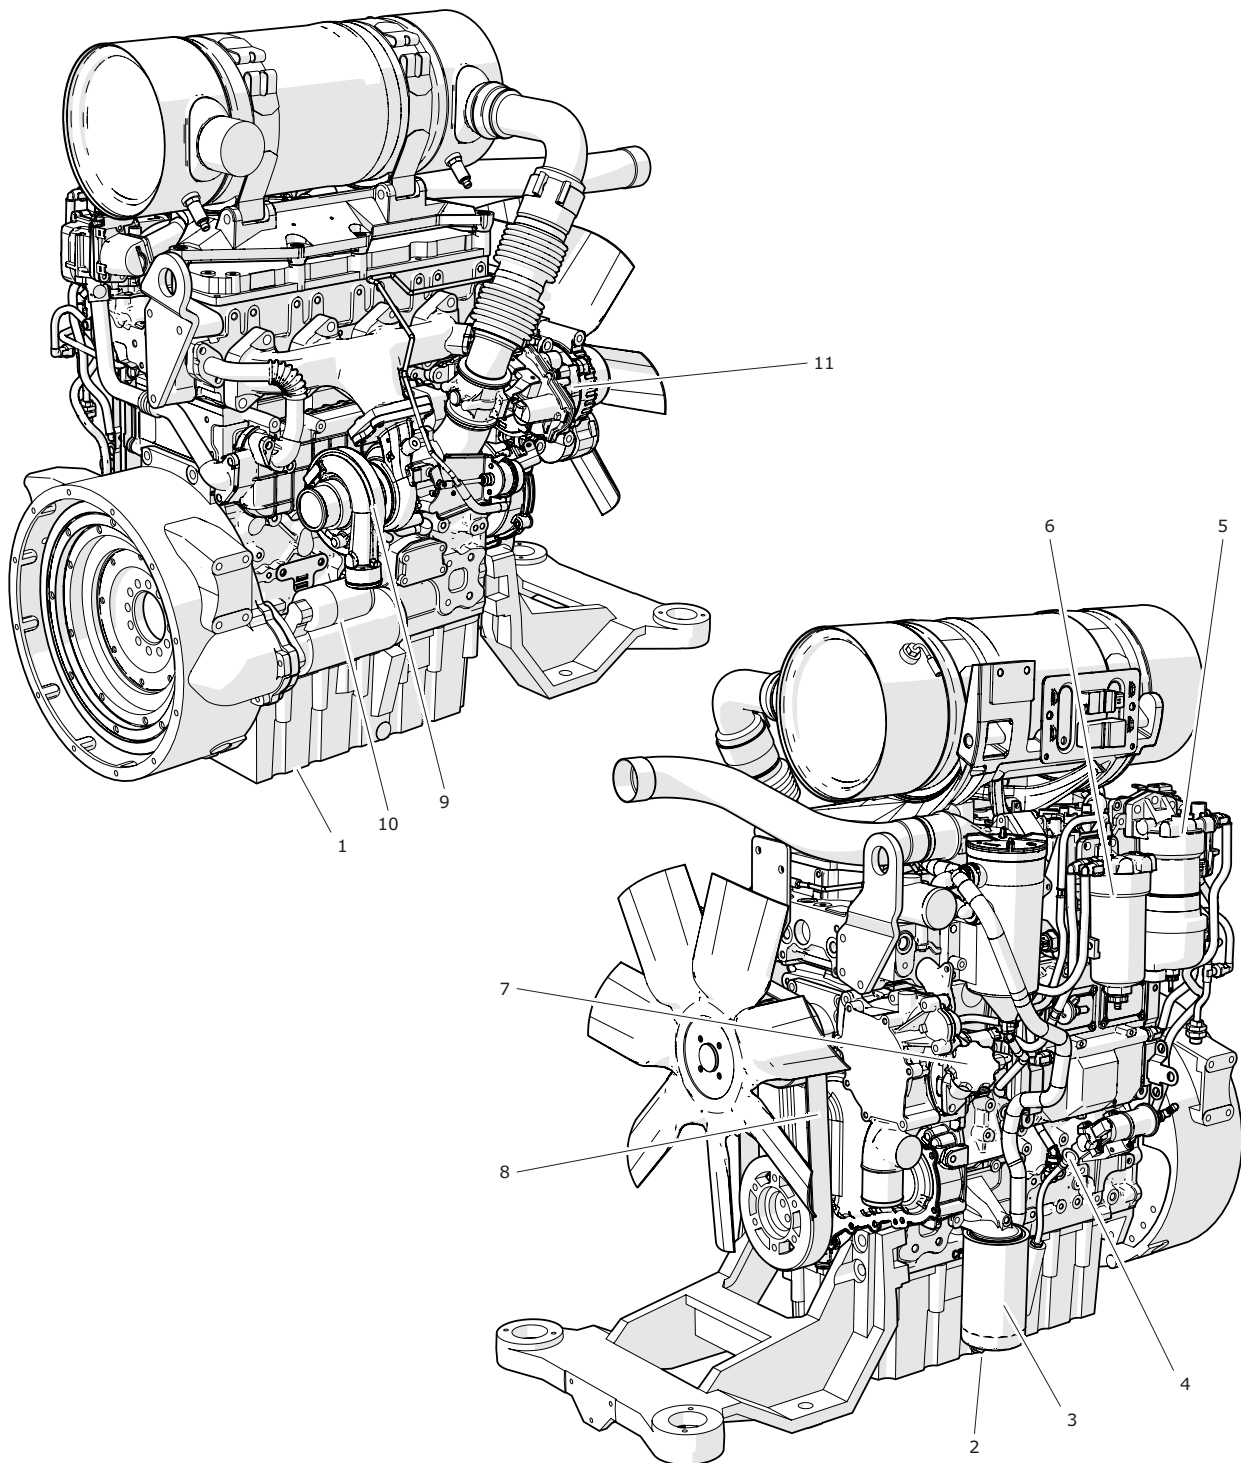

**Figure 3.4** CATERPILLAR C4.4 IOPU engine features and components

- |                     |                     |                      |
|---------------------|---------------------|----------------------|
| (1) oil pan         | (2) oil drain plug  | (3) oil filter       |
| (4) oil dipstick    | (5) fuel pre-filter | (6) fuel fine filter |
| (7) oil filler plug | (8) vee-belt        | (9) turbo compressor |
| (10) starter        | (11) alternator     |                      |

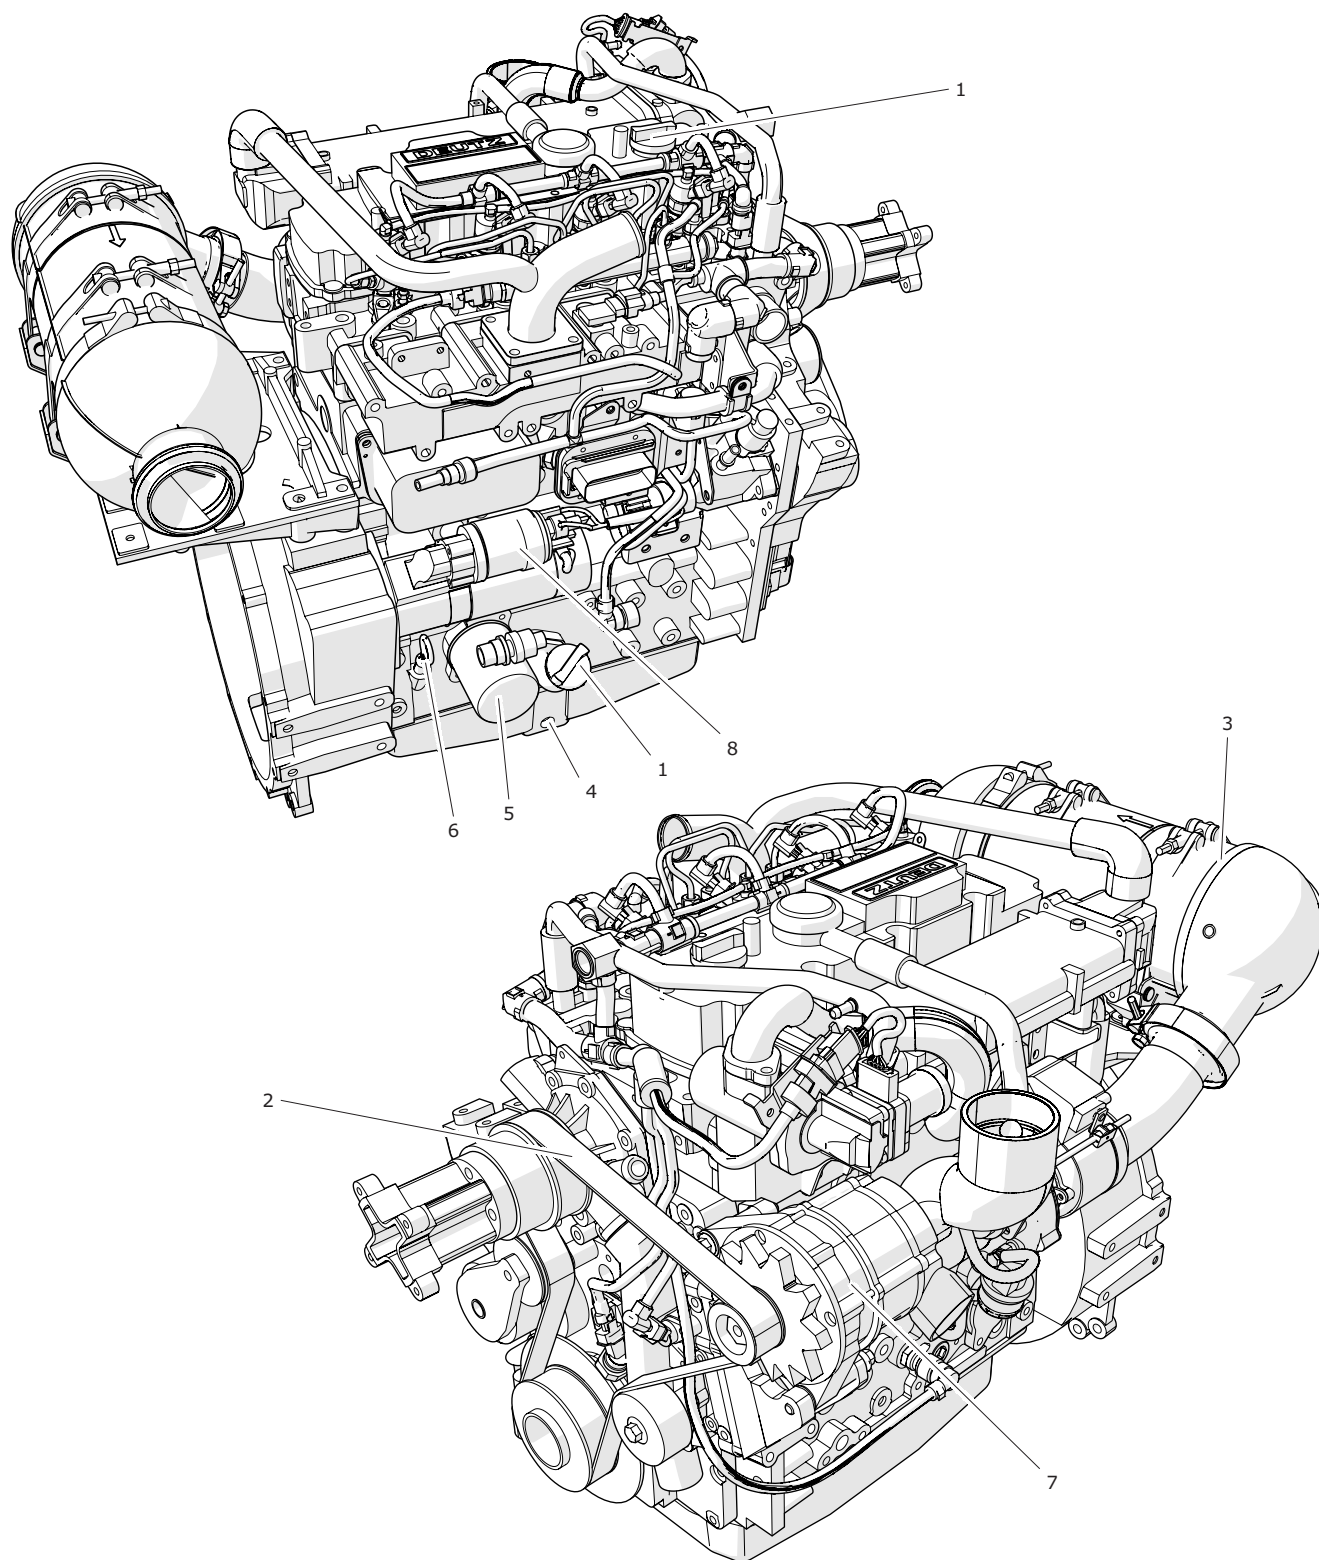

**Figure 3.5** DEUTZ TCD3.6L4 engine features and components

(1) oil filler

(2) vee-belt

(3) catalytic converter

(4) oil filler plug

(5) oil filter

(6) oil dipstick

(7) alternator

(8) starter

**Table 3.2.** The basic engine parameters

NAME	UNIT	CATERPILLAR	DEUTZ
Type	-	C4.4IOPU	TCD3.6L4
Number of cylinders	-	4	4
Maximum power/speed	kW/rpm	74.5 / 2 200	74.4 / 2 300
Power / rpm	kW/rpm	72 / 1 600	68 / 1600
Piston diameter	mm	105	98
Stroke	mm	127	120
Engine displacement	cm <sup>3</sup>	4,400	3,621
Toxicity standard	-	Stage III B	Stage III B

### 3.4 ELECTRIC LIGHTING SYSTEM

Electrical lighting system of mobile trommel screen is designed for 24V or 12 V DC supply. METHODS OF CONNECTING THE TROMMEL SCREEN

24V – a 15-conductor connection lead, a 15-pin socket in truck tractor and in trommel screen

24V – conversion cable (2x7-conductor cable to 1x15-conductor cable), two 7-pin sockets in truck tractor (according to ISO 1185 and ISO 3731

standards), 15-pin socket in trommel screen 12V – a 7-conductor lead, a 7-pin socket in truck tractor and in trommel screen.

If the trommel screen is not connected to truck tractor, the lead plug point must be placed in holding socket (4) specially provided for that purpose — Figure (3.6).


### 3.5 PNEUMATIC BRAKE SYSTEM

As standard, the trommel screen is equipped with TEBS G2 braking system (Trailer Electronic Braking System). The braking system is equipped with Antilock Braking System (ABS).

Proper operation of the braking system is possible only when two pneumatic connections (red supply connection; yellow control connection) and 7-pin EBS electric connection are connected (ISO7638+CAN). During transport on non-public


roads or in working location, the trommel screen may be connected to a standard 12V electric connection of agricultural tractor. If the pneumatic supply conduit is damaged, the trommel screen will be braked by diaphragm-spring cylinders located on the rear axle.

Depending on machine version, the trommel screen is equipped with one of the two available variants of braking system. The difference

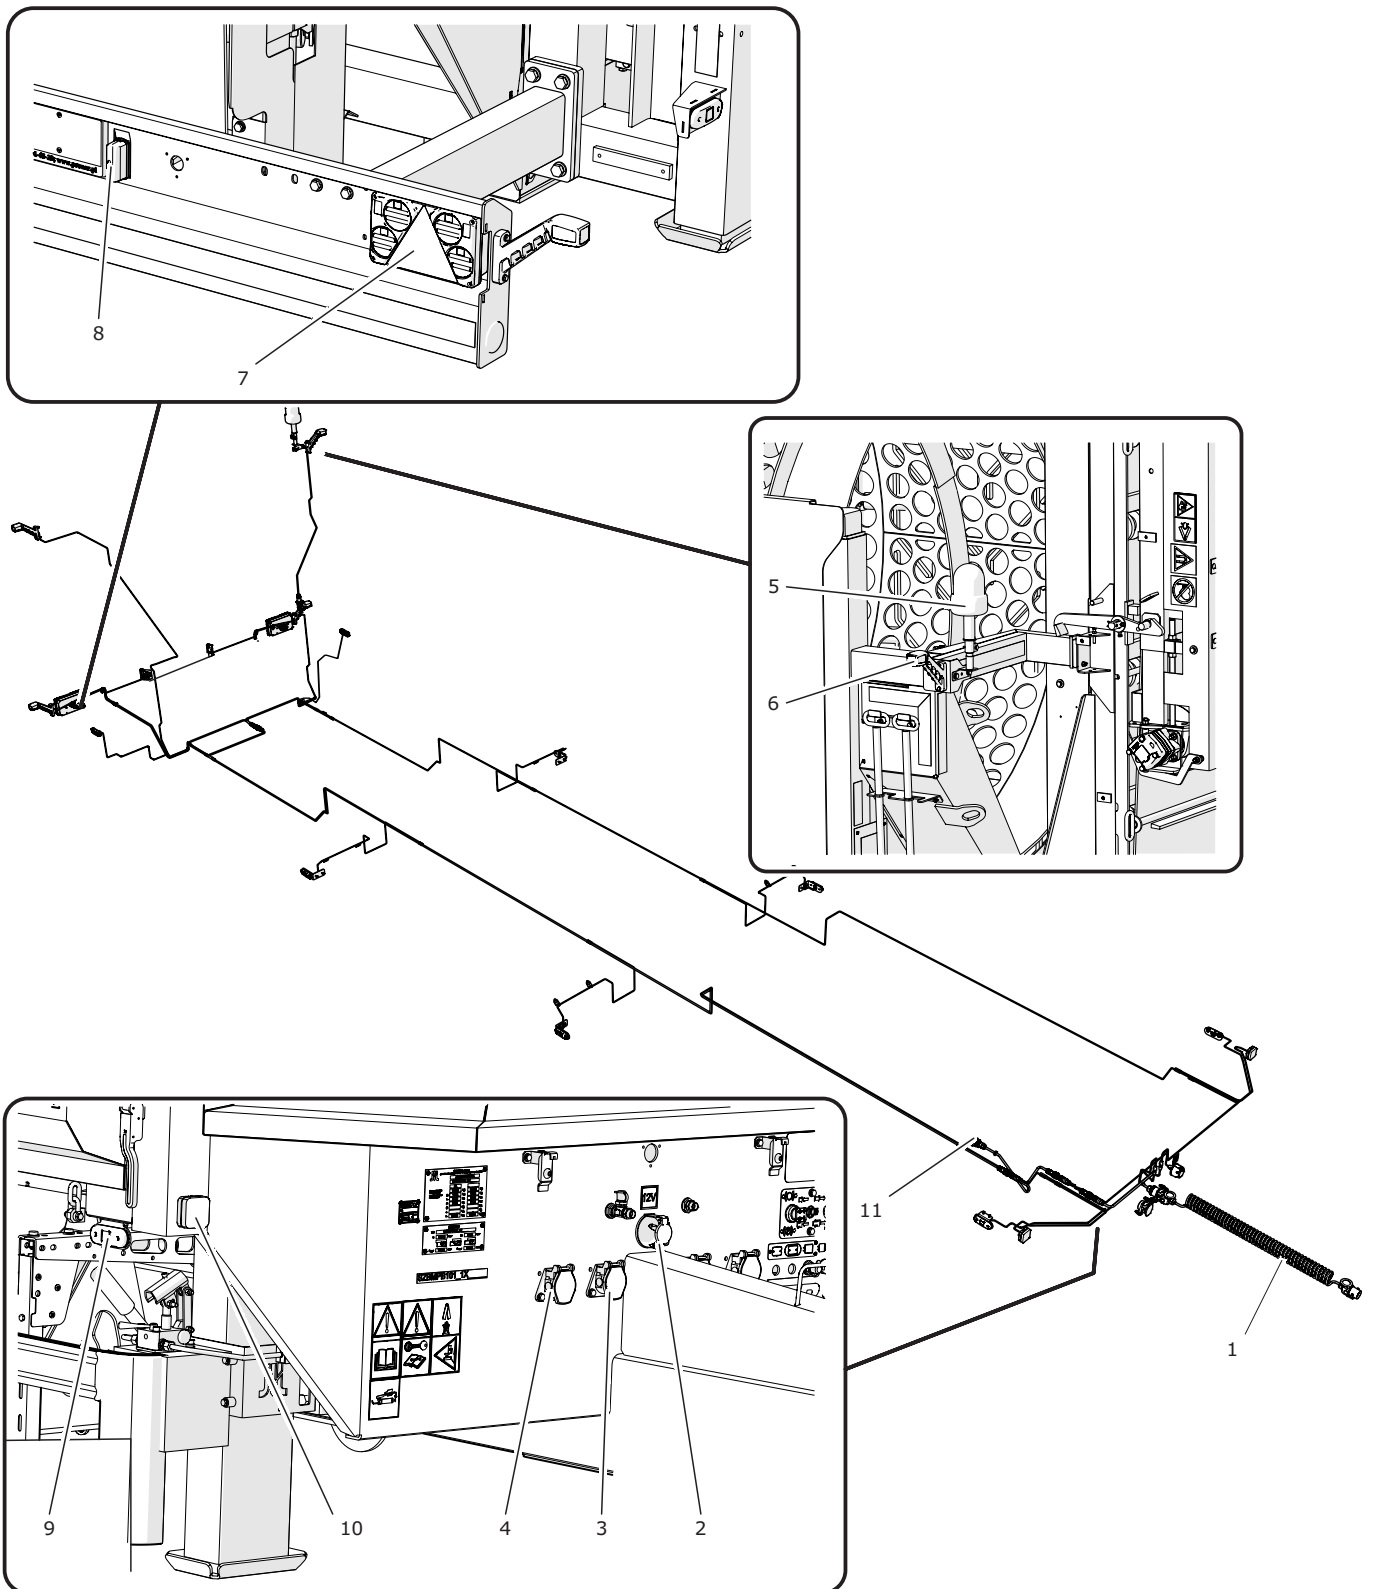

**Figure 3.6** Design of electrical lighting system


- |                          |   |                        |
|--------------------------|---|------------------------|
| (1) connection lead      | (2) 7-pin socket (12V)                              | (3) 15-pin socket      |
| (4) holding socket       | (5) yellow beacon light                             | (6) clearance lamp     |
| (7) rear lamp assembly   | (8) license plate light                             | (9) side parking light |
| (10) front parking light | (11) connection of emergency supply of brake system |                        |

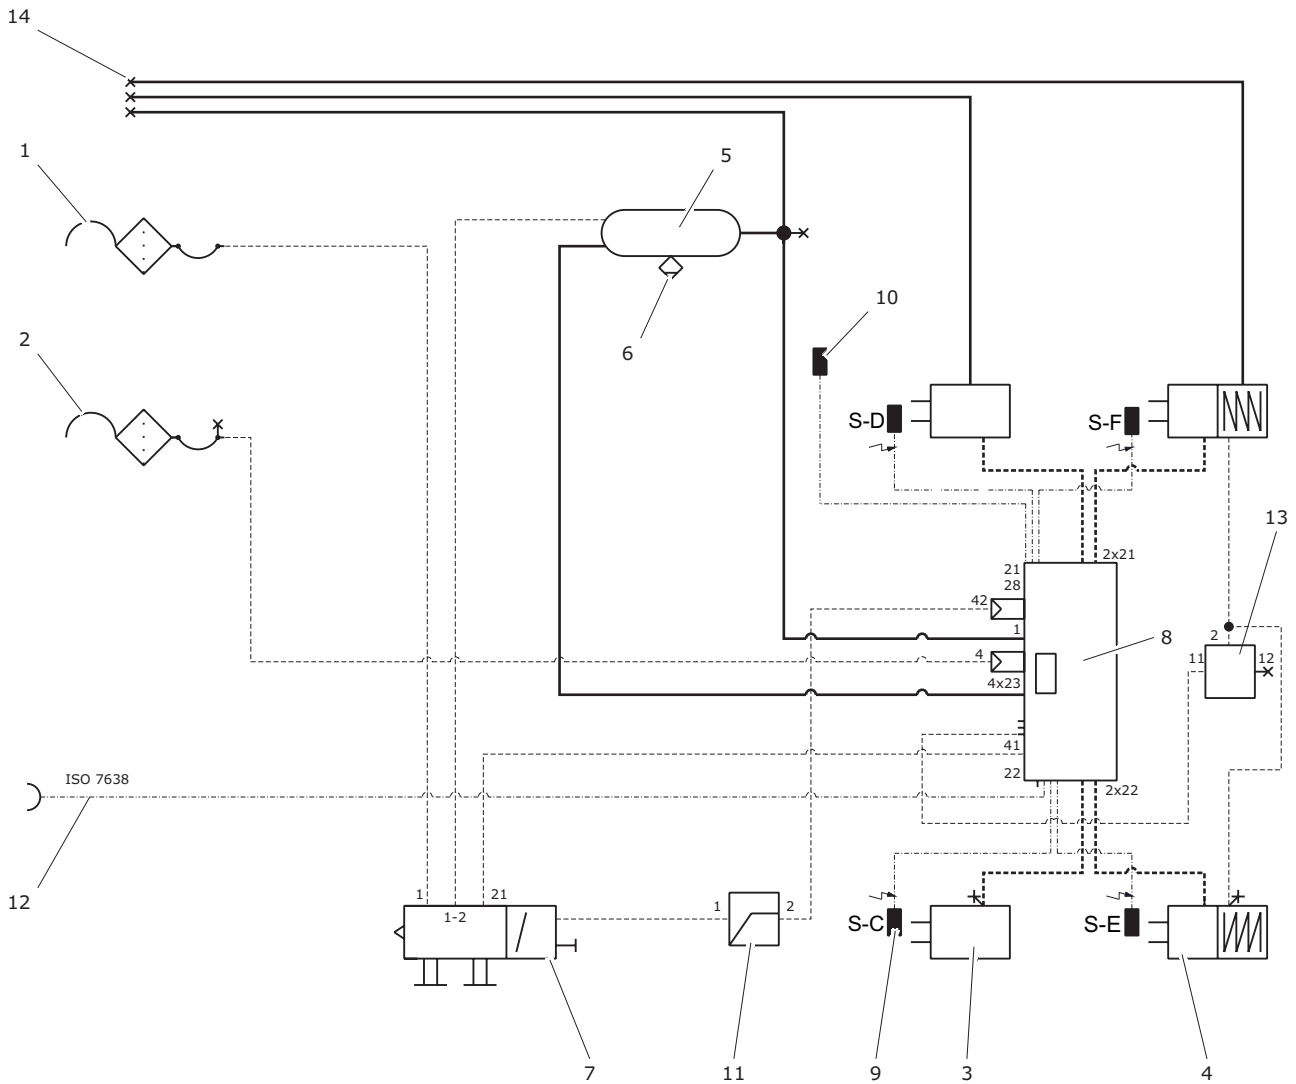

**Figure 3.7** Pneumatic brake system diagram, variant 1

- |   |                              |                                  |
|---|------------------------------|----------------------------------|
| (1) control connection                  | (2) supply connection        | (3) diaphragm pneumatic cylinder |
| (4) diaphragm pneumatic spring cylinder | (5) air tank (6) drain valve | (9) ABS sensor (2 or 4 pieces)   |
| (7) loosening-parking valve             | (8) TEBS module              | (12) brake system supply         |
| (10) ALB sensor (option)                | (11) pressure limiting valve | (13) three-way valve             |
| (14) diagnostic connections             |                              |                                  |


between the braking systems consists in the use of an additional three-way valve (13), figure (3.7), to which a pneumatic connection is attached at output 12. The connection is designed for releasing diaphragm cylinders by means of air supplied from outside (e.g. from compressor). Detailed information concerning the operation is given in section 4.

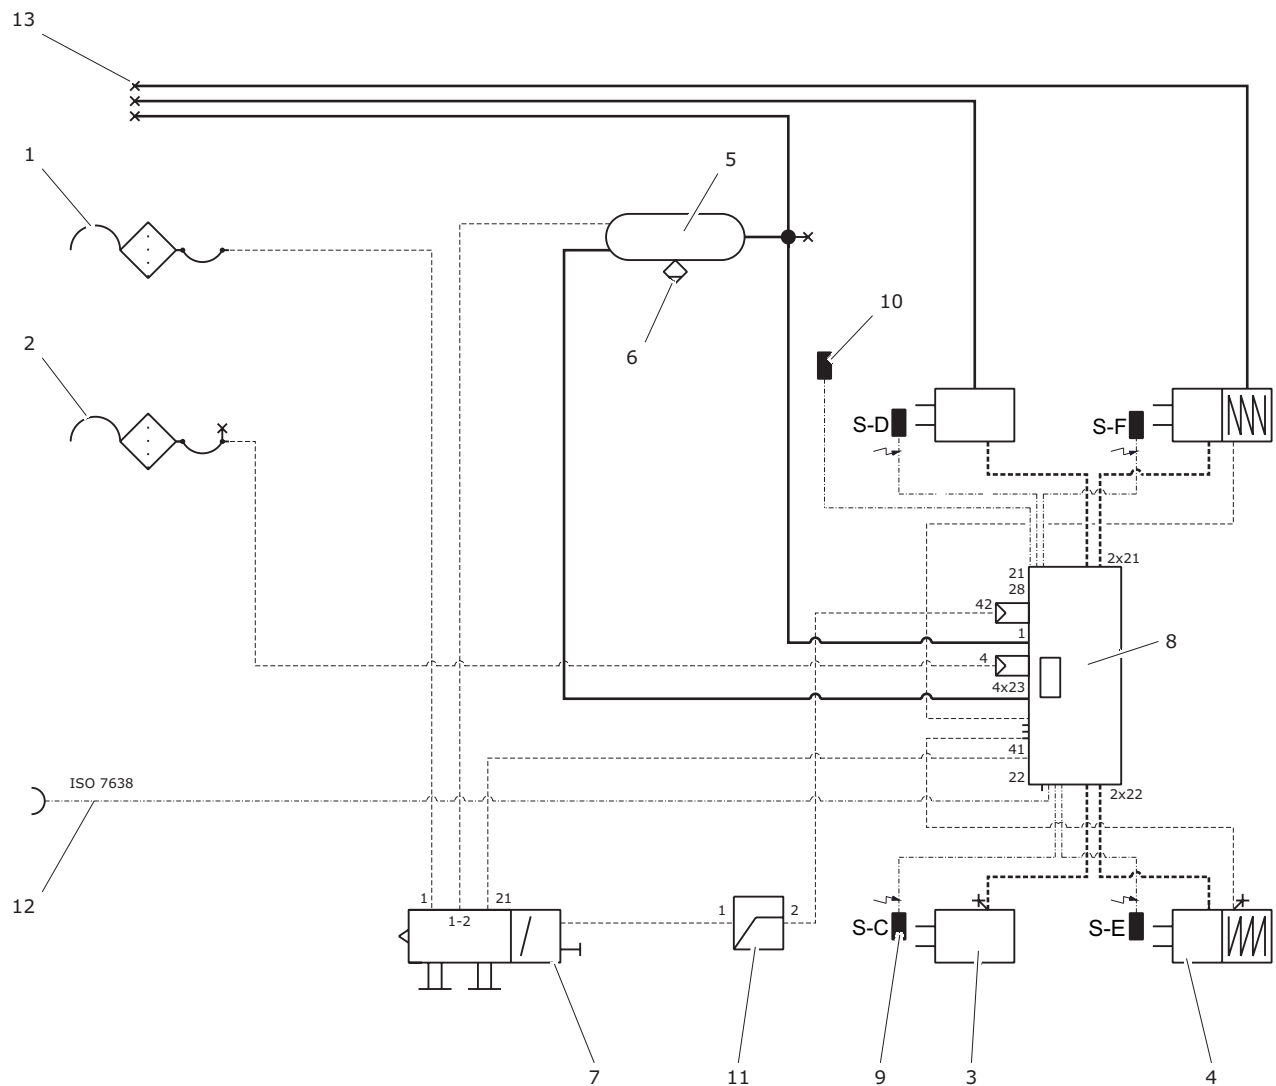

**Figure 3.8** Pneumatic brake system diagram, variant 2

- |   |                              |                                  |
|---|------------------------------|----------------------------------|
| (1) control connection                  | (2) supply connection        | (3) diaphragm pneumatic cylinder |
| (4) diaphragm pneumatic spring cylinder | (5) air tank (6) drain valve | (9) ABS sensor (2 or 4 pieces)   |
| (7) loosening-parking valve             | (8) TEBS module              | (12) brake system supply         |
| (10) ALB sensor (option)                | (11) pressure limiting valve |                                  |
| (13) diagnostic connections             |                              |                                  |










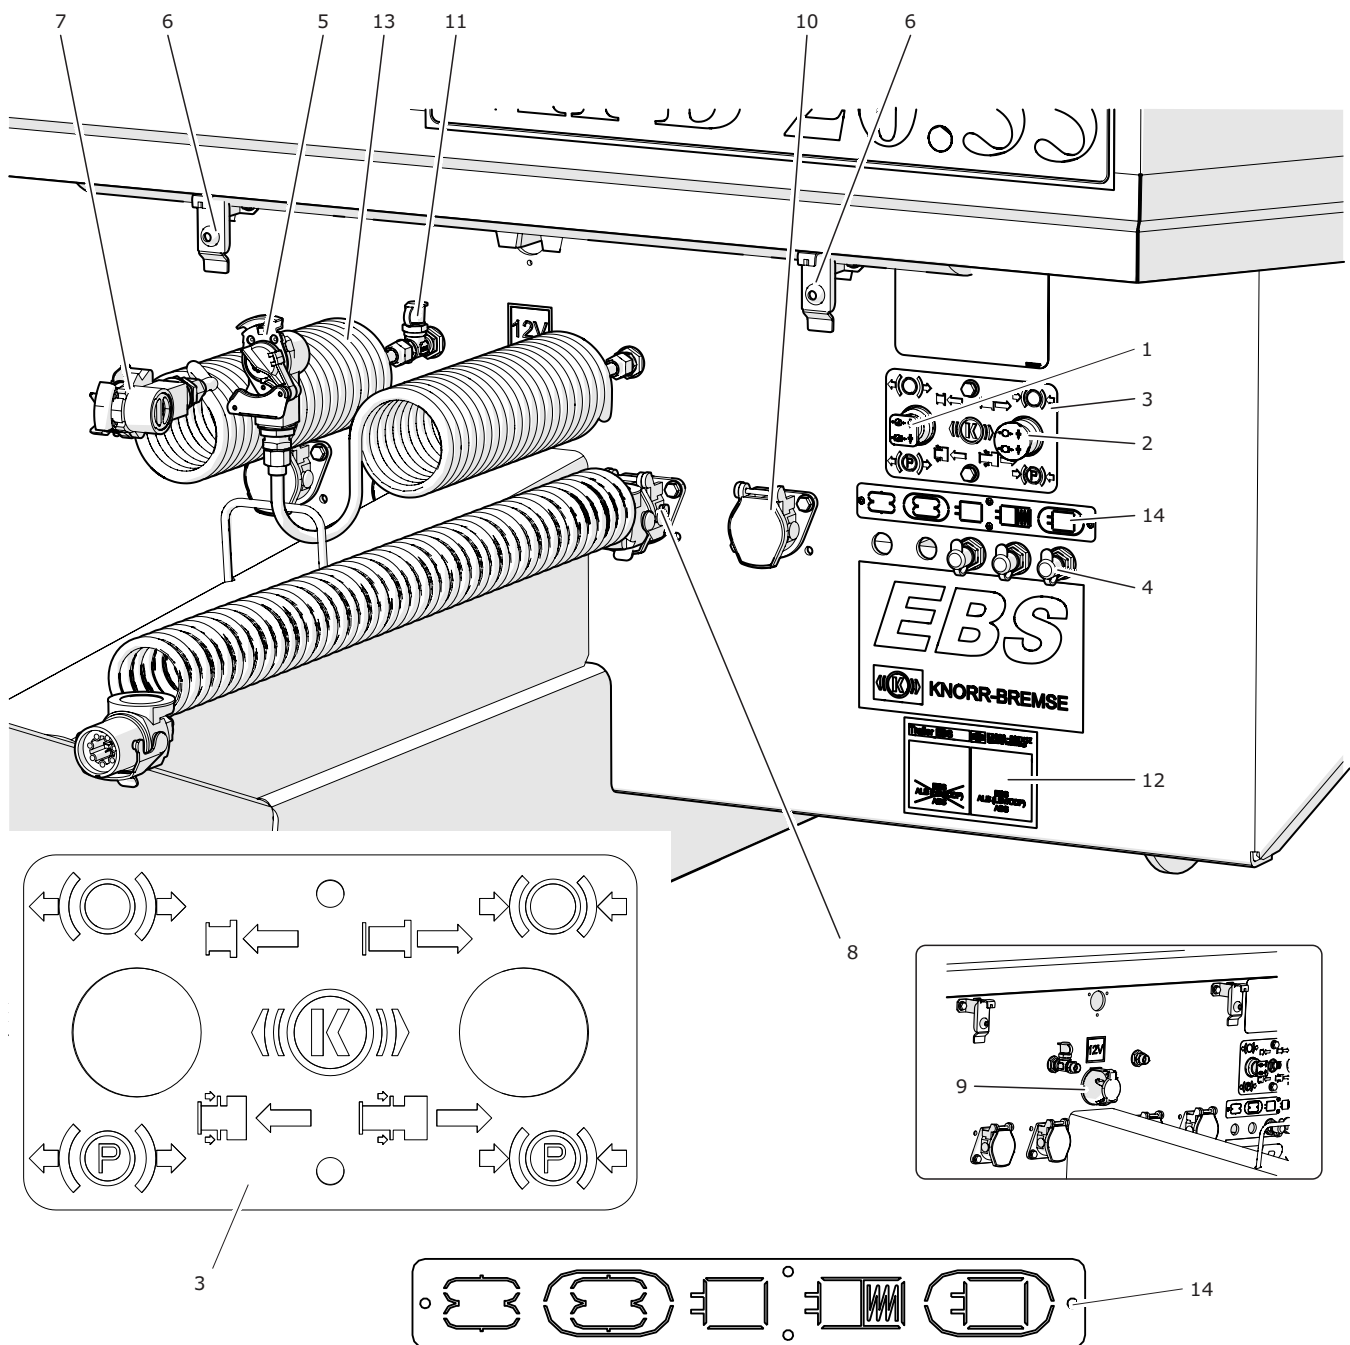


**Figure 3.9** The frame front beam with elements of pneumatic system

- |  |                               |   |
|--|-------------------------------|---|
| (1) valve's red push-button              | (2) valve's black push-button | (3) valve's information plate                         |
| (4) control connections                  | (5) red pneumatic connection  | (6) holding socket of connection                      |
| (7) yellow pneumatic connection          | (8) EBS 24V electric socket   | (9) 12V electric socket                               |
| (10) EBS holding socket                  | (11) control connection       | (12) warning decal                                    |
| (13) rubber or spiral pneumatic conduits |                               | (14) information plate (label) of control connections |


## 3.5.1. LOOSENING-PARKING VALVE

Table 3.3. Valve operation modes

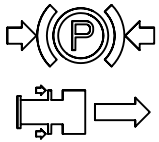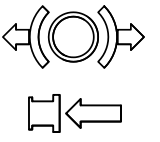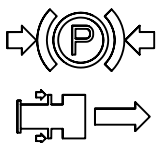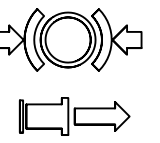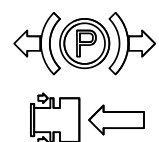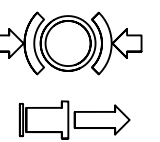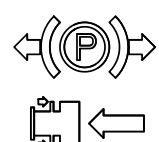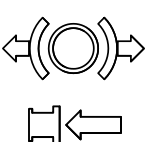OP-TION	BUTTON RED	BUTTON BLACK	DESCRIPTION
<b>A</b>	RELEASED 	DEPRESSED 	The machine is braked with parking brake. If the red push-button is released, the trommel screen is immobilized with parking brake regardless of the black push-button position.
<b>B</b>	RELEASED 	RELEASED 	
<b>C</b>	DEPRESSED 	RELEASED 	Machine is prepared for travel Pneumatic conduits are connected to trommel screen. Black push-button can not be depressed Machine is braked Pneumatic conduits are not connected. If the black push-button is depressed, the brake will be released.
<b>D</b>	DEPRESSED 	DEPRESSED 	Parking brake is released, manoeuvre position The trommel screen's brake is completely released. Pneumatic conduits are not connected.

The loosening-parking valve is equipped with the emergency brake function which is activated in the event of pressure drop in the supply conduit (as a result of conduit disconnection or damage). Two push-buttons located in this valve make it possible to set the machine to an appropriate working mode.

Black push-button controls the manoeuvre valve. It is designed for engaging or releasing the brake if the machine is unhitched from the truck tractor. The black push-button can not be depressed when pneumatic conduits are connected. In the depressed position, the spring (parking) brake is released. Red push-button controls operation of the parking

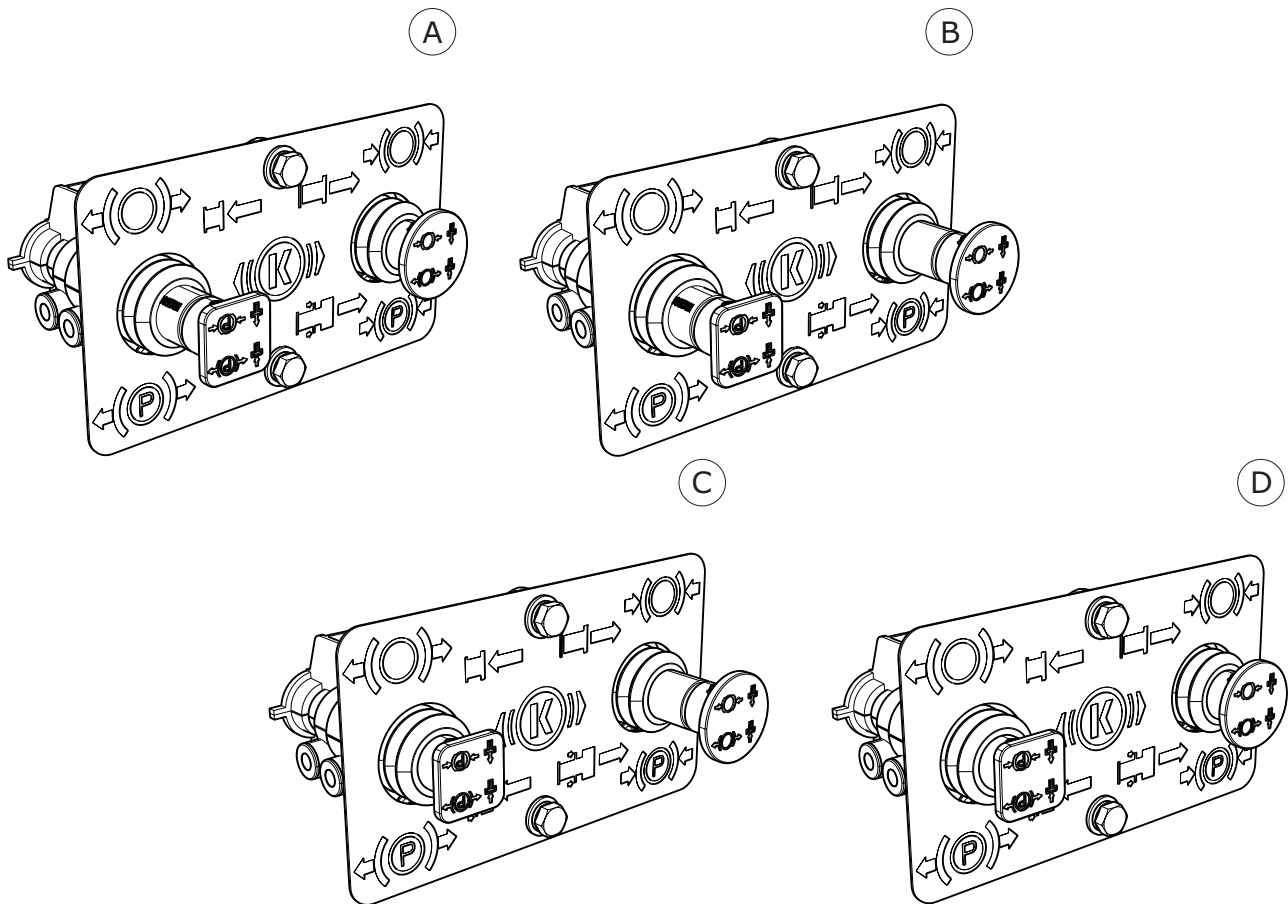

**Figure 3.10** Possible combinations of settings of the loosening-parking valve's push-buttons

valve when the machine is hitched to truck tractor. If the push-button is released, the parking (spring) brake is engaged. Information concerning setting of operation mode of the loosening-parking valve is given in table (3.3).

**PNEUMATIC CONNECTIONS**

Pneumatic connections are equipped with covers that protect the connections against contamination and entrance of dirt into the system. They are made from coloured plastic (red connection – supply air; yellow connection - control air). The connections

are made according to recommendations of DIN ISO 1728 standard. Thanks to this, the connections can not be incorrectly connected to the truck tractor's sockets. Pneumatic connections are integrated with air filters which protect the pneumatic system against ingress of contaminations. After unhitching the trommel screen, place the pneumatic connections in the specifically prepared sockets, located on the right side and the left side of the drawbar.

### 3.5.2. TEB5 G2 MODULATOR

Main control valve is integrated with Electronic Control Unit (ECU). Proper operation of the modulator is possible only after connection of

electric power lead. Driving without connected power lead is forbidden which is stated on the warning decal.

During normal operation, the signals from speed sensors installed in axles and possibly, signals from ALB sensor are sent to TEBS control unit. Calculations of braking force are made on the basis of this data. The trommel screen can be braked

### 3.5.3. ABS FUNCTION

ABS function is integrated with TEBS G2 module. This system has to prevent vehicle wheel locking during braking. Action of ABS system can be compared to pulsating braking. Two or four rotational speed sensors (induction sensors) read out changing values of wheel rotational speed. If any of the wheels is locked during braking or its speed is considerably changed with regard to

by means of CAN bus (a braking command is sent from the truck tractor's EBS system using the bus signalling system) or by aeration of control conduit (braking is forced by the truck tractor driver).

other wheels, a proper message is sent to the control system which reduces pressure of air in the cylinder braking a given wheel.

Locking of wheels during braking is very dangerous. ABS function considerably reduces loss of stability of the trommel screen and shortens braking distance of the machine.


## 3.6 CONTROL PANELS

### 3.6.1. MAIN CONTROL PANEL


The main control panel of the trommel screen is located on the right side of the machine, behind the door (1) made from transparent plastic. The door is opened with the key provided with the machine.

### 3.6.2. LCD DISPLAY

LCD display is located in the left upper corner of the main control panel. After powering up, a message (1) is displayed which contains basic operating parameters of the engine and trommel screen subassemblies (see the below table). To access the second information page push the cursor button (5). Message (2) is displayed during start up of the

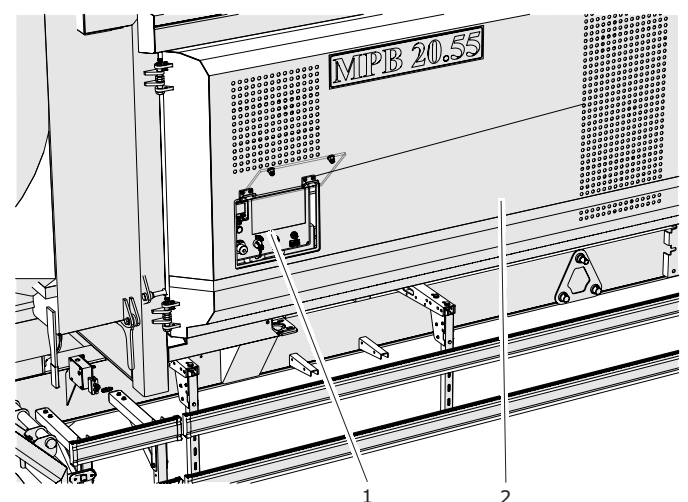

**Figure 3.11** Location of main control panel  
(1) door (2) shield

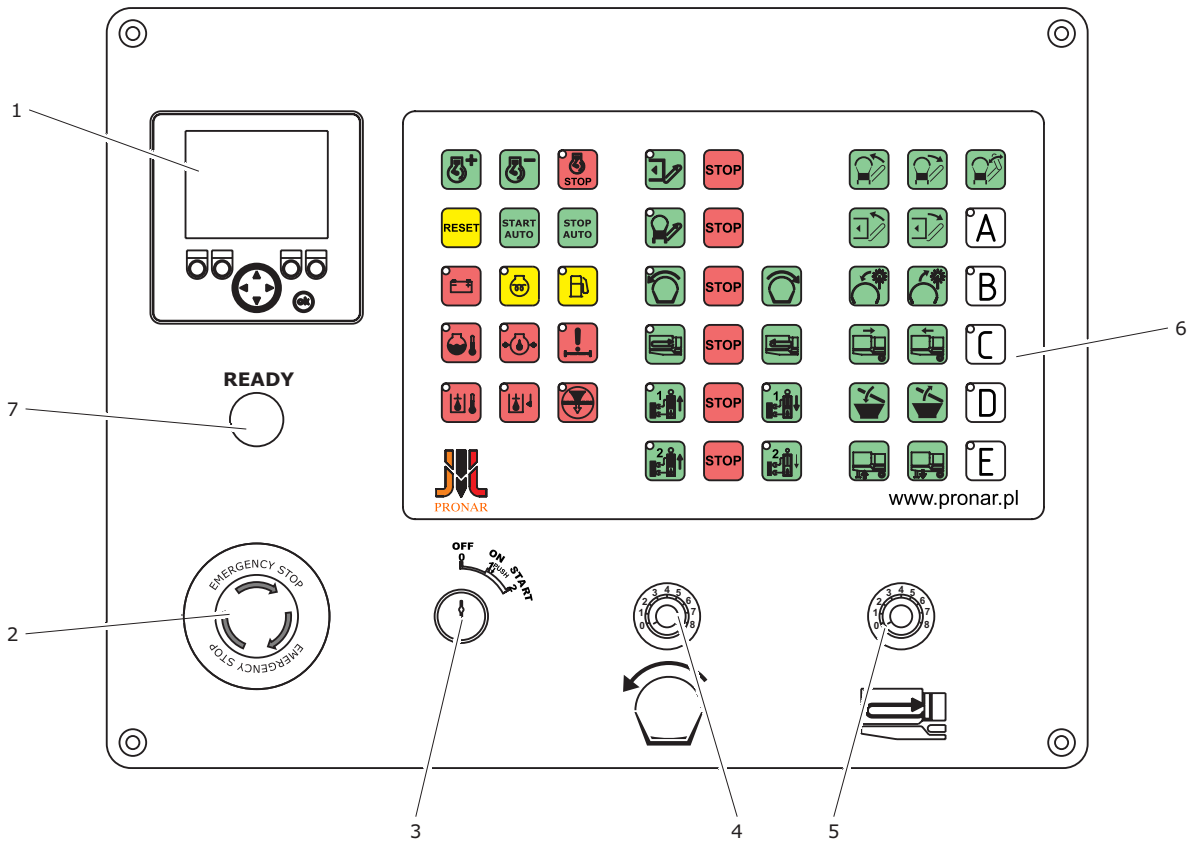














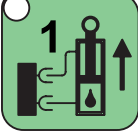
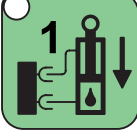
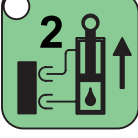
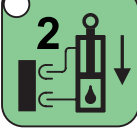












**Figure 3.12** View of main control panel










- (1) display
- (2) emergency switch
- (3) ignition switch
- (4) drum speed adjusting knob
- (5) charging hopper conveyor speed adjusting knob
- (6) control panel
- (7) standby indicator/start-up boost button

**Table 3.8.** Description of function keys and information-warning indicators on the control panel


SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	Increase engine rpm. (green)		Decrease engine rpm. (green)
	Stop the engine. (red)		Clear an alarm signal. (yellow)
	Automatic start-up. (green)		Automatic stop (green)

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
	No battery charging. (red)		Heating of glow plugs. (yellow)
	Low fuel level. (yellow)		Excessive temperature of engine coolant. (red)
	Insufficient pressure of engine oil (red)		Water in fuel. Contaminated air filter. (red)
	High hydraulic oil temperature. (red)		Low hydraulic oil level. (red)
	Contaminated filter of hydraulic system (option) (red)		Start of rear conveyor drive. (green)
	Start of side conveyor drive. (green)		Start of screening drum drive. (green)
	Start of screening drum in reverse direction. (green)		Start of belt conveyor drive in charging hopper. (green)
	Start of belt conveyor in reverse direction. (green)		Reserve push-button. (green)
	Reserve push-button. (green)		Reserve push-button. (green)
	Reserve push-button. (green)		Fold lateral conveyor. (green)

SYMBOL	DESCRIPTION
	Stopping drives. (red)
	Folding or unfolding the upper part of the side conveyor. (green)
	Unfold rear conveyor. (green)
	Brush rising. (green)
	Sliding in charging hopper. (green)
	Reserve push-button. (green)
	Lower the rear hydraulic support; optional equipment. (green)
	Reserve push-button.
	Reserve push-button.

SYMBOL	DESCRIPTION
	Unfold lateral conveyor. (green)
	Fold rear conveyor. (green)
	Brush lowering. (green)
	Sliding out charging hopper. (green)
	Reserve push-button. (green)
	Raise the front hydraulic support; optional equipment. (green)
	Reserve push-button.
	Reserve push-button.
	Reserve push-button.

trommel screen (switching the ignition key from position [0] to position [1]) and during emergency stop of the trommel screen.

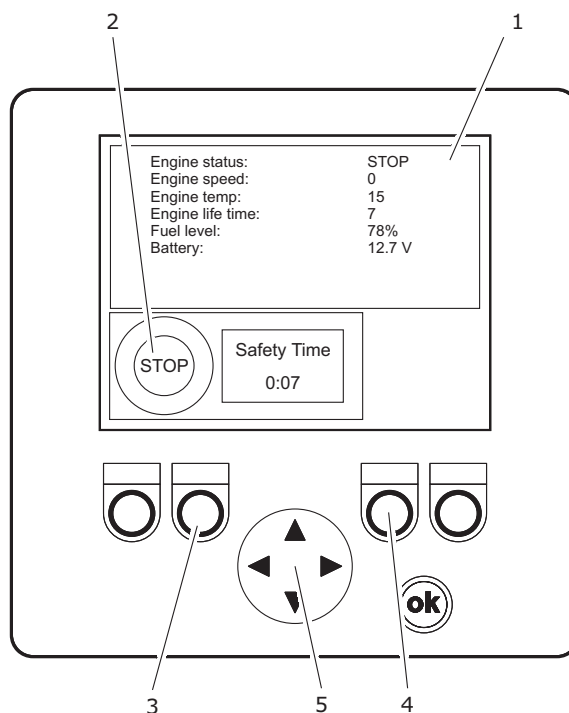

**Figure 3.13** LCD display

- (1) information message    (2) warning message  
 (3) x10 multiplier        (4) x100 multiplier

**Table 3.4.** List of LCD display messages


CONTENT OF MESSAGES	EXAMPLE MESSAGE	UNIT
Engine status Status silnika	STOP   STARTING   READY	-
Engine speed Prędkość obrotowa silnika	0-1 1600	rpm
Engine temp Temperatura silnika	0-90	C
Engine life time Czas pracy silnika	15	h
Fuel level Poziom paliwa w zbiorniku	0% - 100%	%
Battery Akumulator (napięcie akumulatora)	12.5V	V
Day life time Dzienny czas pracy	000000:14:25	h




CONTENT OF MESSAGES	EXAMPLE MESSAGE	UNIT
Sieve life time Czas pracy bębna przesiewającego	000000:01:37	h
Transporter live time Czas pracy przenośnika kosza zasypowego	000000:01:37	h
STOP Safety Time		s
AUTO STATUS Automatyczny tryb rozruchu przesiewacza	-	-
SAVING STATUS Tryb oszczędzania	-	-
ALARM		

**Table 3.5.** List of main board relays

SYMBOL	CIRCUIT	SYMBOL	CIRCUIT
K1	Controller supply	K14	Side conveyor – folding
K2	Safety switches	K15	Not used
K3	Additional connection (not used)	K16	Sliding out charging hopper
K4	Additional connection (not used)	K17	Sliding in charging hopper
K5	Side feeder – starting	K18	Brush lowering
K6	Rear feeder – starting	K19	Not used
K7	Side conveyor – rising	K20	Support rising - option
K8	Side conveyor – lowering	K21	Support lowering – option
K9	Additional connection (not used)	K22	Not used
K10	Additional connection (not used)	K23	Starter motor
K11	Brush rising	K24	Engine rotation cylinder
K12	Rear conveyor – rising	K25	Glow plugs
K13	Rear conveyor – lowering	K26	Stopping the engine

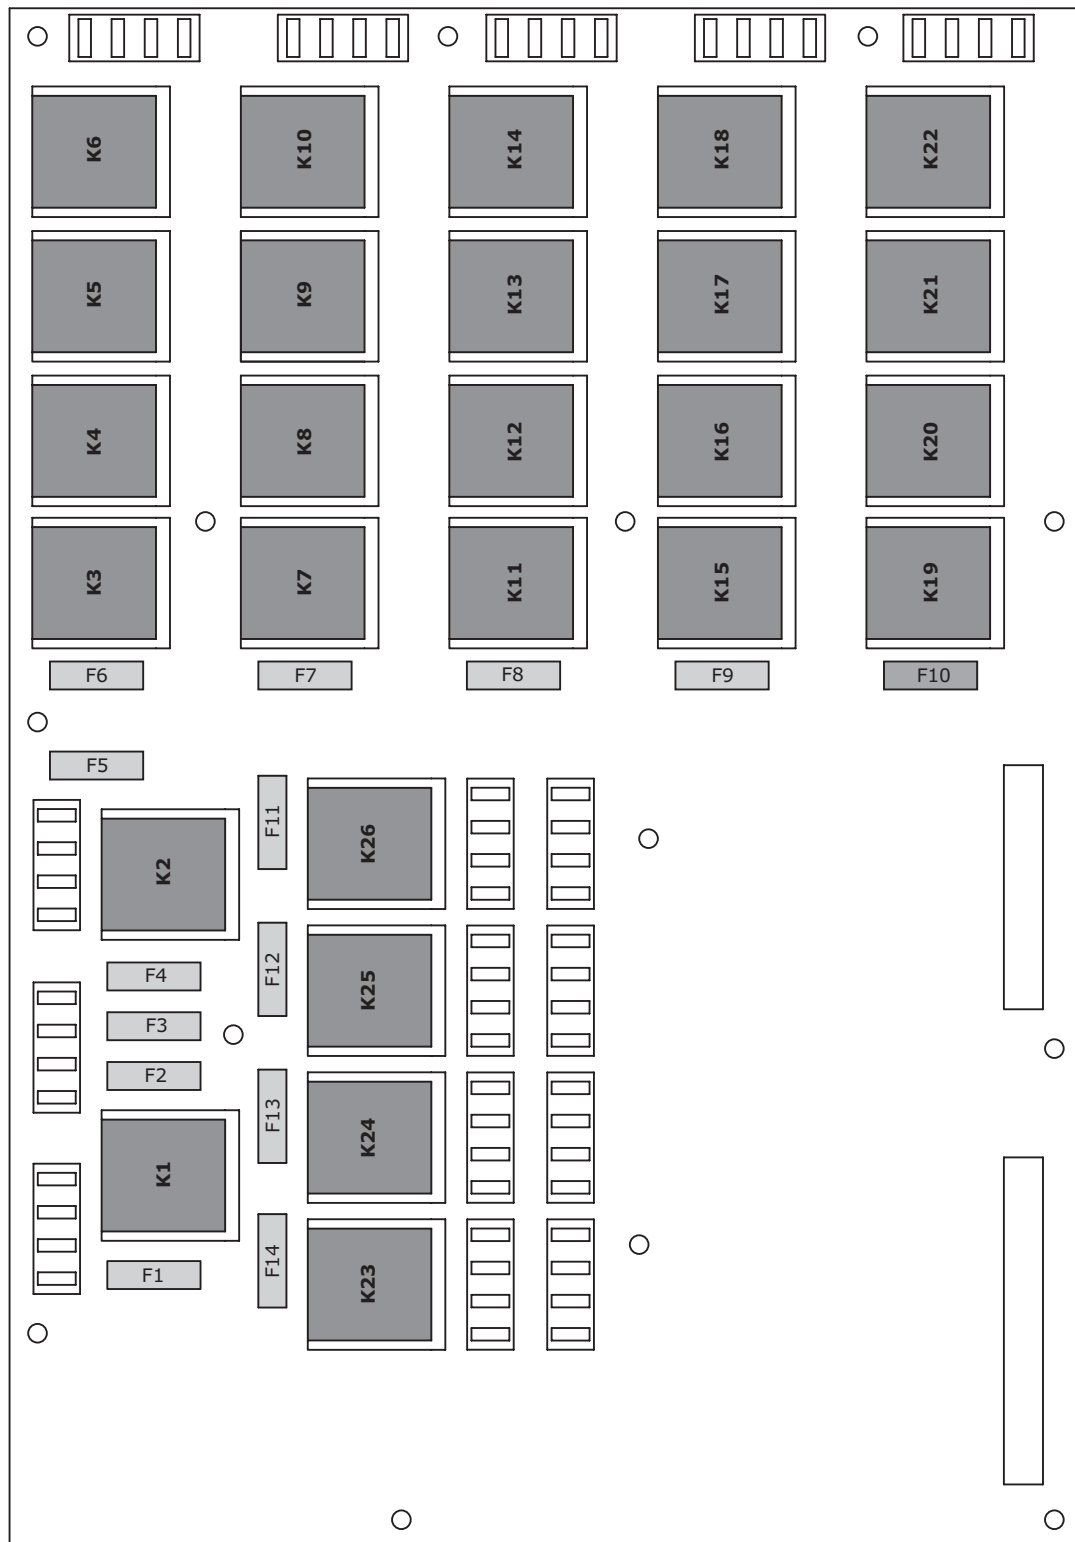

**Figure 3.14** Arrangement of fuses and relays on the control panel main board  
Marking description on table (3.5)

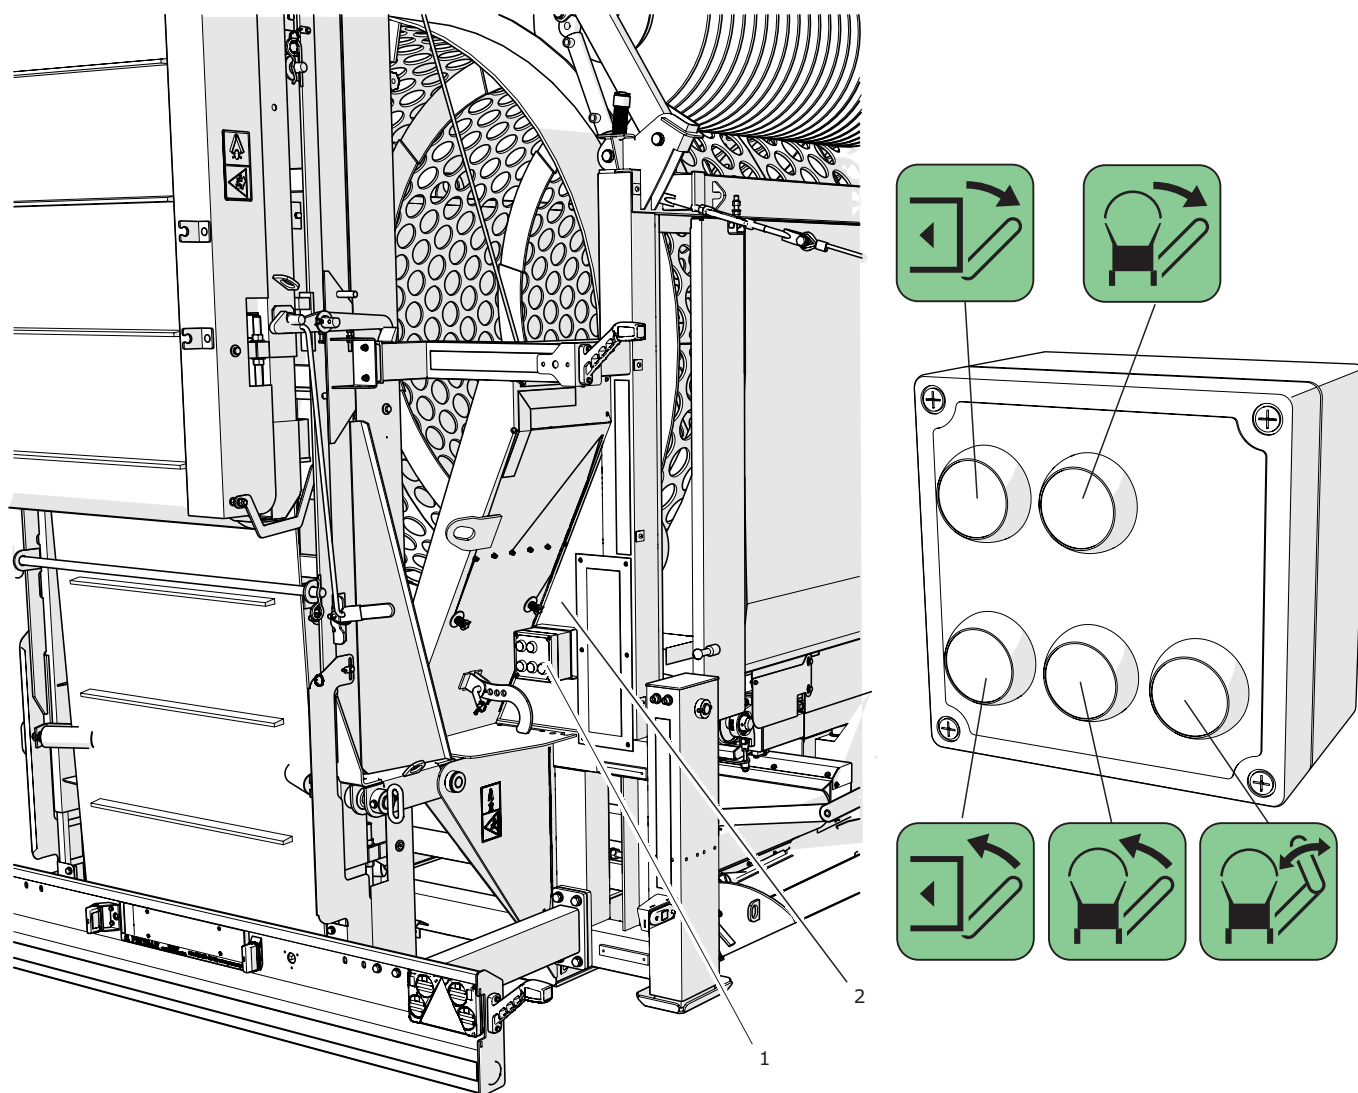

**Figure 3.15** Location of the auxiliary control panel  
 (1) auxiliary control panel (2) rear wall

**Table 3.6.** List of main board fuses

SYMBOL	CIRCUIT	POWER FROM
F1	Controller power circuit – relay K1	5A
F2	IFM controller power circuit	5A
F3	IFM controller output power circuit	15A
F4	Safety switch circuit	5A
F5	K3...K22 relays main power	20A
F6	K3...K6 relays circuit	15A
F7	K7...K10 relays circuit	15A

SYMBOL	CIRCUIT	POWER FROM
F8	K11...K14 relays circuit	15A
F9	K15...K18 relays circuit	15A
F10	K19...K22 relays circuit	15A
F11	engine shutdown system fuse, relay K26	15A
F12	Glow plugs power supply fuse, relay K25	25A
F13	Engine speed control system fuse, relay K24	25A
F14	Starter fuse, relay K23	30A

### 3.6.3. AUXILIARY CONTROL PANEL

The auxiliary control panel of the trommel screen is located on the machine's rear wall — figure (3.15). Description of control push-buttons can be found

in table (3.3).


Detailed information concerning the operation of the control panel is given in section 4.

## 3.7 TROMMEL SCREEN HYDRAULIC SYSTEM

Hydraulic system diagram is shown in Annex B at the end of the Operator's Manual. The pump system including two multi-piston pumps (1) and three gear pumps (2) is driven by combustion engine (4). The variable-displacement multi-piston pumps are designed for driving the screening drum and charging hopper feeder. The gear pumps drive the other conveyors: side conveyor, rear conveyor, transverse conveyor and longitudinal conveyor. Conveyor folding and unfolding, charging hopper conveyor extending and brush rising and lowering are performed by means of hydraulic cylinders. The system operation is controlled by means of the main control panel and auxiliary control panel.

The hydraulic system is protected against overheating of hydraulic oil. When the limit

temperature of 80°C is reached, the control unit

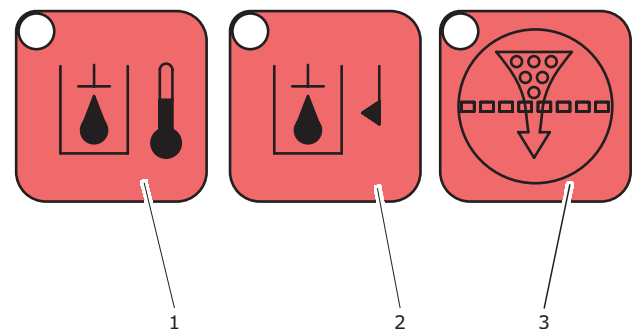

**Figure 3.16** Hydraulic system alarm indicators  
 (1) high temperature (2) low oil level  
 (3) contaminated filter (option)

reduces output of the multi-piston pumps to 0


and stops all circuits of the system. Finally, the combustion engine is stopped. Emergency stop of the trommel screen is signalled by indicator light (1) figure (3.16). The machine can be restarted only after oil has cooled down to 70°C. Emergency stop of the trommel screen can be also caused by lowering of hydraulic oil level in the tank to

### 3.8 MAGNETIC SEPARATORS

Separator features and components are presented in figures (3.17) and (3.18). These devices are the additional accessories of the machine. Separators are designed to separate the ferrous (ferromagnetic) particles. Magnetic separator does not separate non-ferrous metals (copper, aluminium) and non-magnetic steel.

emergency level which is signalled by indicator light (2).

The rotational speed of the drum and of the charging hopper conveyor can be adjusted using knobs on the main control panel. Lateral and rear conveyor speed is adjustable using the flow regulators in the conveyor drive hydraulic motor circuit.

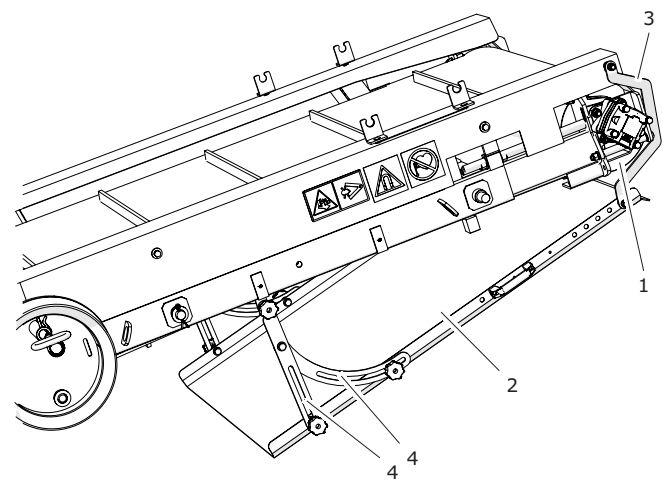

**Figure 3.17** Magnetic separator, rear

- |                     |                 |
|---------------------|-----------------|
| (1) magnetic roller | (2) chute plate |
| (3) support         | (4) tie rod     |


### 3.9 HOPPER GRID

Hopper grid presented in figure (3.20), is used for the separation of a large pieces of the material, which can cause damage to some elements of the machine during operation, for example the trommel screen. Hopper grid is controlled from the main control panel using buttons (3) and (4), or remotely by radio using the remote control.

#### DANGER



Separator rollers produce a very strong magnetic field, which is why persons with pacemakers or similar devices must not stay in their vicinity. A safe distance from the roller is 2 meters.

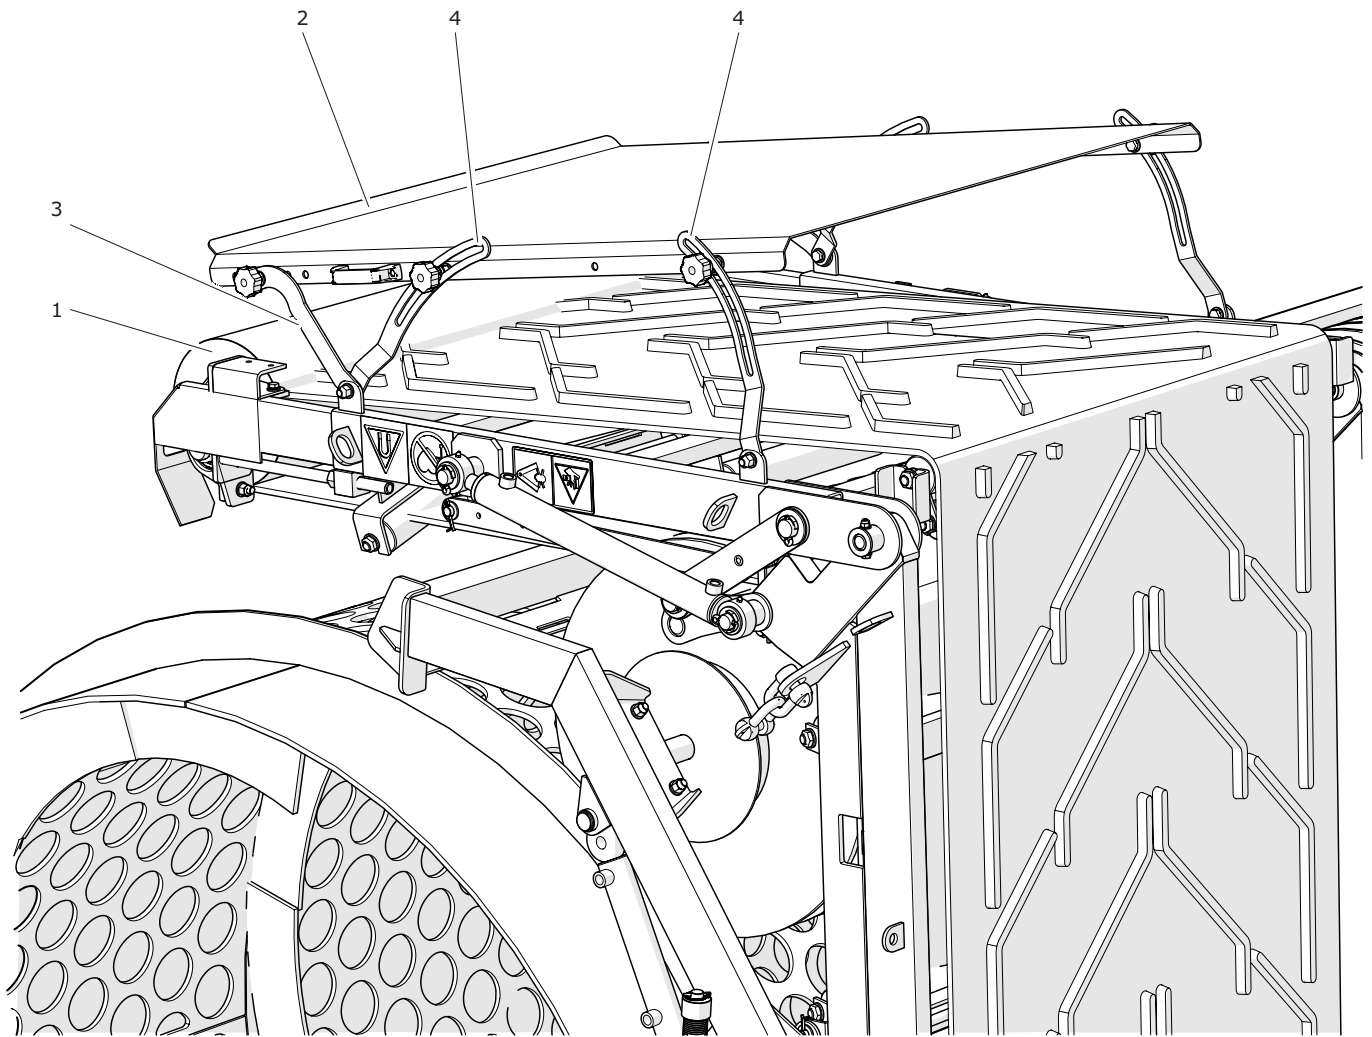

**Figure 3.18** Magnetic separator, lateral

(1) magnetic roller

(2) chute plate

(3) support

(4) tie rod

## 3.10 RADIO CONTROL

Radio control module is an additional accessory designed for remote operation the basic machine features. The system consists of a remote control and a radio receiver, located near the central lubrication pump. The receiver is powered from the machine's electrical system. Remote controller is shown in figure (3.21). The control buttons have two operating positions. The first function is started when the button is pressed half way and the second function is started when the button is

pressed all the way. Buttons (5) and (6) are used exclusively for lowering and lifting conveyors in order to adjust the position. They are not intended for folding and unfolding the conveyors.

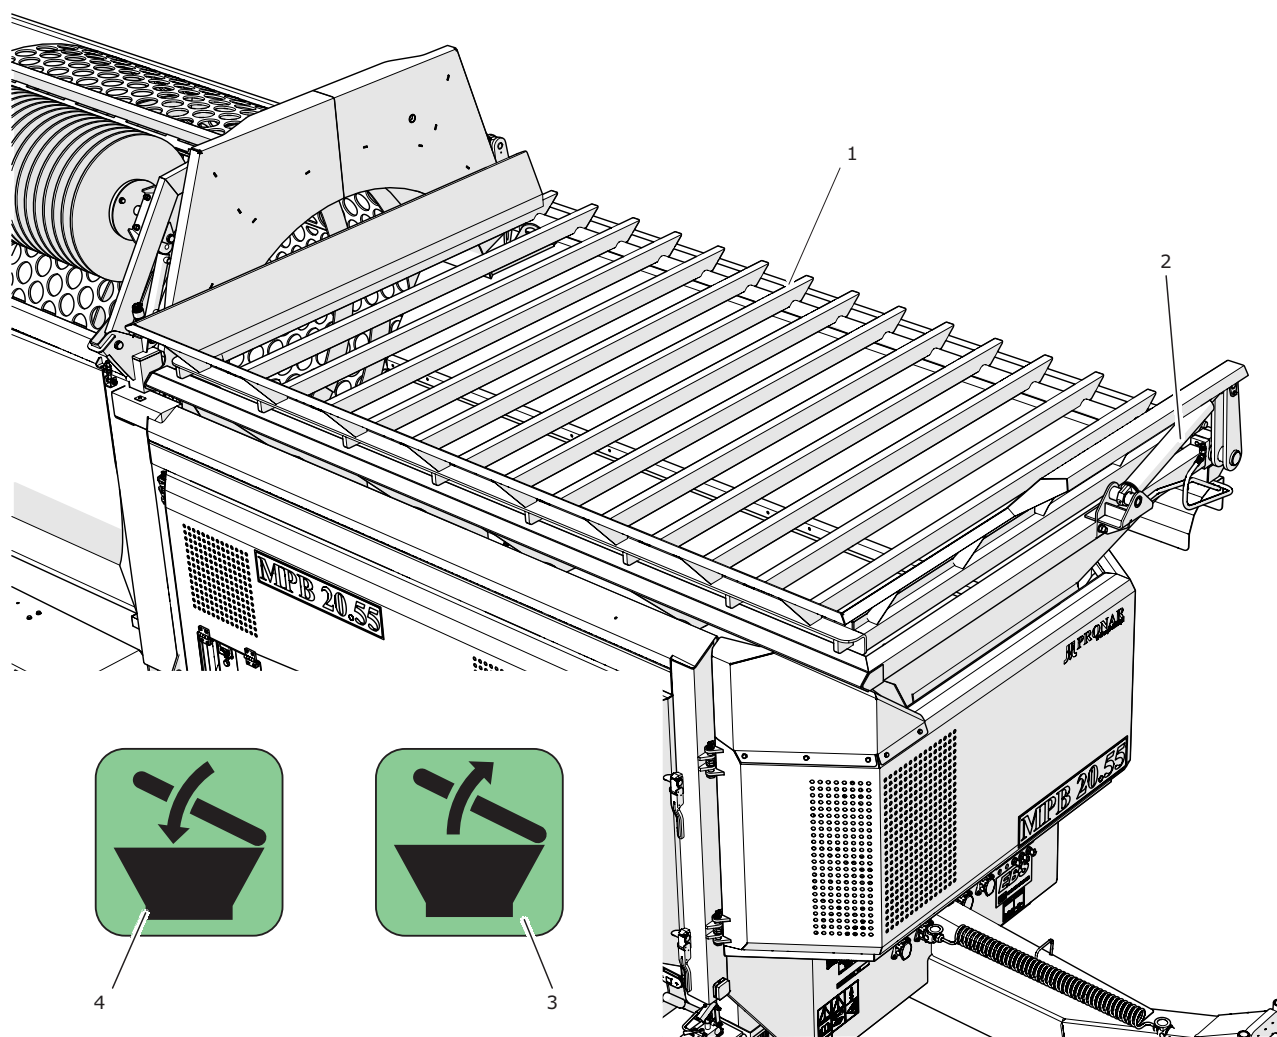


Figure 3.19 Hopper grid

(1) grid

(2) tipping cylinder


(3) raising the grid

(4) lowering the grid


Table 3.7. Remote control functions

BUTTON	POSITION 1	POSITION 2
1	Decrease engine rpm. Decrease by 1	Decrease engine rpm. Decrease by 10
2	Increase engine rpm. Increase by 1	Increase engine rpm. Increase by 10
3	Lower hopper grid Equal lowering speed	
4	Raise hopper grid. Equal raising speed	

BUTTON	POSITION 1	POSITION 2
1	Decrease engine rpm. Decrease by 1	Decrease engine rpm. Decrease by 10
2	Increase engine rpm. Increase by 1	Increase engine rpm. Increase by 10
3	Lower hopper grid Equal lowering speed	
4	Raise hopper grid. Equal raising speed	
5	Unfold lateral conveyor.	Fold lateral conveyor.
6	Unfold rear conveyor.	Fold rear conveyor.

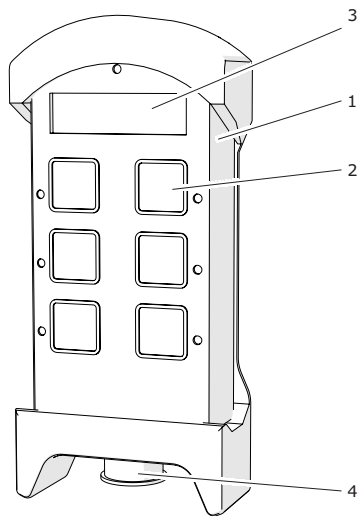

**Figure 3.20** Remote radio control  
 (1) remote cotroller (2) control keys  
 (3) LCD (4) push-button

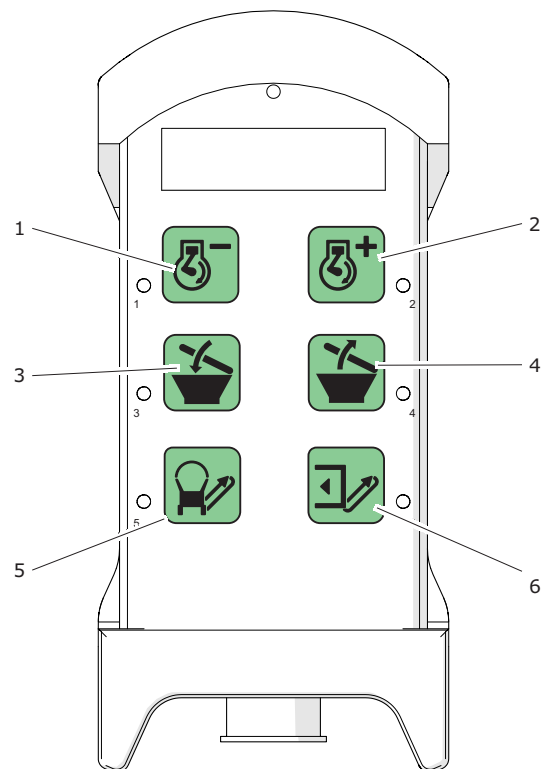

**Figure 3.21** Remote Control Panel  
 (1) Decrease engine rpm  
 (2) Increase engine rpm  
 (3) lowering the grid (4) unfold the grid  
 (5) raise/lower lateral conveyor  
 (6) raise/lower rear conveyor



SECTION

**4**

---

**CORRECT USE**

## 4.1 CHECK THE TROMMEL SCREEN AFTER DELIVERY

### 4.1.1. PRELIMINARY INFORMATION

The manufacturer guarantees that the mobile trommel screen is fully operational and has been checked according to quality control procedures and is ready for use. This does not release the user from an obligation to check the machine's condition after delivery and before first use. The trommel screen is delivered to the user completely assembled.



#### **ATTENTION**

The seller is obliged to conduct the training in operation of the trommel screen and the first start of the machine in the presence of the user.

The user trained by the seller is not released from the obligation to read this *Operator's Manual* carefully.

#### 4.1.2. CHECKING THE TROMMEL SCREEN AFTER DELIVERY

After delivery of the machine to the buyer, the user is obliged to check by himself technical condition of the trommel screen and carefully read the Operator's Manual. Check completeness of the machine according to order.

of operating fluids (except fuel) may indicate that there is a leakage. Check the machine for tightness.

##### INSPECTION RECOMMENDATIONS

- Check completeness of the machine according to order, (set of ignition keys and keys to the main control panel door, Warranty Book).
- Check technical condition of guards and check if they open and close correctly (engine compartment side guards, front guard and side guards of charging hopper, side under-run protective devices).
- Check condition of paint coating; check the machine for traces of corrosion.
- Check the machine for damage resulting from wrong transport of the machine to its destination (crushing, piercing, bending or breaking of parts etc.).
- Check air pressure in tyres and check correct tightening of wheel nuts.
- Check technical condition of drawbar eye and if correctly installed.
- Check the following: hydraulic oil level in the tank, level of engine lubricating oil, level of engine coolant.
- Add fuel to the fuel tank.
- Check grease level in automatic lubrication system.
- Check technical condition of conveyor belts.

Discovered defects should be notified directly to the seller in order to remove them. Incorrect level

### 4.1.3. TEST RUN

#### PRELIMINARY INFORMATION

Test run of the trommel screen must be preceded by the training in the scope of design, functioning, correct operation, adjustment, maintenance and hitching the machine, including information about possible risks and dangers. The training and the test run are carried out by authorized employees of the Seller. The user must be informed about this when buying the machine.



#### TIP

The training and the test run of the trommel screen are carried out by authorized employees of the Seller.

#### TEST RUN

During test run, the user will undergo practical training in operation of the trommel screen. The main issues to be discussed during the training are listed below.

- Hitching the trommel screen to truck tractor and agricultural tractor. Adjusting the drawbar hitching eye.
- Preparing the machine for work (setting the machine, inspections during daily operation, starting the engine, unfolding the belt conveyors, checking the operation of belt conveyors)
- Adjustment of belt conveyors.
- Activities connected with screening and operation of the main control panel and the auxiliary control panel.
- Stopping the machine operation in normal mode; stopping the machine operation in

emergency mode.

- Starting and stopping in automatic mode.
- The procedure in case of clogging and blocking of the trommel screen.
- Adjustment and maintenance activities that can be performed by the user.
- Danger resulting from improper maintenance and repairs.
- Operation of the control panel, information about alarms and related procedures.

#### DANGER

Careless and improper use and operation of the trommel screen and non-compliance with the recommendations given in this Operator's Manual are dangerous to health and life.



The trommel screen must never be used by unauthorised persons (especially children and people under the influence of alcohol or other drugs).

Non-compliance with the safety rules of this Operator's Manual can be dangerous to the health and life of the operator and others.

## 4.2 HITCH AND UNHITCH THE TROMMEL SCREEN

The machine may be hitched to truck tractor if all connections (electrical and pneumatic ones) and the hitch of the tractor are according to the machine Manufacturer's requirements.

### HITCHING

- Position the truck tractor directly in front of the trommel screen's drawbar eye.
- Reverse the agricultural tractor near the trommel screen drawbar eye. If necessary, adjust the height of the drawbar eye by means of the parking stand (mechanical or hydraulic) according to location of tractor hitch.
- Hitch the trommel screen to the tractor's hitch, check the hitch lock protecting the machine against accidental unhitching.

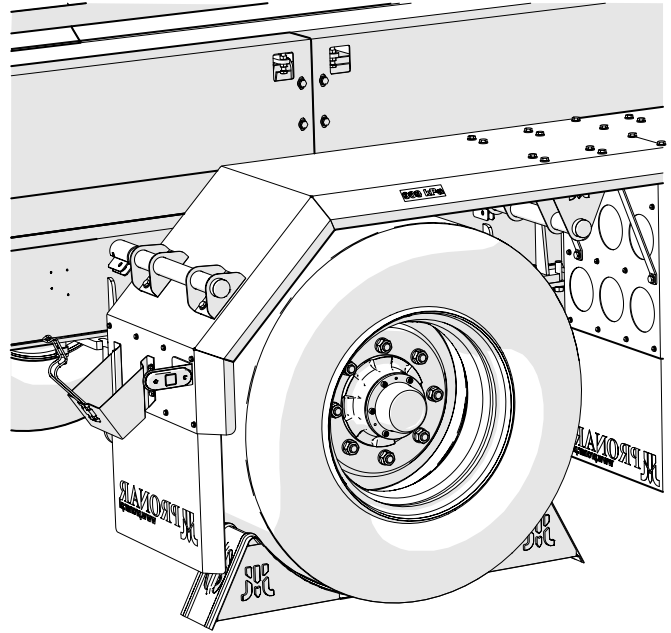


Figure 4.1 Chocks and chock bracket

- If the truck tractor is equipped with an automatic coupler, ensure that the hitching operation is completed and that drawbar eye is secured.
- Raise the parking stands (front and back) to the uppermost position and secure them in the transport position.
- Turn off the truck tractor's engine.
- Connect pneumatic conduit marked yellow.
- Connect pneumatic conduit marked red.
- Connect electric lead supplying TEBS G2 module.
- Connect supply conduit of lighting system – compare section 3.4.
- Check and, if necessary, protect conduits against rubbing or other mechanical damage. When turning, connecting conduits must hang loosely and not become tangled with moving elements of the machine and tractor.

### DANGER

When hitching, there must be nobody between the trommel screen and the tractor. When hitching the machine, the truck tractor driver must exercise caution and make sure that nobody is present in the hazard zone.



When connecting the pneumatic conduits to the tractor, make sure that the pneumatic systems of the tractor and the trommel screen are not under pressure.

Ensure sufficient visibility during hitching.

After completion of hitching check the security of the hitching pin.

- Just before driving off, remove chocks from under the trommel screen's wheels and release parking brake (press the red push-button of the loosening-parking valve).
- Check operation of the lighting system

#### UNHITCH THE TROMMEL SCREEN

- The tractor and the screen must be set to drive straight ahead.
- Immobilise tractor with parking brake.
- Disconnect conduit marked red.
- Disconnect conduit marked yellow.
- Disconnect electric leads (supply lead of TEBS G2 module and supply lead of lighting system).
- Place electric leads and pneumatic conduits in the specifically prepared holding sockets, located on the front beam of the trommel screen's frame.
- Release and lower the parking stands.
- Release the red push-button of the loosening-parking valve.
- Place chocks under the trommel screen wheels.
- Unlock the truck tractor hitch, drive tractor away from the trommel screen.

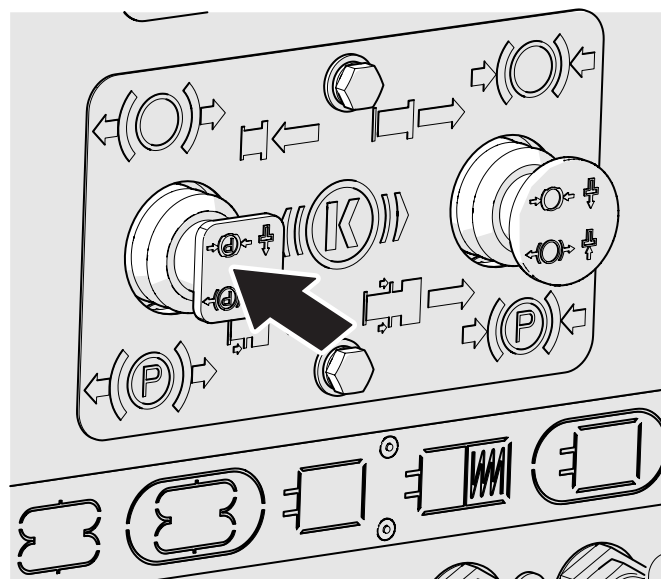


Figure 4.2 Release parking brake

## 4.3 INSPECTIONS DURING DAILY OPERATION

### 4.3.1. HYDRAULIC OIL LEVEL CHECK



#### TIP


Low level of hydraulic oil is signalled by indicator light (4). Activation of alarm causes emergency stop of the engine.

#### PROCEDURE

- Open the right guard of the engine compartment.
- Check hydraulic oil level on the oil level indicator (2)

*Proper oil level is indicated by the black mark.*

- If oil level is too low, unscrew filler plug (3) and supplement oil to the maximum level.
- Tighten filler plug.

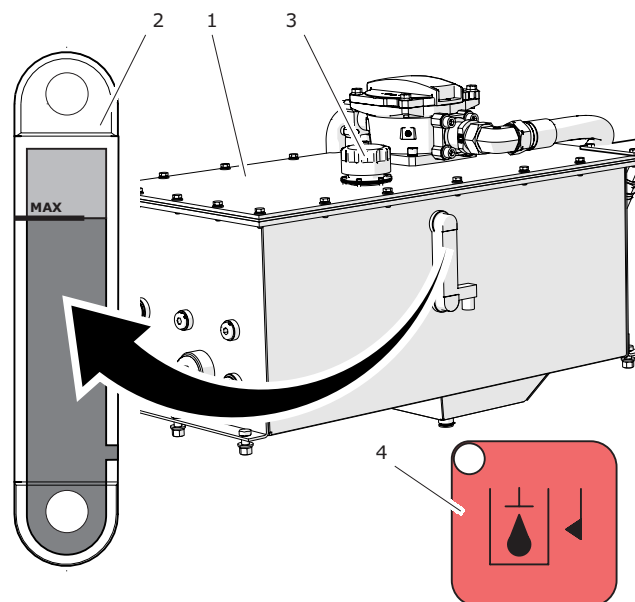

**Figure 4.3**

Hydraulic oil level check


(1) oil tank

(2) indicator

(3) filler plug

(4) indicator light.

## 4.3.2. CHECK FUEL LEVEL

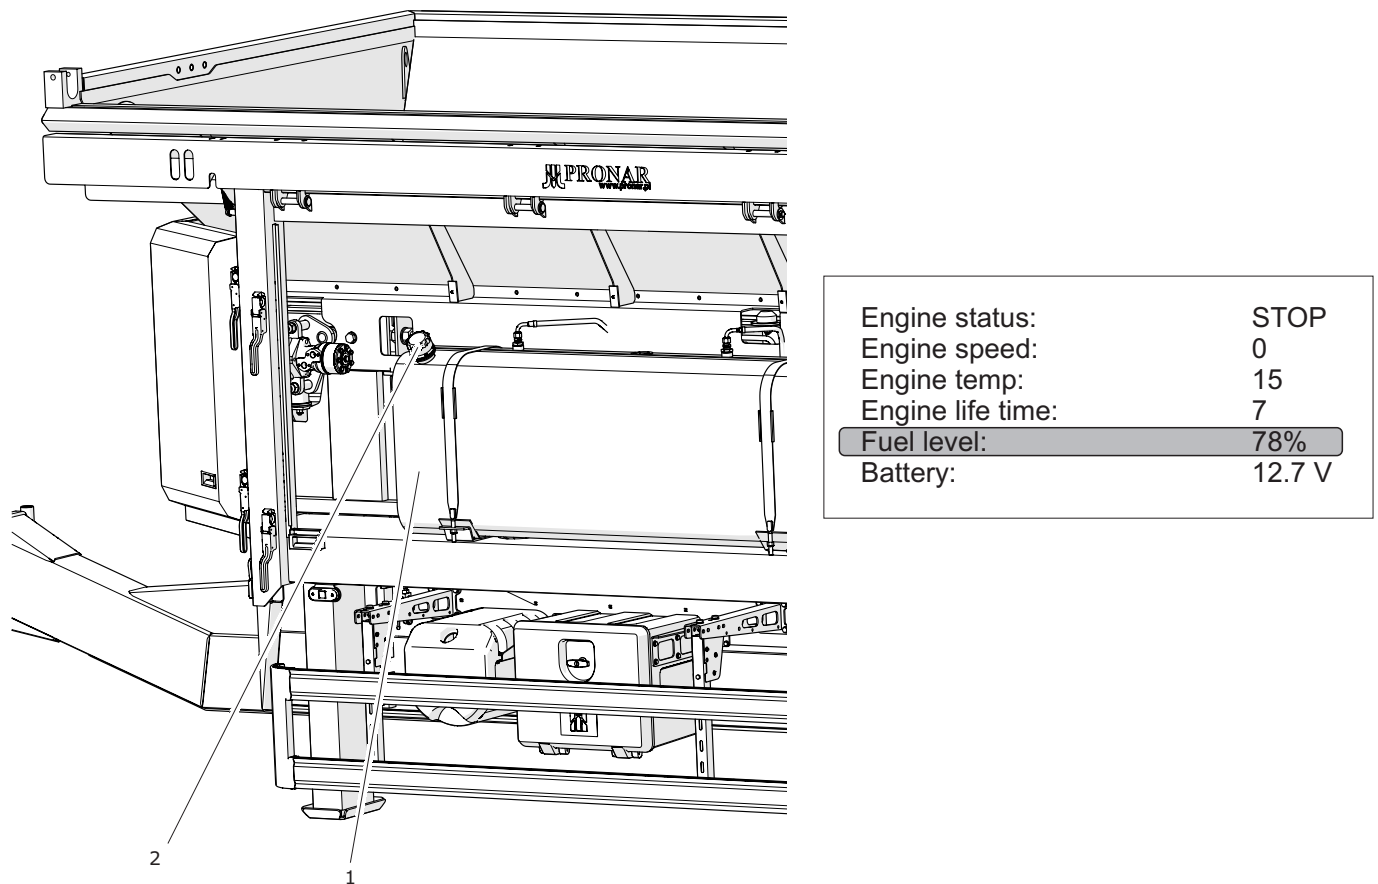

**Figure 4.4** Check fuel level

(1) fuel tank


(2) oil filler plug

- Insert key to ignition.
- Turn key from position [0] to position [1].
- Switch on the control panel and check fuel level (percentage value).

If necessary, add fuel. To do this, open the left hopper door, remove the oil filler cap (2) and refuel.



## 4.3.3. CHECK LEVEL OF ENGINE LUBRICATING OIL

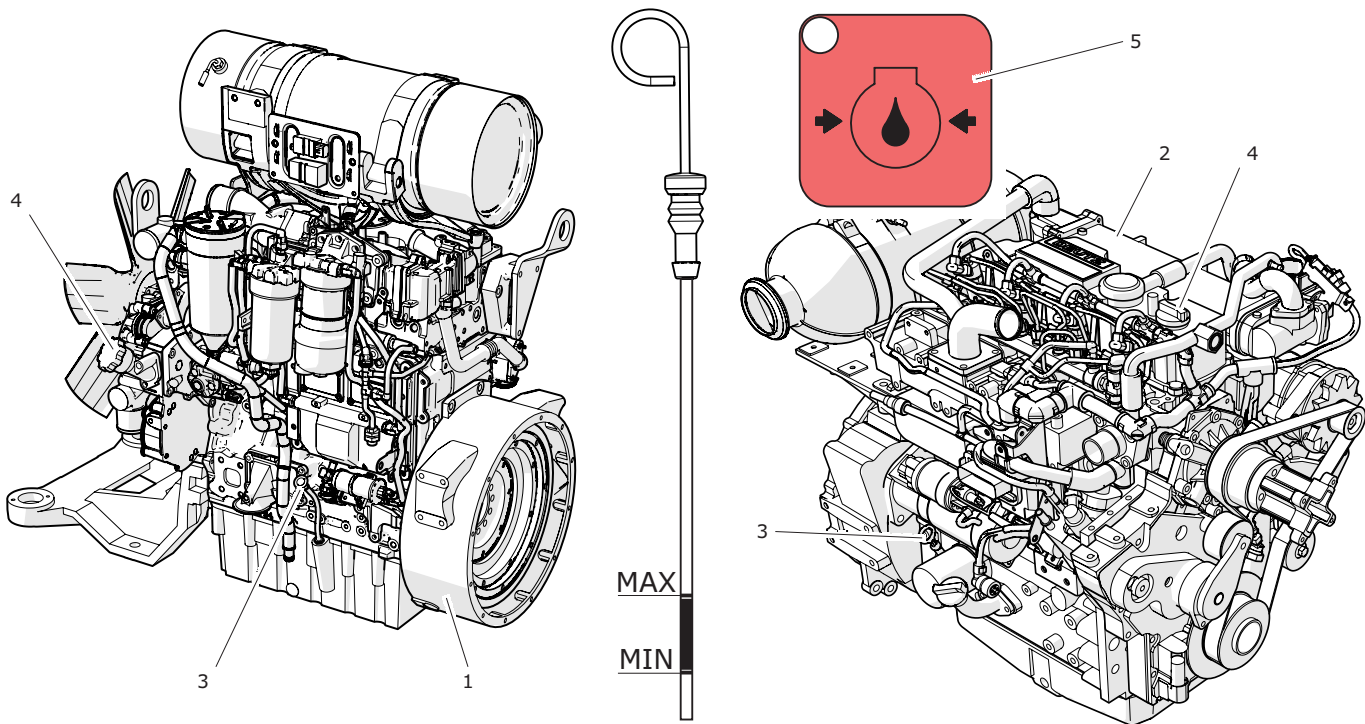

**Figure 4.5** Checking engine oil level

(1) Caterpillar engine

(2) Deutz engine

(3) oil dipstick

(4) oil filler plug

(5) low level indicator

## PROCEDURE

- Remove safety pin of engine frame, tilt the engine frame.
- Take out oil dipstick — figure (4.5) and wipe it until dry.
- Insert oil dipstick and take it out again.
- Check oil level in the engine. The correct oil level should be between the minimum and maximum levels (MIN and MAX).
- If engine oil level is too low, unscrew filler plug (4) and add proper amount of oil.
- After fresh oil is added, wait until oil flows into the oil pan and check oil level again.
- Tighten filler plug (4).
- Insert oil dipstick (3).
- Fold the engine frame and secure it with a

pin.

Too high oil level may be the result of a leak in the fuel system, cooling system or other fault.

**ATTENTION**

Low oil level in the engine is indicated by the LED light (5) on the control panel. The LED lights up when you reach the alert level, followed by an emergency stopping of the engine.

## 4.3.4. CHECK THE LUBRICATION PUMP SETTINGS

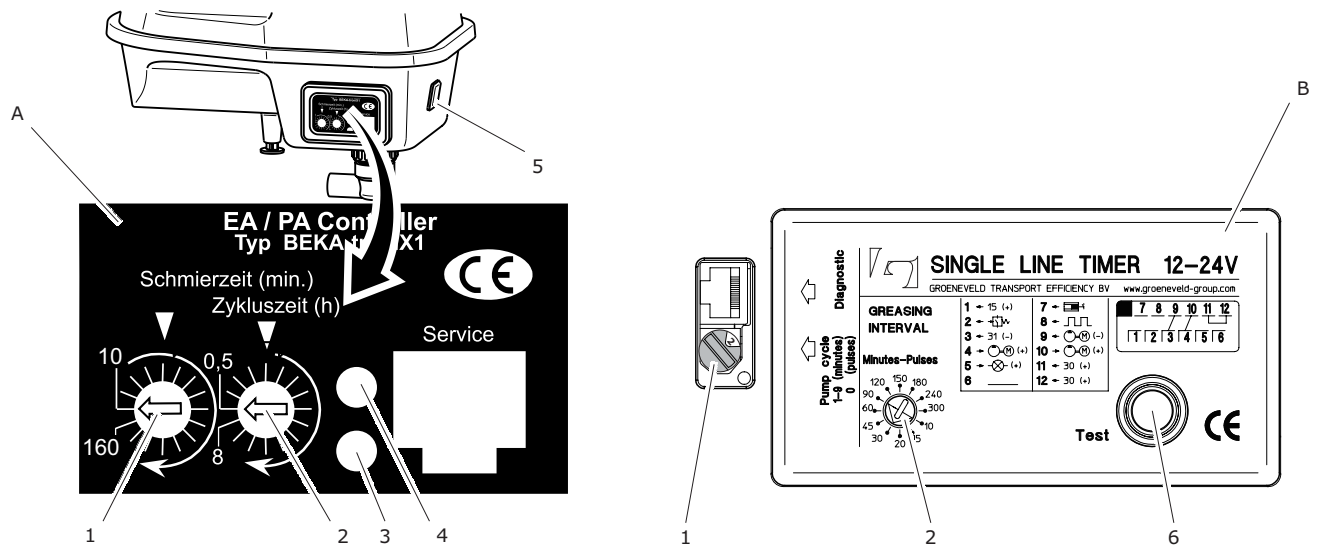


Figure 4.6 FIGURE 4.6 Check lubricating pump settings

(A) BEKA control panel

(B) GROENEVELD control panel

(1) operation time (number of rev.)

(2) lubrication cycle

(3) green LED

(4) red LED

(5) push-button activating the pump (6) test button

### TIP



Automatic lubrication system pump is located on the right side of the trommel screen, below the engine compartment.

The settings of the automatic lubrication pump are selected by the Manufacturer for specific working conditions of the machine and they must not be changed.

Due to the possibility of settings being changed by unauthorized persons each time before starting the machine, check the time setting of the pump (1) - the value [20] (BEKA) or [2] GROENEVELD and lubrication cycle setting (2) - the value [0.5] (BEKA) or [30] GROENEVELD.

After turning the ignition key from position [0] to position [1], check also the indications of red LED


(4) and green LED (3) on the panel (A). Detailed information concerning the codes displayed by the LEDs is given in section 5.

### TIP



If button (5) (BEKA) is pressed, the pump will operate in a set cycle. Start of lubrication process is signalled by lighting of green LED. Similarly, pressing the button (6) (GROENEVELD) for a period of 1 second will run one lubrication cycle. Hold down the button (6) for 6 seconds run 10 lubrication cycles.

## 4.3.5. CHECK GREASE LEVEL

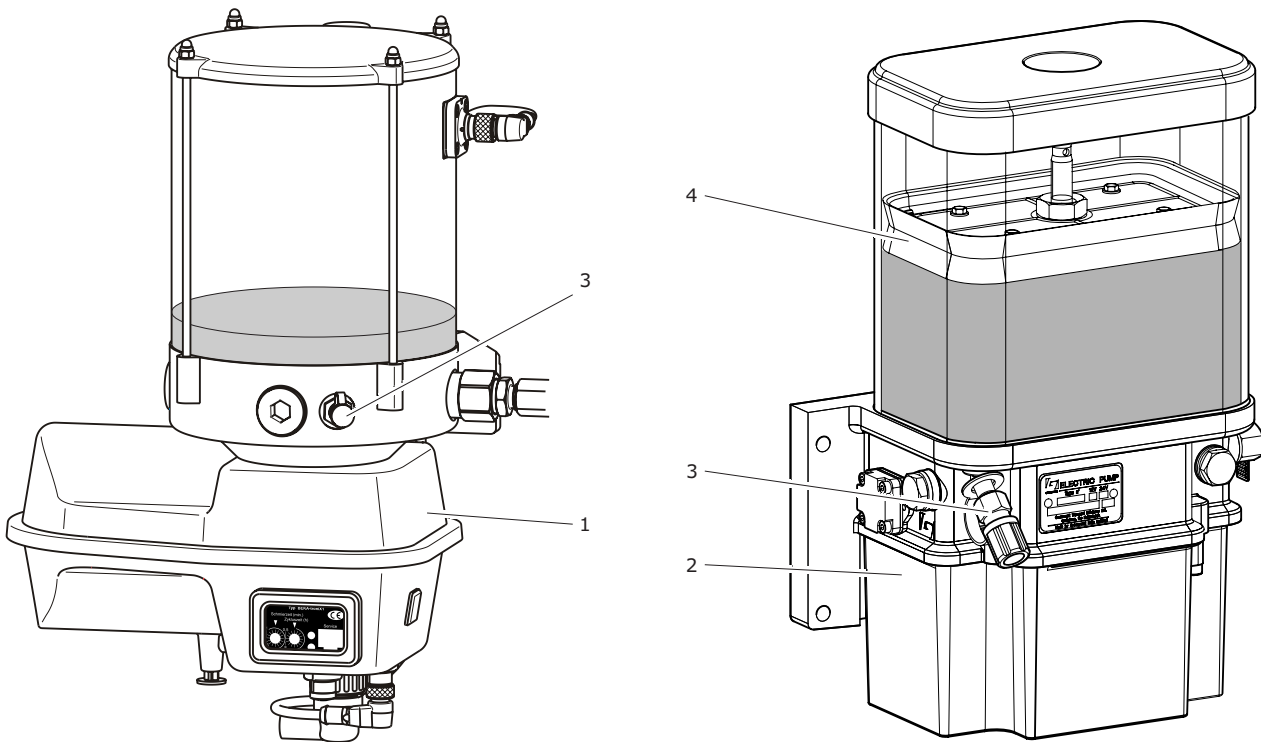

**Figure 4.7** Check grease level

(1) BEKA pump

(2) GROENEVELD pump

(3) fitting for filling a container

(4) plate


## PROCEDURE

- Check grease level in the pump tank.
- If necessary, add grease.
- The grease pump tank should be filled through grease nipple (3) using a manual or pneumatic grease gun. In the BEKA grease you can also supplement oil by removing the top cover. You must not do this in the GROENEVELD pump.

**ATTENTION**

The settings of the automatic lubrication pump are selected by the Manufacturer for specific working conditions of the machine and they must not be changed.

## 4.3.6. CHECK ENGINE COOLANT LEVEL

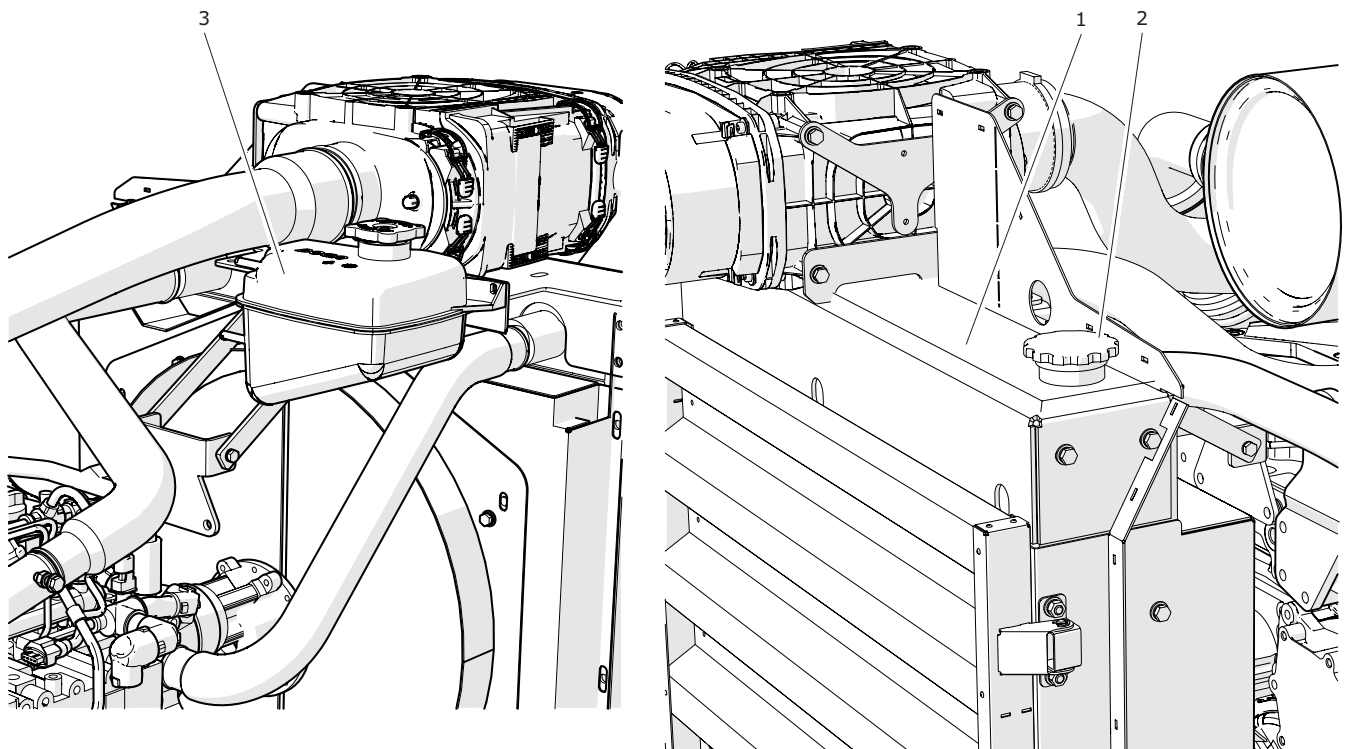

**Figure 4.8** Check engine coolant level

(1) radiator (CATERPILLAR)

(2) filler plug

(3) expansion tank (DEUTZ)

## PROCEDURE

- Check the fluid level in the expansion tank or in radiator.
- Correct level must be between LOW and FULL bars in the tank, or about 1 cm below the edge of the radiator cap.
- If necessary, add engine coolant according to specification of operating fluids – section 5.

**ATTENTION**

The coolant expansion tank is located above the radiator, in the engine compartment – applies to machines with DEUTZ engine

#### 4.3.7. OTHER CHECKS

- Conduct daily inspection according to guidelines presented in section 5.
- Check correctness of electrical system operation (whenever the trommel screen is towed on public roads).
- Check technical condition and completeness of safety guards (side guards of engine compartment, side guards of screening drum, front guard of engine compartment, lateral under-run protection devices). Check if guards are correctly closed.
- Visually inspect if the tyres are properly inflated. If necessary inflate the tyres up to recommend pressure.
- Check and possibly remove thicker contaminations from the brush.

## 4.4 START THE TROMMEL SCREEN

### 4.4.1. PRELIMINARY INFORMATION

If no contraindications for starting the trommel screen are found during daily inspection, commence starting the machine. Proper starting of the machine includes a range of preparatory activities such as:

- positioning the machine in working location,
- starting the engine,
- unfolding the conveyors (the side conveyor and the rear conveyor),
- checking and, possibly, adjusting tension of conveyor belts,
- starting proper working.



#### **DANGER**

The machine must not be used when not in working order.

#### 4.4.2. POSITION THE MACHINE IN ITS WORKING LOCATION

- Position the trommel screen on hard, stable, flat and level ground and ensure sufficient yard area around the machine for piling the screened charge material.
- Tractor must be placed to drive forward.
- Disconnect pneumatic conduits and electric leads from the tractor and place conduit terminals in the specifically prepared holding sockets located on the front beam of the lower frame.
- Immobilise the trommel screen with parking brake by releasing the red push-button of the loosening-parking valve.
- Place chocks under the trommel screen's wheels in order to prevent the machine from rolling. Place one chock in front of the wheel and the second one behind the wheel. The chocks are located on brackets fixed to mudguards.
- Take the support crank off from the holder and fold the crank to working position.
- Pull the crank (shifting to a higher-speed working mode of the support – quick feed of the support leg) – figure (4.12).
- Turn the crank to the right to slide out the support leg until it touches the ground.
- Press the support shaft (shifting to a lower-speed working mode of the support – slow feed of the support leg). – figure (4.11).
- Turn the crank in the same direction to set the drawbar eye at such a height that it is possible to unhitch the drawbar hitching eye from the tractor hitch.
- Unhitch the drawbar hitching eye and drive

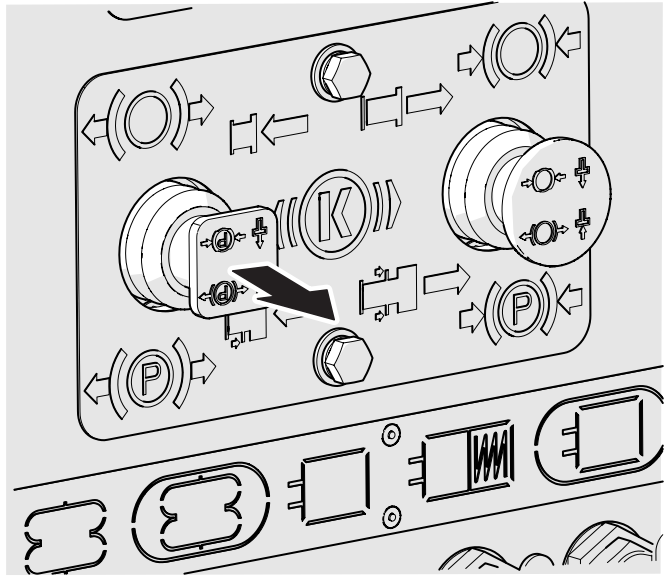


Figure 4.9 Engaging the parking brake

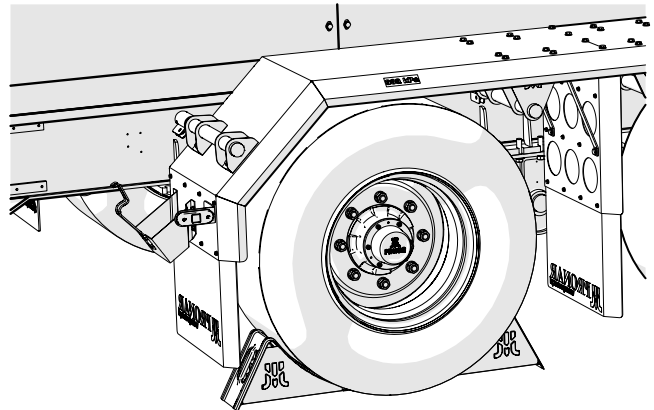


Figure 4.10 Chocks

tractor away from the machine.

- Set the drawbar eye at such a height that it is possible to level the lower frame.

If the trommel screen is equipped with hydraulic support legs (optional), you can lower them with a hand pump or by using the machine hydraulic system. For a detailed description please refer to chapter found further in this manual.

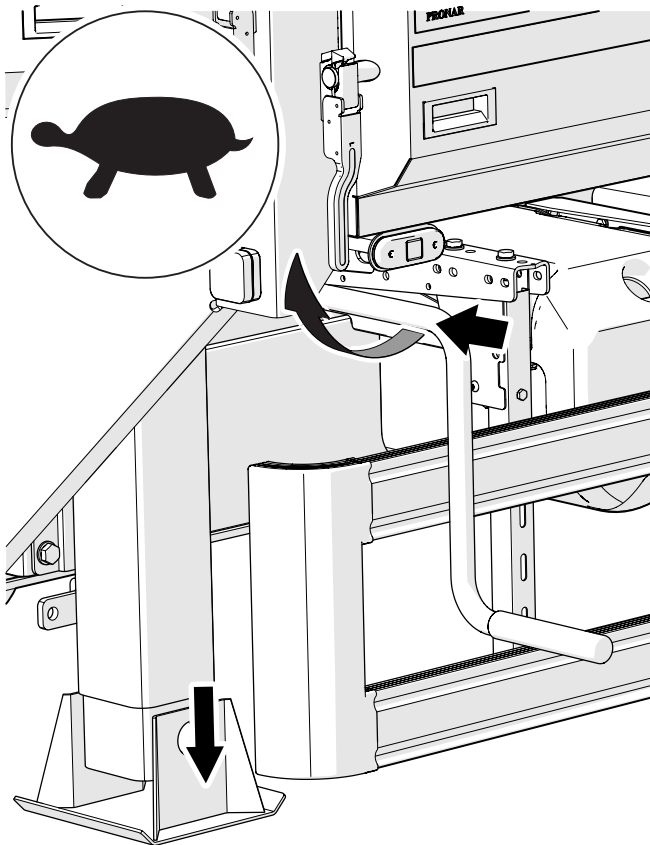


Figure 4.11 Front support, slow feed

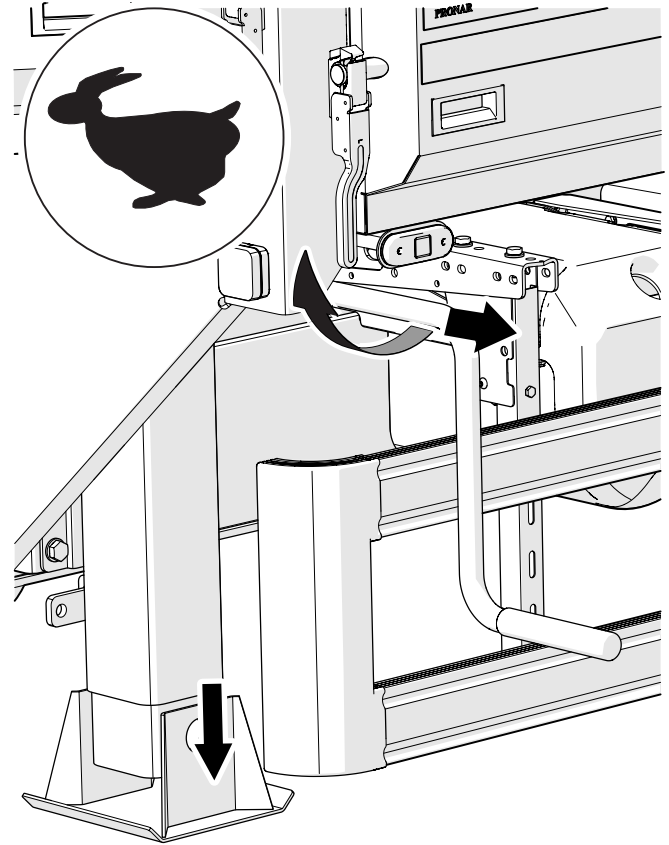


Figure 4.12 Front support, quick feed

**ATTENTION**

Do NOT use a high speed when the support is greatly loaded.

**TIP**

The trommel screen is allowed to be slightly tilted backwards (max. 2°).

**ATTENTION**

Be especially careful when unhitching the trommel screen from the tractor. If it is not necessary, do not stand between the machines.

Ensure proper visibility and make sure that nobody is present in the hazard zone when unhitching the machines.



### 4.4.3. START THE ENGINE

- Turn main switch to ON position.

*The switch is located on the lower frame bracket under the engine guard, at the height of the main control panel.*

- Open the main control panel door, insert key to ignition.
- Turn the key from position 0 (OFF) to position 1 (ON).
- After turning the ignition key, heating of glow plugs is switched on (this is signalled by corresponding indicator light) and the control panel is activated on which the following message is displayed: STOP, SAFETY TIME 10s. If none of the safety switches is activated, the engine can be started after 10 seconds.

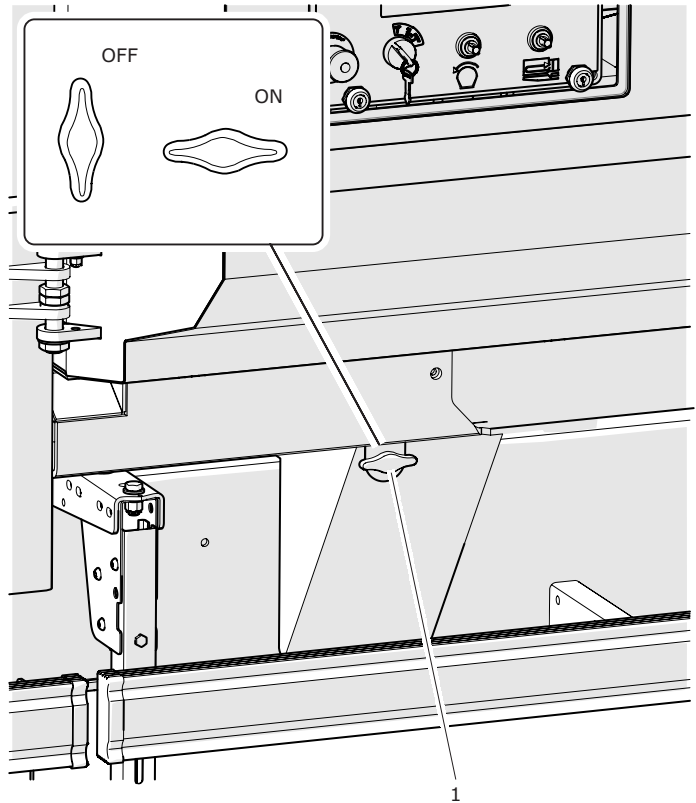


Figure 4.13 Main switch

- Push the key in and turn it to position (1) switch 2 (START). The engine should start immediately. In case of a cold start the starter may not turn. In this case, press and hold the start-up assist button, press the key and turn it to the START position. After engine start, release the start-up assist button.



Figure 4.14 Information message

*If the engine cannot be started, do not hold the key in START position for more than 10 seconds. Try to start the engine again after about 60 seconds. If the engine can not be started after 3 – 4 trials, find and remove the cause of the problem.*

- After starting the engine, working time of the engine is being counted (ENGINE LIFE TIME) as well as current temperature (ENGINE TEMPERATURE) and rotational speed

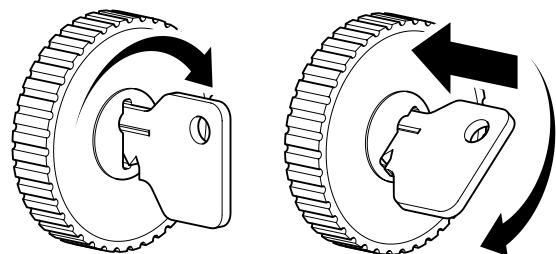


Figure 4.15 Ignition


(ENGINE SPEED) are displayed.

After starting a cold engine ENGINE STATUS is

displayed: STARTING to indicate that the engine is warming up. When the temperature of 20°C is reached the message will change to ENGINE STATUS: READY and green READY indicator lights on the main control panel. When the engine is ready you can start the hydraulic pumps. The hydraulic pumps cannot be started at a lower temperature (protection of cold engine against loading).


Engine status:	STARTING
Engine speed:	145
Engine temp:	15
Engine life time:	7
Fuel level:	78%
Battery:	12.7 V

**Figure 4.16** Information message



**TIP**

Two indicator lights should be normally on before the engine is started i.e. no battery charging indicator light and low oil pressure indicator light. The indicator lights go out after starting the engine.



**DANGER**

Before starting the engine make certain that all guards are closed.

#### 4.4.4. OPERATE HYDRAULIC SUPPORTS

The front hydraulic supports are equipped with a manual pump and you can operate it without the need activate the machine. Rear support is controlled solely by the machine hydraulic system.

##### OPERATE THE FRONT SUPPORT LEGS WITH HAND PUMP

- Remove the pump rod (4) from the holder (5) and insert it into the pump socket (3) - figure (4.17).
- Set valve (1) to position (C).
- Set the valves (6) on the right and left side of the machine in the OPEN position - (B).
- Set the valve (9) of the manual hydraulic pump (3) to position (C) - lowering the support or in position (A) - raising the support leg.
- Use the lever (4) to set support leg at the correct height.
- Once finished, close the valves (6) - position (A) CLOSE.
- Set pump valve (9) in the neutral position (B).
- Set valve (1) to position (B).
- Remove the rod and attach it to the handle (5).

When switching the valve (9) to raising the hydraulic support, machine level will change quickly because the hydraulic pump is equipped with a pressure relief valve.

##### OPERATE THE FRONT SUPPORT LEGS WITH THE MACHINE HYDRAULIC SYSTEM


- Set valve (1) to position (A).
- Set the valves (6) on the right and left side of the machine in the OPEN position - (B).

- Using the main control panel to control the support leg - button (10) - raise support leg, the button (11) - lower the support leg.
- Once finished, close the valves (6) - position (A) CLOSE.
- Set valve (1) to position (B).

##### OPERATE THE REAR SUPPORT LEG


The rear support leg is designed to stabilize the machine while unfolding, folding and lateral conveyor operation.


- Set valve (1) to OPEN position (B) - figure (4.18).
- Using the buttons (3) - lower the support leg or (4) - raise the support leg, set the support in the correct position.
- Then close the valve (1) - set lever in position (A) - CLOSE

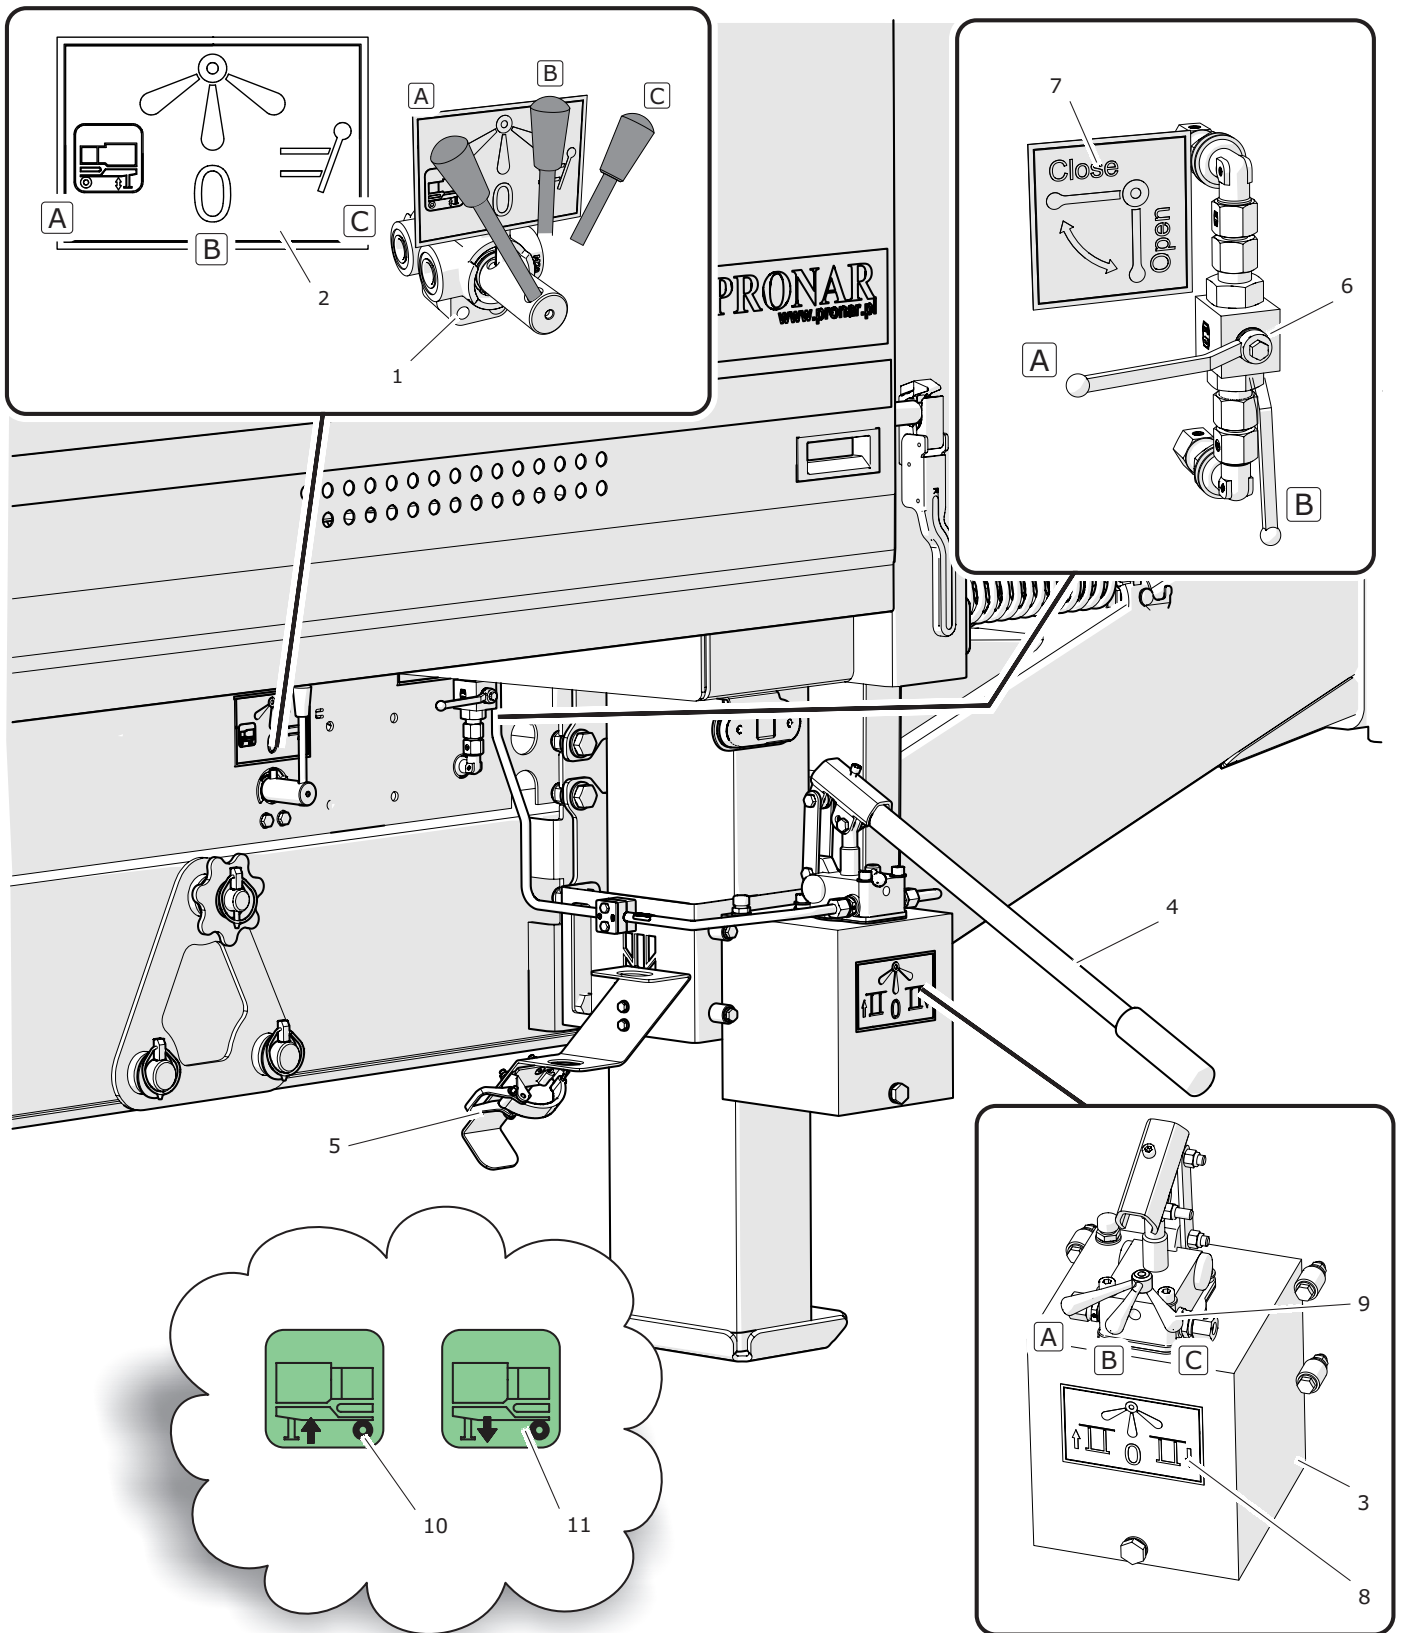

**Figure 4.17** Front support legs


- |                          |                           |                               |
|--------------------------|---------------------------|-------------------------------|
| (1) operating mode valve | (2) information decal     | (3) manual hydraulic pump     |
| (4) lever                | (5) handle                | (6) Cut-off valve             |
| (7) information decal    | (8) information decal     | (9) pump operating mode valve |
| (10) rising push-button  | (11) lowering push-button |                               |

 **ATTENTION**  
Do not unfold lateral conveyor when rear support leg is not extended.

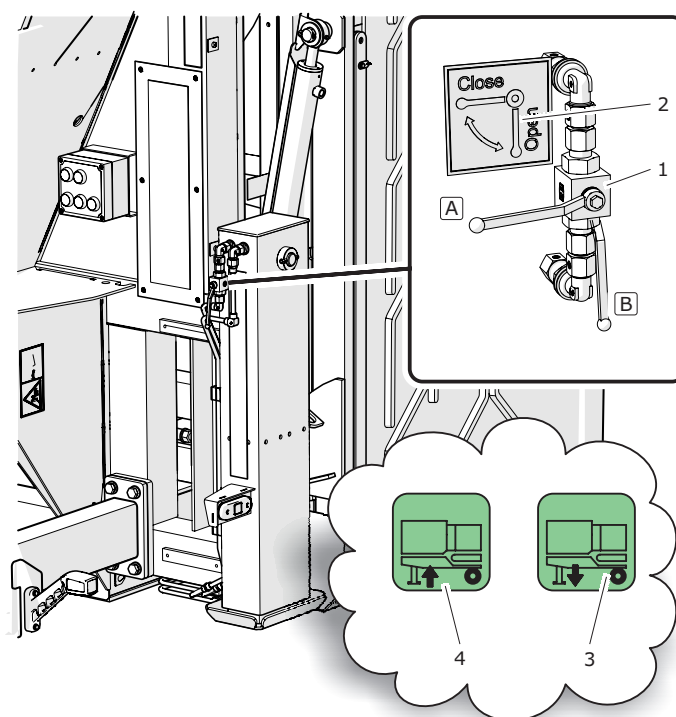

**Figure 4.18** Rear hydraulic support leg  
(1) Cut-off valve                      (2) information decal  
(3) lowering push-button      (4) rising push-button

## 4.4.5. UNFOLD LATERAL CONVEYOR

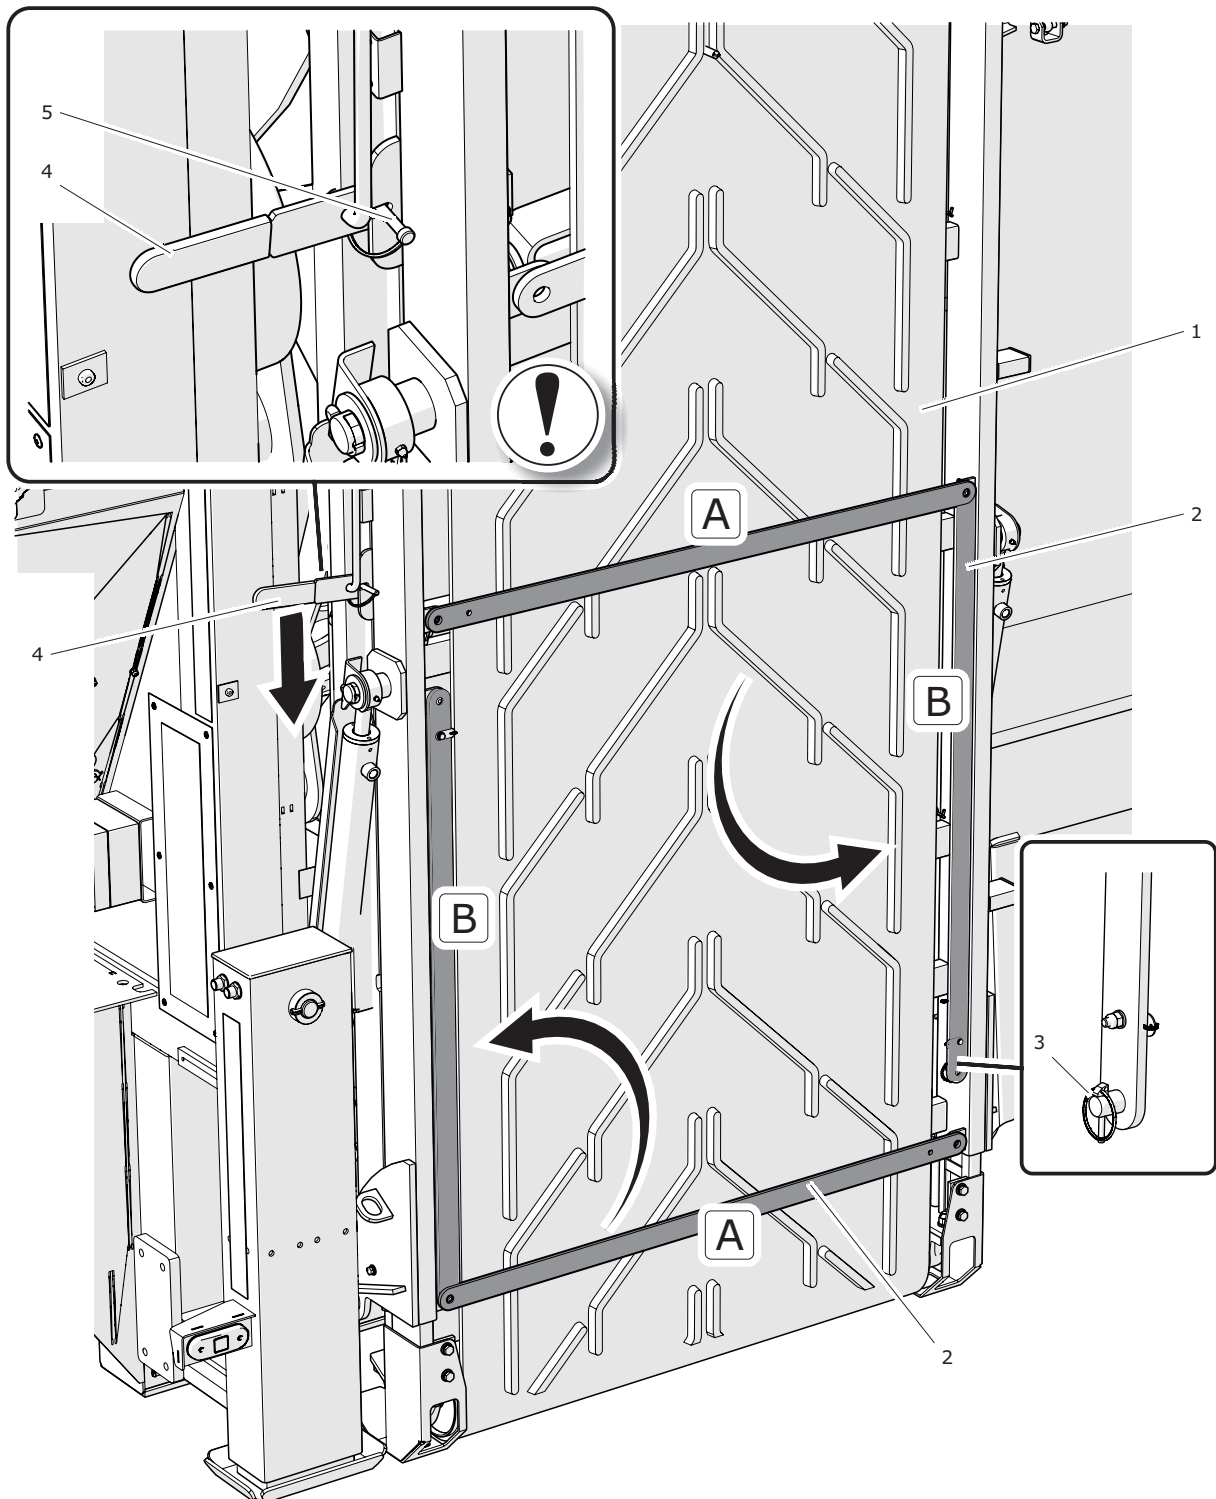

**Figure 4.19** Preparing the side conveyor for unfolding


(1) side conveyor

(2) protection strip

(3) strip cotter pin

(4) pawl lever

(5) lever cotter pin

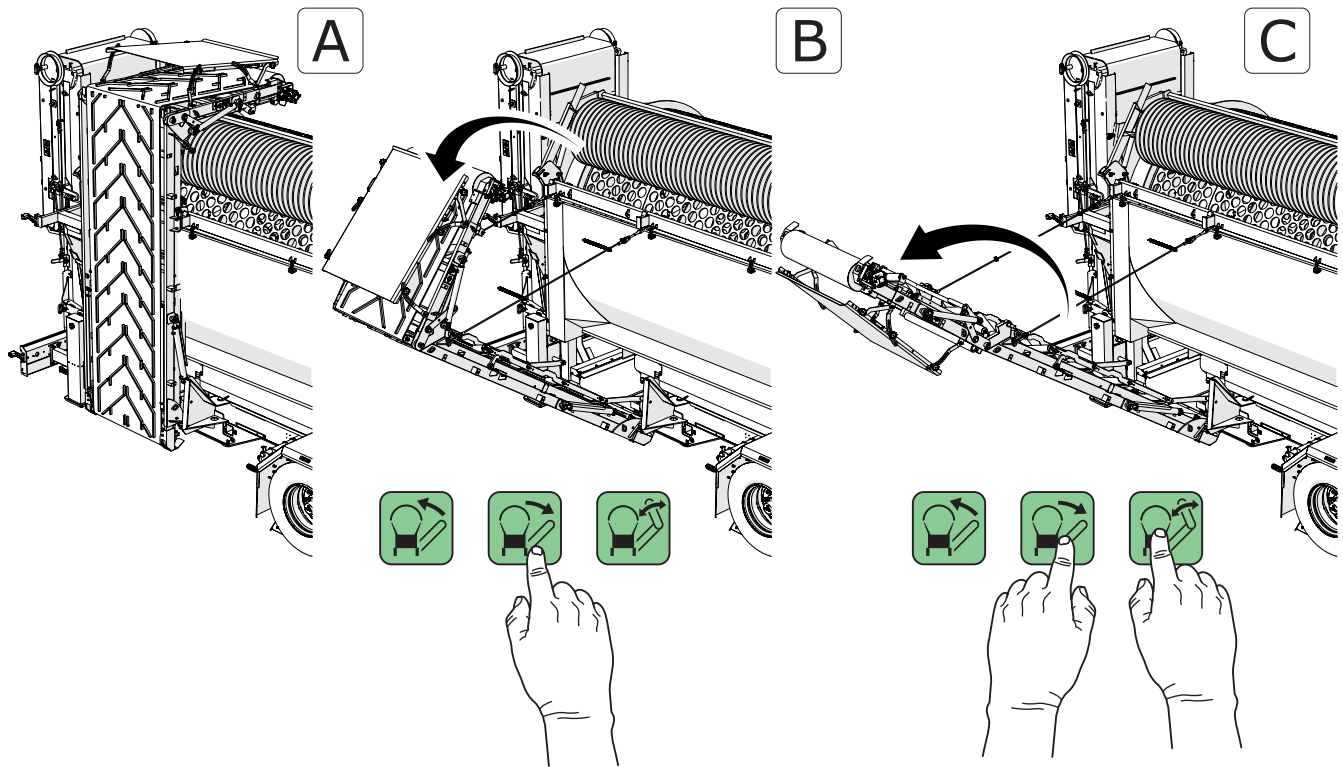

**Figure 4.20** Steps to unfold the lateral conveyor.

#### PREPARATION

- Take out two cotter pins (3) – figure (4.19).
- Relocate protection strips (2) from position (A) to position (B).
- Install cotter pins (3).
- Take out cotter pin (5) protecting the lever (4).

#### UNFOLD THE CONVEYOR

- Using the auxiliary control panel, press the conveyor to the machine. If the conveyor is pressed to the machine, the pawls can be unlocked.
- Move the lever (4) in the direction indicated by the arrow and hold it.
- Using the main control panel or the auxiliary control panel, first unfold the complete conveyor from the trommel screen – STEP

(A) to (B) – figure (4.20).

- When unfolding the conveyor, the pawl lever can be released.
- While holding two push-buttons on the panel, (see figure), unfold the upper part of the conveyor, STEP (B) to (C).



#### DANGER

Keep the proper sequence of conveyor unfolding.

## 4.4.6. FOLD LATERAL CONVEYOR

- Remove cotter pin (5) – figure (4.19).
- While holding two push-buttons on the panel, (see figure), fold the upper part of the conveyor, STEP (C) to (B).
- Check the arrangement of conveyor belt.
- While holding down the panel button, fold the conveyor, STEP (B) to (A).
- The conveyor will be automatically locked by means of pawls.
- Lock the pawl lever with a cotter pin (5) – figure (4.19).
- Relocate the conveyor belt protection strips (2) to horizontal position – position (A) – figure (4.19) and secure them by means of cotter pins.

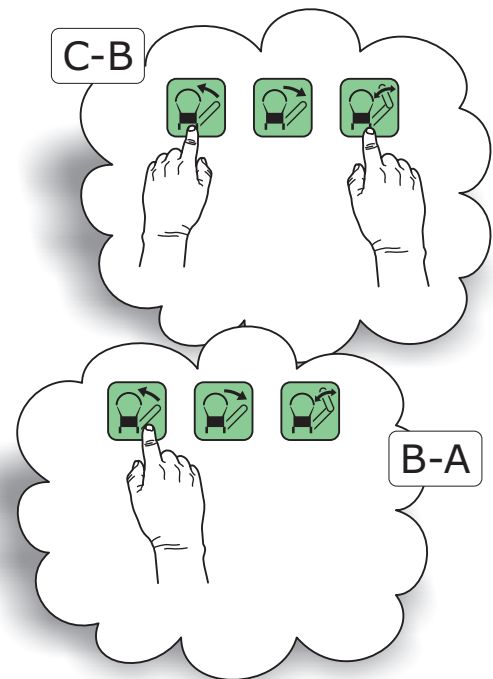


Figure 4.21 Fold lateral conveyor

**ATTENTION**

Lower the brush before folding the lateral conveyor



4.4.7. UNFOLD REAR CONVEYOR

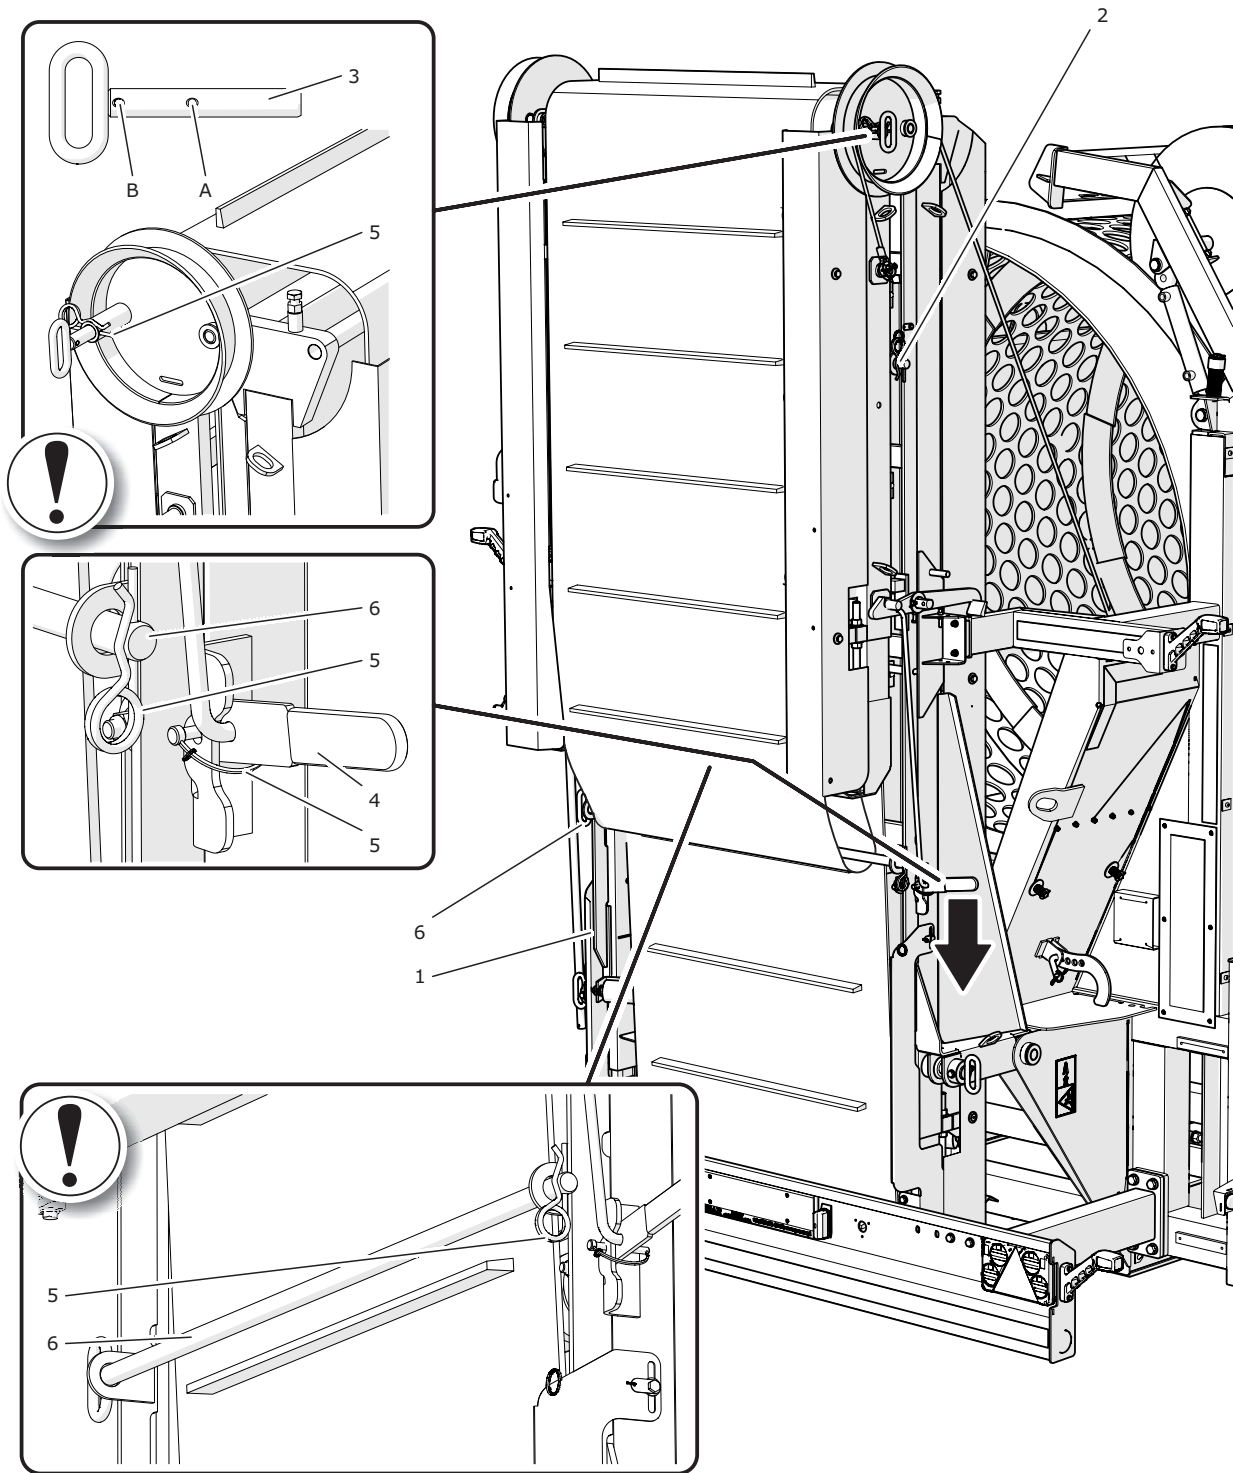


Figure 4.22 Preparing the rear conveyor for unfolding

- (1) rear conveyor
- (2) upper retaining pin
- (3) locking pin
- (4) pawl lever
- (5) cotter pin
- (6) lower retaining pin
- (A), (B) cotter pin positions

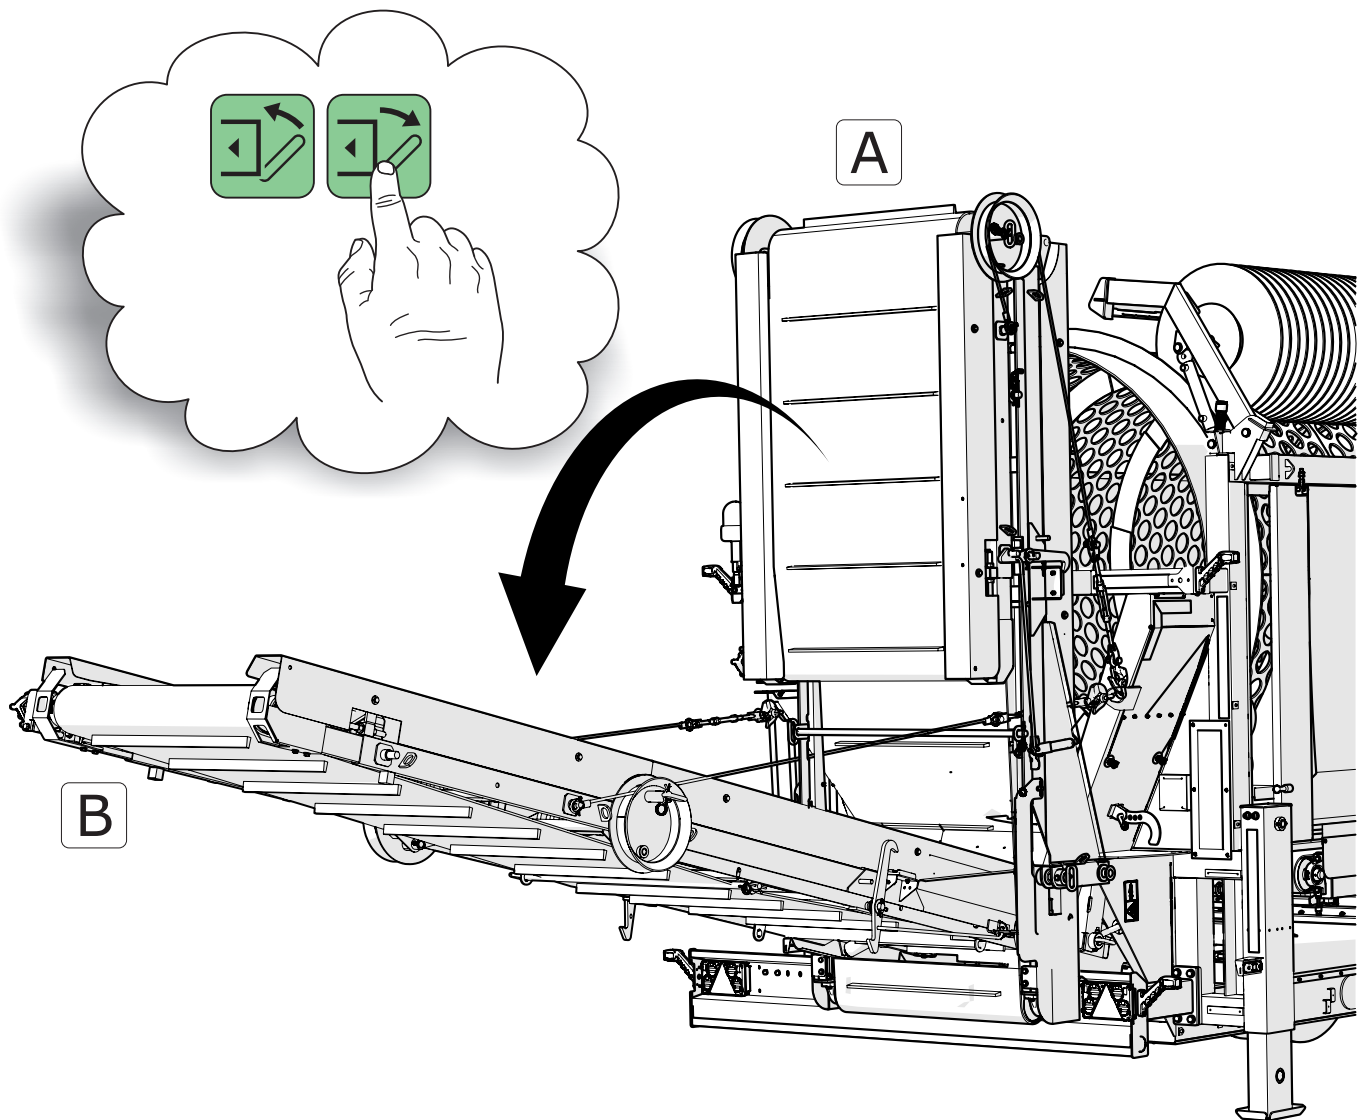


Figure 4.23 Stages of rear conveyor unfolding

- Take out cotter pins (5) and the lower pin (6),
- Remove the lower supporting pin (6) and place it in the holder located on the left side of the conveyor.
- Remove the cotter pin (5) of the lever (4) – figure (4.22)
- Using the auxiliary control panel, press the conveyor to the machine.
 

*If the conveyor is pressed to the machine, the pawls can be unlocked.*
- Move the lever (4) in the direction indicated by the arrow and hold it.
- Using the auxiliary control panel, unfold the conveyor.
- When unfolding the conveyor, the pawl lever (4) can be released.
- Remove the cotter pin (5) of the upper pin (2) supporting the belt.
- Remove the upper supporting pin (2) and place it in the holder located on the left side of the conveyor.
- Remove the two cotter pins (5) of securing pins (3) one the left and right sides of the


conveyor.

- Insert two pins (3) maximally and secure them again with cotter pin (5).

*Cotter pins should be located in hole (B). Hole (A) is used for fixing the pin's cotter pin when the conveyor is folded. In this position, the pin is not inserted all the way and it does not block the upper frame.*

- Insert the locking pin on the pawl lever (4).

Working angle of the rear conveyor can be adjusted as needed by means of hydraulic cylinders. In order to do that, two steel cables must be disassembled (1). The cables should be dismantled from lugs (2) welded to the rear wall structure (3). The cables can be dismantled only after complete unfolding of the rear conveyor.

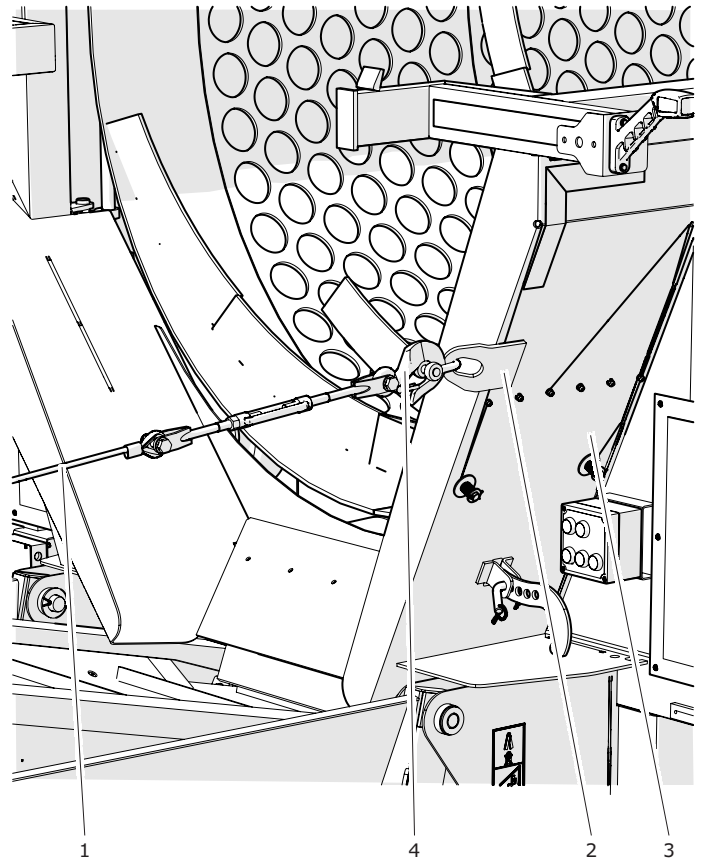

**Figure 4.24** Disassembly of rear cables

(1) steel cable  
(3) rear wall

(2) lug  
(4) hook



### DANGER

After each installation of pins, install and check correctness of installation of securing cotter pins.

Do NOT stand under the side conveyor or rear conveyor during their unfolding.

#### 4.4.8. FOLD REAR CONVEYOR

- Raise the rear conveyor to such a height that it is possible to install steel cables (if they were dismantled) and install the cables.
- Lower the conveyor to tighten the cables completely. Make sure that both cables are at equal tension.
- Take out two cotter pins (3) - figure (4.22), slide the pins out to align the pin's hole (A) with the socket hole. Secure pins with cotter pins.
- Insert the upper retaining pin (2) so that it is located beneath the belt and secure it with cotter pin (5).
- Remove lever cotter pin (5).
- Using the auxiliary control panel, raise the conveyor. Raise the conveyor until it is automatically locked.
- Install lever cotter pin (5).
- Insert the lower retaining pin in such a way that it is pulled him through the belt, see figure (4.22). Secure the pin with a cotter pin (5).

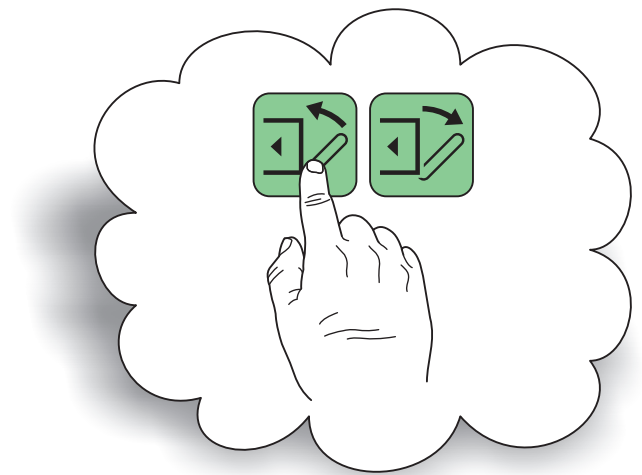


Figure 4.25 Fold rear conveyor

#### 4.4.9. CHECK CONVEYOR OPERATION

Check operation of the conveyors each time before start of screening. The purpose of checking is to confirm correctness of the conveyor belt guidance and tension. In order to do this:

- start all conveyors in succession,
- during movement of the conveyor belt, check that the belt does not shift sideways to the left or to the right on the driving and return rolls,
- check that the belt does not slide on the driving roll,
- If the conveyor belt does not work properly, adjust the conveyor. Detailed information concerning maintenance and adjustment of the conveyors is given in section 5.



#### **ATTENTION**

Conveyor belt wears out faster if it slides and (or) shifts sideways on the rolls.

The inspection can be carried out only when the screening drum and conveyors are empty.

## 4.5 START THE TROMMEL SCREEN DRIVES

You can start the trommel screen drive in automatic or manual mode.

Before loading the charging hopper, start all necessary drive systems in the following sequence (applies to manual mode):

- drive of side conveyor and transverse conveyor,
- drive of longitudinal conveyor and rear conveyor,
- drive of screening drum,
- drive of conveyor in charging hopper.

Proper starting sequence enables removal of remaining material from the trommel screen and prevents clogging and blocking of the machine at start-up. After the first start (from cold engine condition), the trommel screen should be loaded slowly until nominal working parameters of the engine are achieved.

Before starting the charging hopper conveyor drive, wait until the drum reaches the preset working speed. Also, the charging hopper conveyor may be loaded only when the preset speed of the conveyor belt is reached.

In automatic mode, the drives are started in the same sequence without the participation of the operator.



### ATTENTION

Before commencing work, make sure that the trommel screen is fully operational and correctly adjusted. Do NOT start out-of-order machine.

### 4.5.1. START THE DRIVES IN MANUAL MODE

#### START AND STOP THE LATERAL AND TRANSVERSE CONVEYOR DRIVE

- In order to start the conveyors, press push-button (1) – START of the drive.
- When the drive is switched on, LED (3) indicating operation of the conveyors is on.
- In order to stop the conveyors' drive, press push-button (2) – STOP.
- Operation of the conveyors is controlled only by means of the main control panel.

*Lateral conveyor speed can be adjusted using the regulator placed on the conveyor.*


#### START AND STOP THE LONGITUDINAL AND REAR CONVEYOR DRIVE

- In order to start the conveyors, press push-button (1) – START of the drive.
- When the drive is switched on, LED (3) indicating operation of the conveyors is on.
- In order to stop the conveyors' drive, press push-button (2) – STOP.
- Operation of the conveyors is controlled only by means of the main control panel.

*Rear conveyor speed can be adjusted using the regulator placed on the conveyor.*

#### START AND STOP THE DRUM DRIVE

- In order to start the drum, press push-button (1) - START.
- Rotational speed of the drum can be set by means of potentiometer (5).

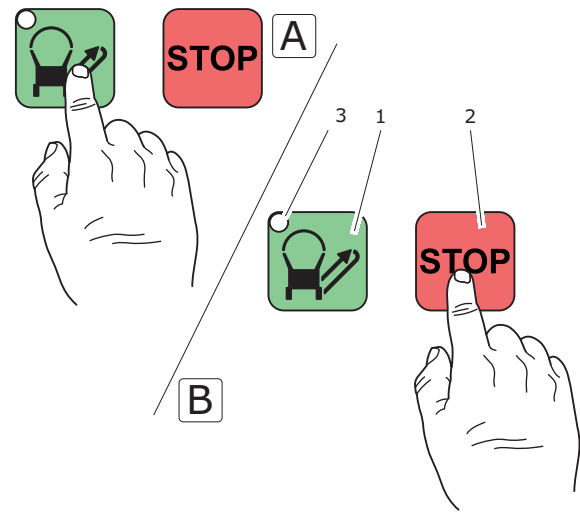

**Figure 4.26** Start and stop the lateral and transverse conveyor

- (1) START push-button      (2) STOP push-button  
(3) LED



#### ATTENTION

Do NOT start the conveyors' drive when the rear conveyor is folded

Do NOT start the conveyors' drive when the side conveyor is folded



#### ATTENTION

The reverse run of the drum is used only for adjusting the screening drum position.


Do NOT use the reverse run of the screening drum in order to remove clogging of charge material.

*When the drum is accelerating to reach the set speed, LED (4) is blinking slowly. When the drum is decelerating, LED (4) is blinking quickly. If the rotational speed of the drum is equal to the set*

speed, LED is on constantly.

- In order to stop the drum drive, press push-button (2) – STOP.
- In order to start the drum in reverse direction, first stop the drum and then press on hold push-button (3) – REVERSE RUN.

During reverse run, the drum rotates at a constant speed regardless of the potentiometer setting (5).

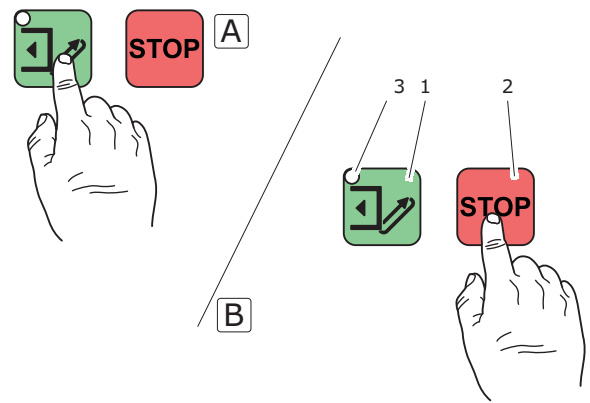

**Figure 4.27** Start and stop the longitudinal and rear conveyor

#### START THE CHARGING HOPPER CONVEYOR DRIVE


- In order to start the charging hopper conveyor, press push-button (1) START.
- Conveyor speed can be set by means of potentiometer (5).

When the conveyor is accelerating to reach the set speed, LED (4) is blinking slowly. When the conveyor is decelerating, LED (1) is blinking quickly. If the conveyor belt speed is equal to the set speed, LED is on constantly.

- In order to stop the drum drive, press push-button (2) – STOP.
- In order to run the conveyor in reverse direction you must first stop the conveyor
- Then press the button (3)- REVERSE RUN.

During reverse run, the charging hopper conveyor belt moves at a constant speed regardless of the potentiometer setting (5).


(1) START push-button (2) STOP push-button  
(3) LED

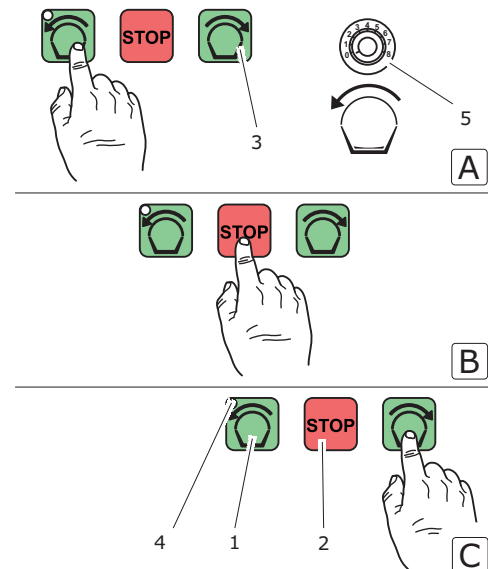

**Figure 4.28** Controlling the drum

(1) START push-button (2) STOP push-button  
(3) REVERSE RUN push-button  
(4) LED (5) potentiometer



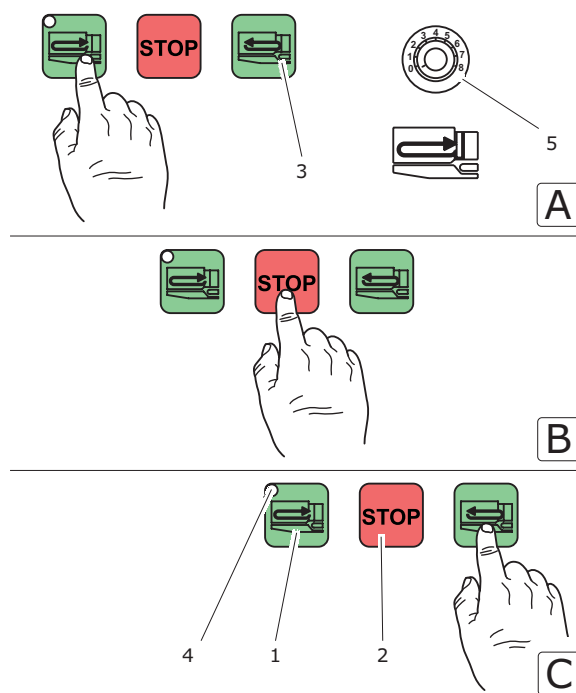

**Figure 4.29** Controlling the charging hopper feeder

- (1) *START push-button*
- (2) *STOP push-button*
- (3) *REVERSE RUN push-button*
- (4) *LED*
- (5) *potentiometer*

### 4.5.2. START AND STOP THE SCREEN DRIVES IN AUTOMATIC MODE

Automatic mode is designed to start all machine drives in correct sequence.


- Press the START AUTO button when READY lights up on the main control panel.

*The AUTO mode is engaged when the light flashes and AUTO STATUS is displayed on the LCD panel.*

- In auto mode, drum speed and conveyor belt speed depend on the knob settings on the main control panel.
- To stop the drives in automatic mode, press the STOP AUTO button on the main control panel.

*When you press STOP AUTO drive will not stop.*


*In START AUTO mode each drive can be stopped independently. This will result in switching to normal mode (manual control).*

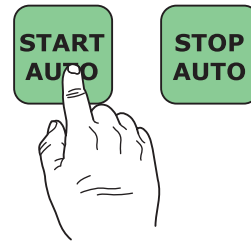

Engine status:	READY
Engine speed:	1150
Engine temp:	65
Engine life time:	17
Fuel level:	73%
Battery:	12.7 V
<b>AUTO STATUS</b>	

**Figure 4.30** Operation in automatic mode

## 4.5.3. ADJUST THE ENGINE SPEED, STOP THE ENGINE

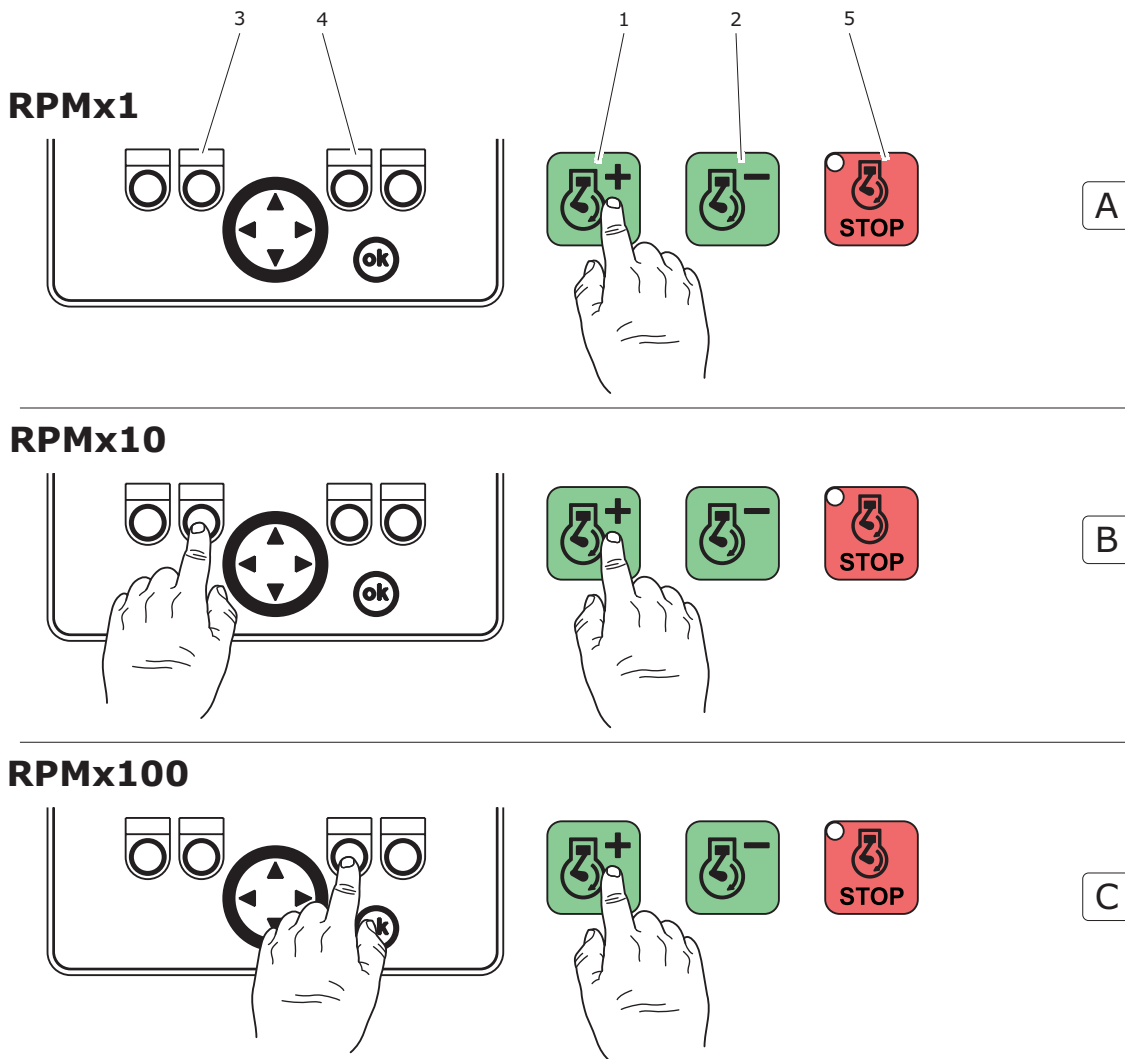

**Figure 4.31** Methods of engine speed control

(1) Increase engine rpm

(2) Decrease engine rpm

(3) x10 multiplier

(4) x100 multiplier

(5) stop the engine

When started engine speed is 880 RPM. The engine controller provides three ways to adjust the drive speed- see figure (4.31).

- Option (A) - press and hold the button (1) or (2). The speed will be increased or reduced by 1 RPM.
- Option (B) - press and hold the button (1) or

(2) and (3). The speed will be increased or reduced by 10 RPM.

- Option (C) - press and hold the button (1) or (2) and (4). The speed will be increased or reduced by 100 RPM.

Engine speed range: 880 ÷ 1 600 rpm

- To stop the engine press button (5).

---


*When you stop the engine all screen drives will be stopped first and then reduce the engine speed is reduced to a minimum and then it is stopped.*

---

**TIP**

You can control engine speed using the remote control (option).

## 4.6 SCREENING



**ATTENTION**  
Charge material must not overload the charging hopper conveyor drive and other drive systems.


Do NOT screen materials forbidden by the Manufacturer.

### GENERAL INFORMATION

It is impossible to specify detailed working principles due to the diversity of charge materials. Depending on a charge material, the user should choose by himself individual working parameters of the machine (rotational speed of the drum, lateral and rear conveyor speed, charging hopper conveyor belt speed, chute plate angle, etc.).

The charging hopper can be loaded using external belt conveyors, feeders, front loaders, loaders and other machines. Do not load charge material from a great height. During operation, working parameters of the machine should be regularly checked.

Alarm conditions may occur during screening. Such alarm conditions are indicated on the main control panel. Depending on a situation, it may be necessary to stop and check the machine. Detailed information concerning alarm conditions and their



**DANGER**  
Ensure that there are no bystanders in the loading zone.

Do NOT stand near working belt conveyors - danger of injury caused by ejected objects.

handling is given in section 5.

### MAGNETIC SEPARATORS (OPTION)

When working with magnetic separators, you must ensure that the conveyor speed where magnetic roller is installed is as slow as possible. You can adjust speed with the flow regulator placed in the conveyor drive system.

### FUEL-SAVING MODE (OPTION)

The machine is equipped with a fuel-saving system (SAVING STATUS). After emptying the hopper and a long break in the supply to the hopper (5 minutes), the engine reduces the speed to a minimum. When hopper is filled, the engine speed is increased to a set speed and it operates in normal mode. SAVING STATUS message is installed on the LCD Panel – figure (4.32).


Engine status:	READY
Engine speed:	1150
Engine temp:	65
Engine life time:	17
Fuel level:	73%
Battery:	12.7 V
<b>AUTO STATUS</b>	
<b>SAVING STATUS</b>	

**Figure 4.32** Information that saving mode is enabled

### HOPPER GRID (OPTION)

It protects the conveyor hopper against large material pieces. The grid must be inspected to make sure it is not clogged. When there is too much

material on the grid you need to raise it using the remote control or the main control panel. If the larger pieces of material are stuck between rungs, you must remove them manually. To do this end, you need to stop the screen and use the correct height ladders or platforms.

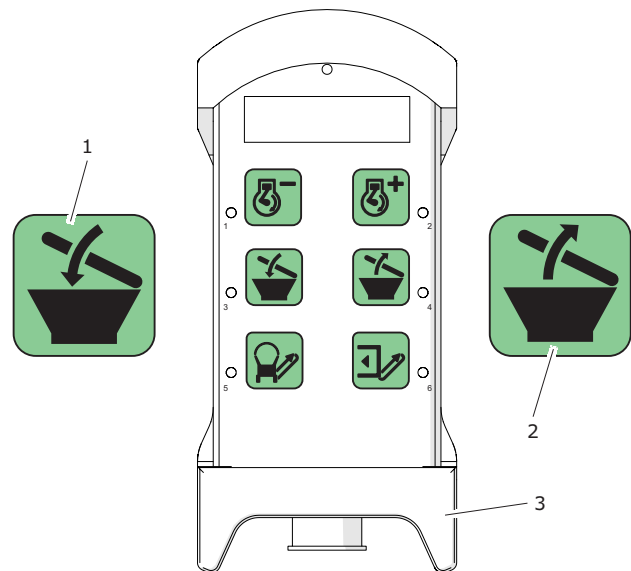

**Figure 4.33** Hopper grid operation

(1) lowering the grid

(2) raising the grid

(3) remote control

## 4.7 STOP THE TROMMEL SCREEN


### 4.7.1. STOP THE TROMMEL SCREEN IN NORMAL MODE

In order to stop the machine in a proper manner, switch off individual drives in proper sequence and maintain sufficiently long intervals when switching the drives successively.

#### PROCEDURE

- After emptying the charging hopper, switch off the charging hopper conveyor drive.
- After completed screening, stop the screening drum drive.
- Switch off the drives of the longitudinal conveyor and rear conveyor only when these conveyors are empty.
- Switch off the drives of the side conveyor and transverse conveyor only when these conveyors are empty.
- Decrease rotational speed of the engine.
- Turn off the engine after 3 minutes.
- Set the main switch to OFF position.

## 4.7.2. STOP THE TROMMEL SCREEN IN EMERGENCY MODE

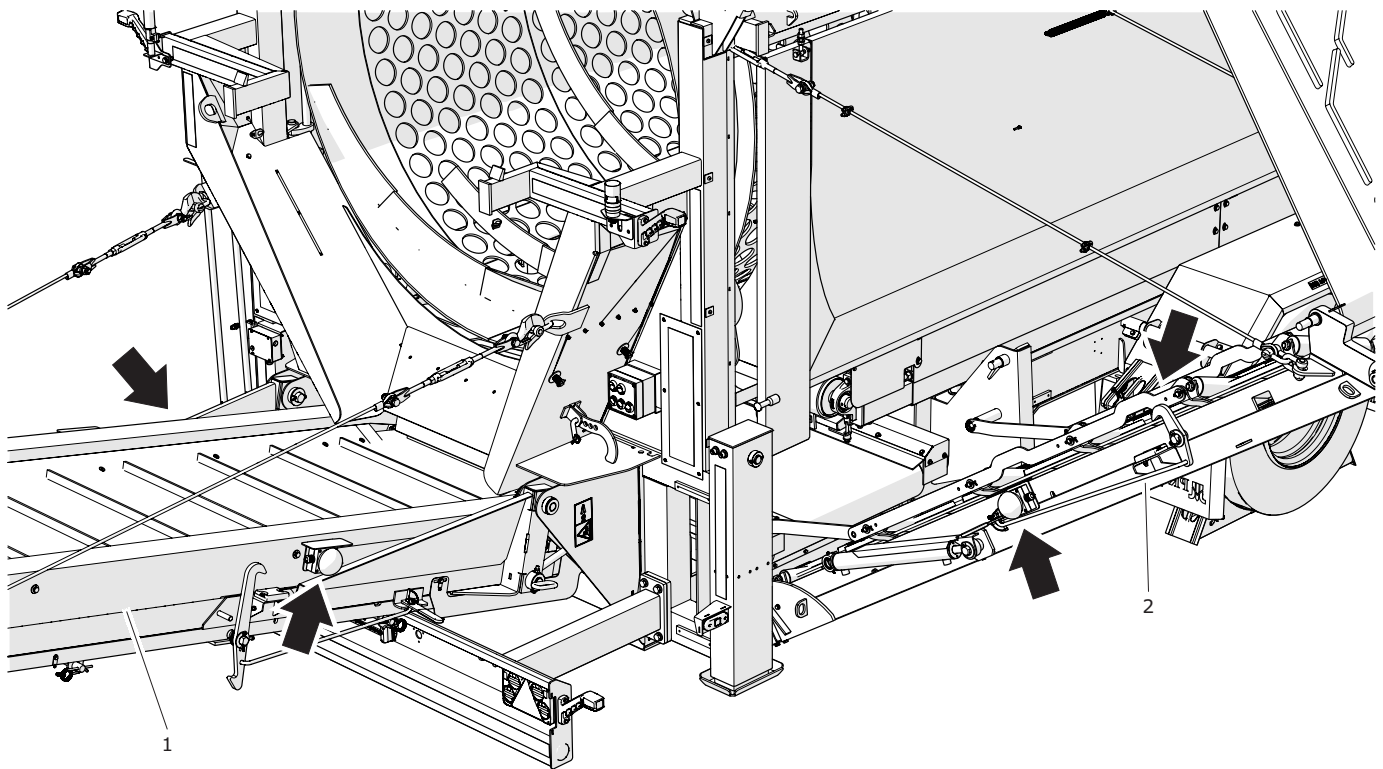

**Figure 4.34** Arrangement of safety switches  
 (1) rear conveyor (2) side conveyor

When the trommel screen is stopped in emergency mode, fuel supply to the engine and hydraulic oil supply to the receivers are immediately shut off. The machine is stopped by pressing one of 5 switches whose arrangement is shown in figure (4.34). Switches are placed in pairs on both sides of the rear and lateral conveyors. One safety switch (not shown in figure) is located on the main control panel.

When you open lateral guards (option) the screen will be also emergency stopped. You can open the lock using the attached triangular key.

**ATTENTION**

Emergency stopping of the trommel screen deteriorates durability of individual elements of the machine



The trommel screen may be stopped in emergency mode only if life or health of persons near the working machine is endangered or if there is a risk of serious damage to the trommel screen.



### 4.7.3. START THE TROMMEL SCREEN AFTER EMERGENCY STOP

Before restarting the trommel screen, make sure that its operation does not pose a threat to bystanders and that possible problems have been eliminated.

If at least one of the safety switches is activated, the following message is displayed constantly on the main control panel display: STOP, SAFETY TIME 10S. The counter displays constantly the time of 10 seconds. The countdown will be restarted only after unlocking the safety switch. In order to do that release (pull out) the red push-button or, in case of the switch located on the control panel, turn the switch - the switch will automatically return to unlocked position. After 10 seconds, normal starting of the engine and trommel screen can be commenced.

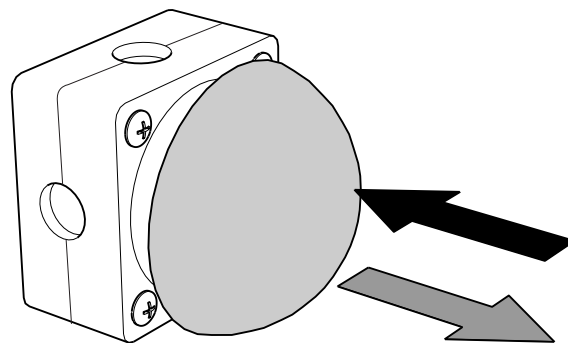


Figure 4.35 Safety switch

#### 4.7.4. STOP THE TROMMEL SCREEN IN ALARM CONDITION

The trommel screen is protected against damage if at least one of the following malfunctions occurs:

- excessive temperature of engine coolant,
- excessive temperature of hydraulic oil,
- no pressure of engine lubricating oil,
- Low hydraulic oil level.




Figure 4.36 Alarm indicators

If the above-mentioned alarms occur, the trommel screen stopping procedure will be initiated and corresponding information indicator will light up. If the machine has been stopped automatically, check its individual systems before restarting. In particular, check the trommel screen for tightness (hydraulic system, engine oil pan); check oil level and engine coolant level. The trommel screen can be also stopped due to overheating caused by contaminated radiator, hydraulic oil or overload of drive systems. Detailed information concerning alarm conditions and their handling is given in section 5.

## 4.8 BRUSH

The brush is designed for cleaning and unclogging the screening drum perforations during charge material screening. If these operations are not necessary, the brush should be raised.

- Lowering the brush – press and hold push-button (1).
- Raising the brush – press and hold push-button (2).

The brush must be lowered maximally. Lowering depth is adjusted by means of limiterS (3).



### TIP

Unnecessary use of the brush accelerates its wear.

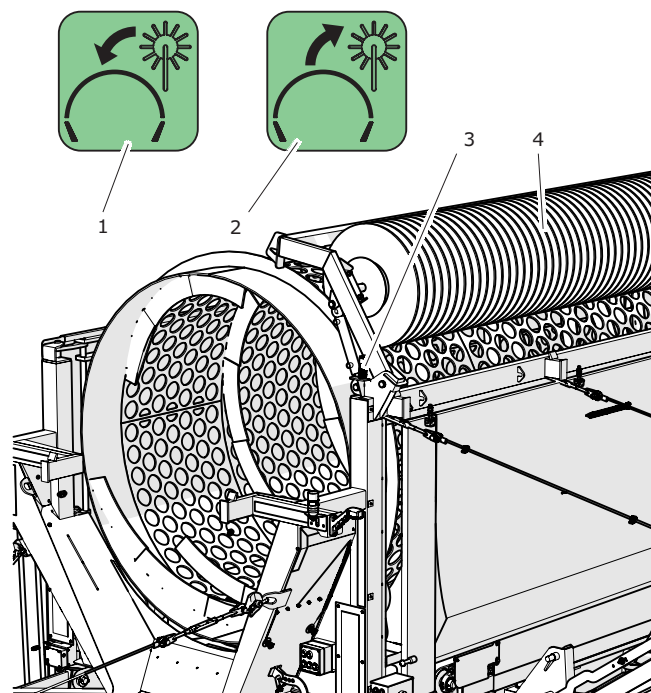


Figure 4.37 Brush

(1) lowering push-button (2) rising push-button  
(3) limiter

## 4.9 OPEN THE GUARDS

### 4.9.1. ENGINE COMPARTMENT GUARDS

#### PROCEDURE

- Open the upper lock and lower lock (3) of the guard - figure (4.38).
- Tilt the guard.
- Protect the guard against closing by placing lock (1) in socket (2) – figure (4.39).

The remaining guards (the right guard of the engine compartment and the front guard) are equipped with the same opening and locking system.

Each guard has two open positions – at angle of 45° and 90°. Opening angle depends on location of lock (1) in lock socket (2).

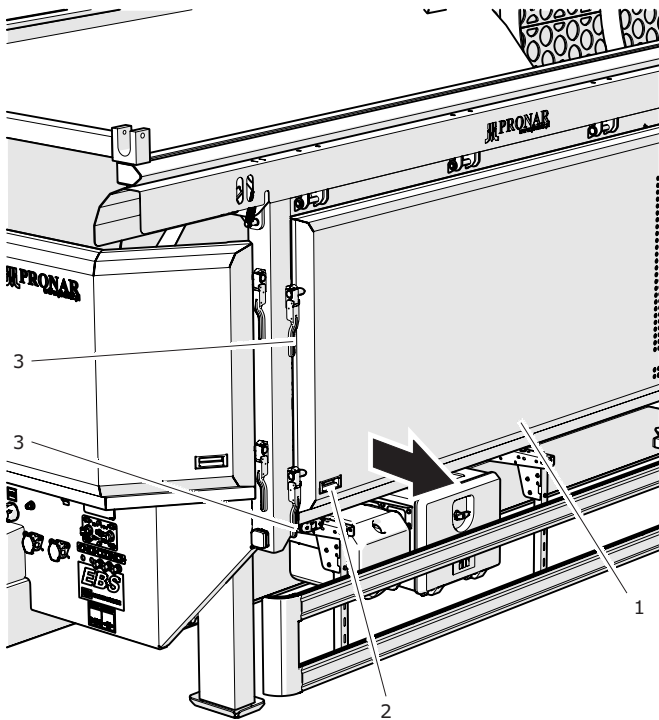


Figure 4.38 Left guard

- (1) guard  
(2) handle  
(3) lock

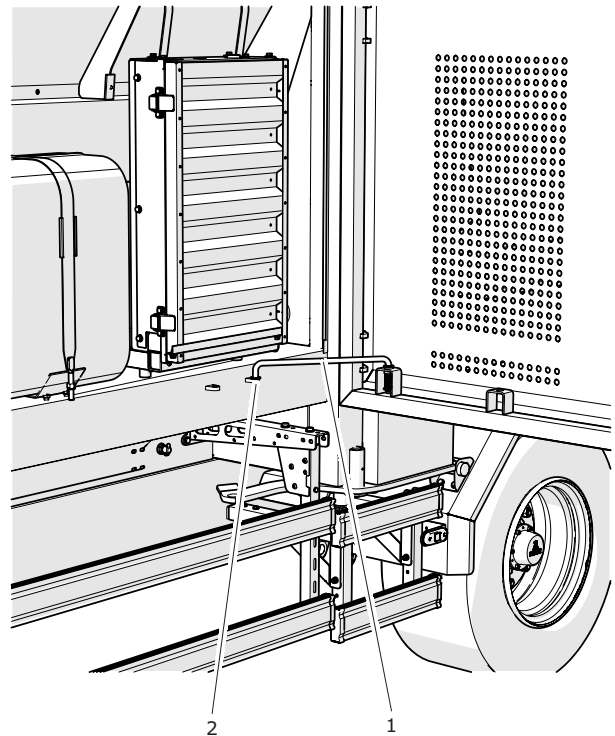


Figure 4.39 Guard lock  
(1) interlock (2) socket



#### **DANGER**

Do NOT open the guards in strong gusty winds conditions.

Do NOT open the guards during machine operation!

#### 4.9.2. RIGHT GUARD OF SCREENING DRUM


Right guard of screening drum can be unfolded only when the side conveyor is lowered.

- Open the guard lock (2), figure (4.40), on the left side and the right side.
- Raise the cover while holding the guard handle (3).

*Interlock (4), figure (4.40), will drop automatically and protect the guard against falling.*

- Move the interlock handle (4) in the direction indicated by the arrow (see figure) and select the correct guard position.
- Release interlock handle.
- Make sure that the pin is completely in the interlock hole.

If the machine is equipped with lateral protection, opening guarding is possible only when lock is released. The machine is then emergency stopped as if emergency stop is used. You can open the lock using the triangular key.

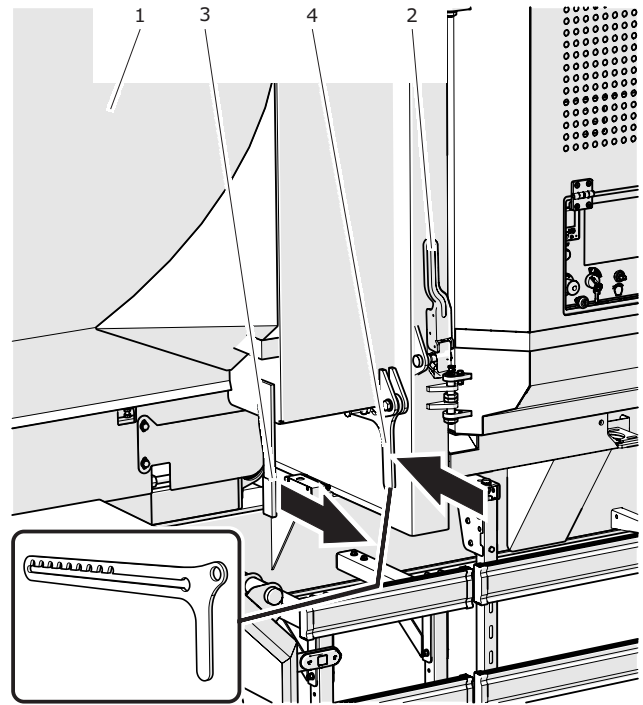

**Figure 4.40** Right guard of screening drum, lock

(1) right guard of screening drum      (2) lock  
(3) handle      (4) interlock





#### **DANGER**

Do NOT open the guards in strong gusty winds conditions.

Do NOT open the guards during machine operation!

## 4.9.3. LEFT GUARD OF SCREENING DRUM

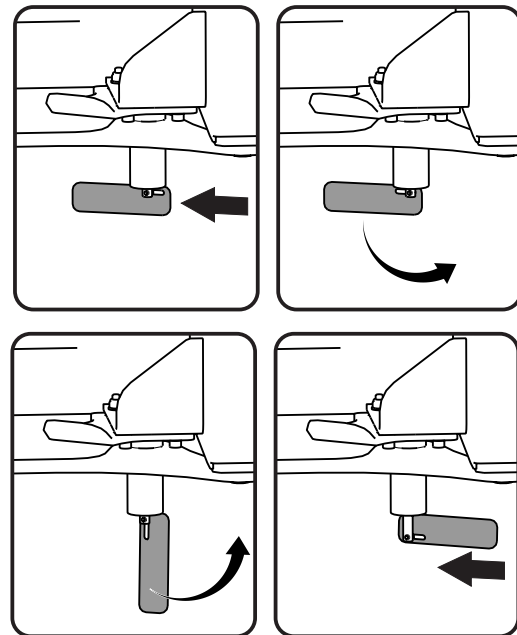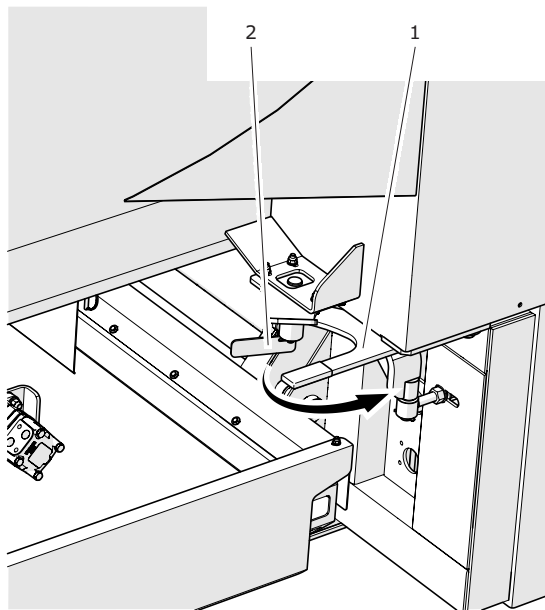


**Figure 4.41** Left guard of screening drum, lock  
(1) lever (2) pin protection

- Unlock the pin.

*Individual stages of unlocking the pin are shown in figure (4.41).*

- Open the left guard of the screening drum while pulling the lever.
- Keep opening the guard until the guard interlock (2) is snapped in the frame socket, see figure (4.42).
- Before closing the guard (1), release lock (2) using the pawl lever.
- When you close the guard, set the protection plate (2) to the position shown in the top left diagram – figure (4.41).

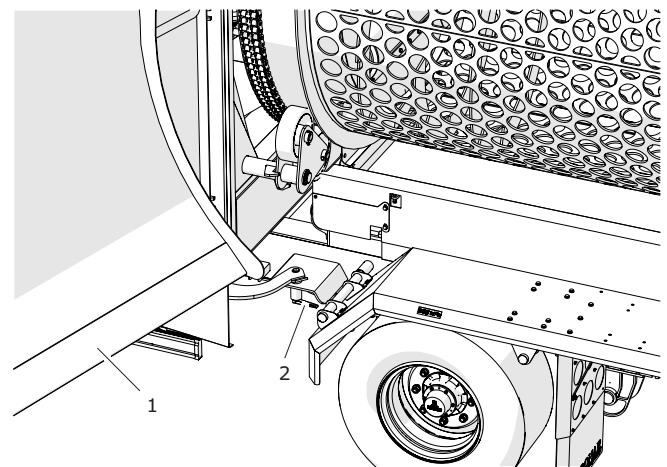

**Figure 4.42** Left guard of screening drum, interlock  
(1) screening drum guard (2) interlock

**DANGER**

Do NOT open the guards in strong gusty winds conditions.

Do NOT open the guards during machine operation!


## 4.10 ENGINE FRAME

### SLIDE THE ENGINE FRAME OUT

- Stop the trommel screen operation. Turn off the engine.
- Open the right guard of the engine compartment and lock it in the maximum opening position (90 degree).
- Remove the R-clip (4) from engine frame pin – figure (4.43).
- Pull the lock (2) and remove the pin (3).
- Pull out the engine frame (1).

### FOLD THE ENGINE FRAME

- Fold the engine frame.
- Install pin (2). Make sure that the pin lock rests in the pin recess.
- Insert securing cotter pin.
- Unlock the interlock of the right guard of the engine compartment and close the guard.

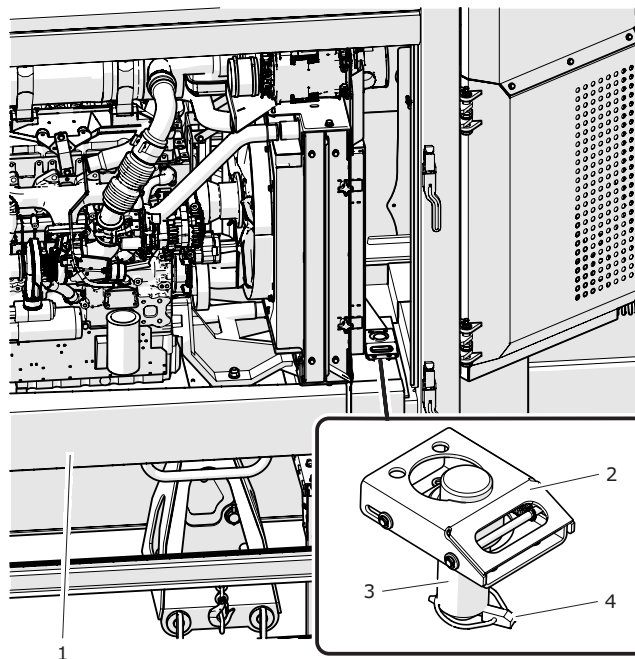

**Figure 4.43** Sliding the engine frame out

(1) engine frame

(2) pin lock

(3) pin

(4) cotter pin



### DANGER

Exercise particular caution due to danger of crushing or cutting of limbs.

## 4.11 TOO MUCH CHARGE MATERIAL

Excessive amount of charge material or excessive material feeding speed may cause overload of the screening drum drive system. In such a situation, the trommel screen's controller will automatically reduce the rotational speed of the charging hopper conveyor's engine or will stop the engine completely until the screening drum is emptied.



### ATTENTION

Do NOT use the reverse run of the screening drum in order to remove clogging of charge material.

### PROCEDURE

- Stop loading the material to the charging hopper.
- Wait until the drum is emptied by itself (the charging hopper conveyor will be restarted when the load of the screening drum drive system is reduced).
- Reduce the charging hopper conveyor speed.
- Check cleanliness of the screening drum perforations.
- If necessary, lower the brush in order to clean the screen perforations.
- If the drive system is still overloaded, stop the trommel screen, switch off the engine and remove key from ignition.
- Open side guards of the trommel screen; check the drum and drum drive.
- Empty manually the drum and possibly the charging hopper. If necessary, clean the screening drum perforations and belt conveyors.
- Close the guards and start the trommel

screen.

- Do not charge the material; check correctness of the trommel screen operation without load.
- If the problem still exists and its cause can not be defined, ask the authorised technical service for assistance. Do not use the trommel screen until the malfunction is corrected.
- If charge material is accumulated in front of the drum at the end of the charging hopper conveyor, stop the conveyor and switch on the reverse drive. Collected material should be evenly distributed on the conveyor belt. Start the conveyor in normal working direction.




### DANGER

Before entering the trommel screen or opening the guards, stop the machine drive, turn off the engine and remove key from ignition.



## 4.12 LATERAL UNDER-RUN PROTECTION DEVICE

Two foldable lateral under-run protection devices (1) are installed in the front part of the chassis frame, in front of the suspension system. The complete protection device is bolted to the barrier handle bracket that is welded to the lower frame. The design of the side under-run protection devices enables their locking in the transport position and in the raised position.

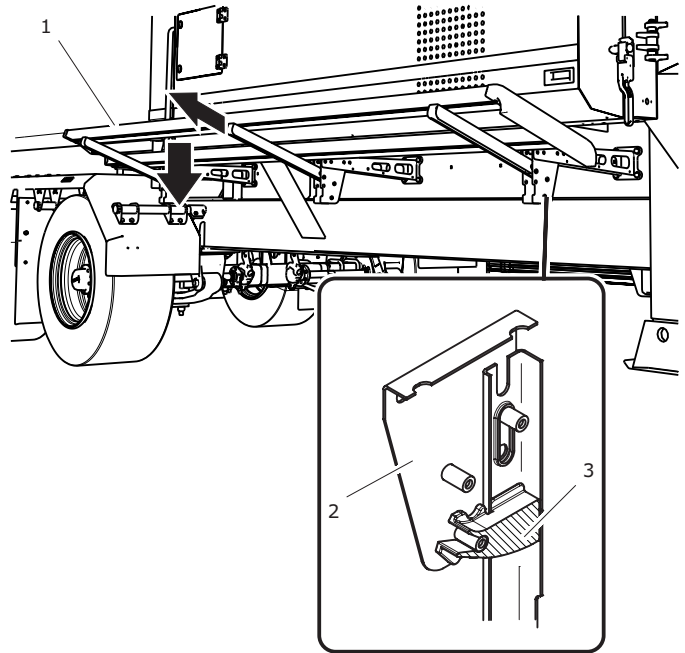

**Figure 4.44** Rear under run protection device

### RISE THE SIDE UNDER-RUN PROTECTION DEVICES

- Pull the under-run protection device by holding its lower bar.
- Raise the under-run protection device to the height shown in figure (4.44).
- Move the under-run protection device away. Appropriate recess and slotted holes in the clamping ring allow the locking of under-run protection device in the raised position.

(1) left protection device (2) clamping ring  
(3) pawl

### LOWER THE SIDE UNDER-RUN PROTECTION DEVICES

- Pull the under-run protection device.
- Lower the under-run protection device and press until the bracket locks into the pawl.




#### **DANGER**

Do NOT move off or drive when under-run protection device is raised. Before driving, make sure that under-run protection devices are lowered and locked in the lower position.

Unless necessary, do not leave the under-run protection device in the raised position.

## 4.13 TOW THE TROMMEL SCREEN ATTACHED TO AN AGRICULTURAL TRACTOR

The trommel screen must be often towed within a working yard. In such a case, it is not necessary to hitch the machine to the truck tractor. Agricultural tractor can be used for this purpose.



**ATTENTION**  
The trommel screen must not be hitched to agricultural tractor when driving on public roads. The trommel screen may be transported on public roads only using a truck tractor.

### HITCH TROMMEL SCREEN TO AGRICULTURAL TRACTOR



- Position agricultural tractor directly in front of the trommel screen drawbar eye.
- Reverse the agricultural tractor near the trommel screen drawbar eye. If necessary, adjust the height of the drawbar eye by means of the parking stand according to location of tractor hitch.
- Hitch the trommel screen to the tractor's hitch, check the hitch lock protecting the machine against accidental unhitching.
- If the agricultural tractor is equipped with an automatic coupler, ensure that the hitching operation is completed and that drawbar eye is secured.
- Raise parking stand to the upper extreme position. Raise the rear supports and secure the pins.
- Turn off tractor engine.
- Connect pneumatic conduit marked yellow.

- Connect pneumatic conduit marked red.
- Check and, if necessary, protect conduits against rubbing or other mechanical damage. When turning, connecting conduits must hang loosely and not become tangled with moving elements of the machine and tractor.
- Just before driving off, remove chocks from under the trommel screen's wheels and release parking brake (press the red push-button of the loosening-parking valve).

### UNHITCH TROMMEL SCREEN FROM AGRICULTURAL TRACTOR

- Disconnect pneumatic conduit marked red.
- Disconnect pneumatic conduit marked yellow.
- Place pneumatic conduits in the specifically prepared holding sockets, located on the front beam of the trommel screen's frame.
- Lower the parking stand.
- Release the red push-button of the loosening-parking valve.
- Place chocks under the trommel screen wheels.
- Unlock the truck tractor hitch, drive tractor away from the trommel screen.

## 4.14 TOW THE TROMMEL SCREEN USING A LOADER

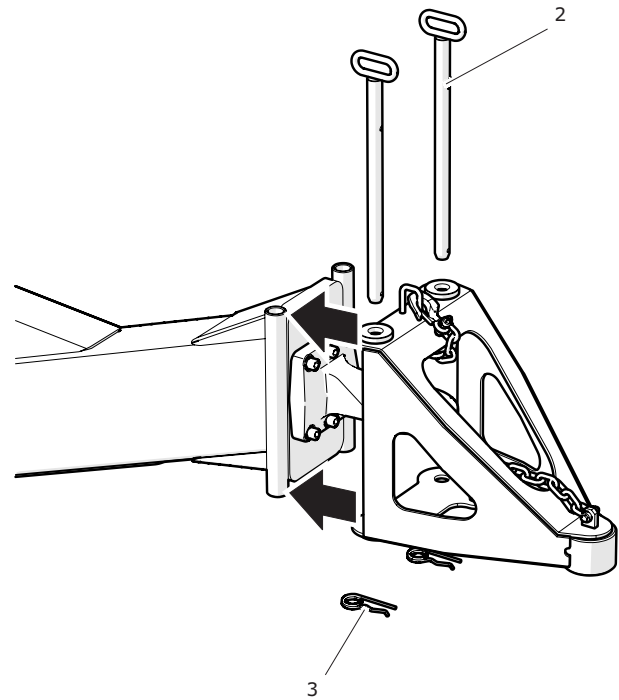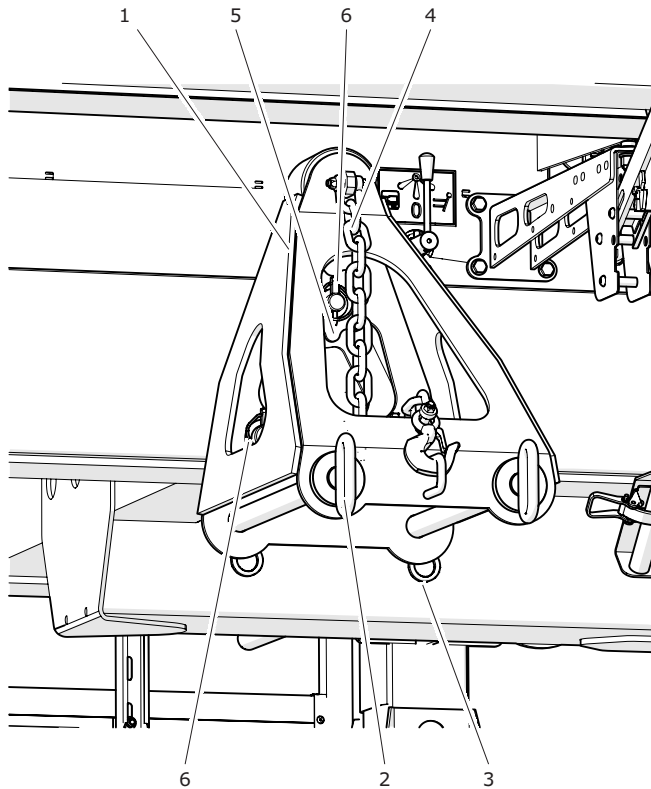

**Figure 4.45** Prepare ball hitch attachment

- |                       |         |                     |
|-----------------------|---------|---------------------|
| (1) ball attachment   | (2) pin | (3) bolt cotter pin |
| (4) chain with a hook | (5) nut | (6) cotter pin      |

Trommel screen can be equipped with additional ball hitch attachment. It is designed to allow the machine to be towed using a loader. You can tow the trommel screen only within the landfill area on a flat and level surface.

### PREPARE THE ATTACHMENT

- Lift the right under-run protection device and lock it in the upper position.
- Remove the two bottom cotter pins (6) together with washers.
- Remove the upper cotter pin (6) and unscrew the nut (5).

- Remove the attachment from holders and move it near the drawbar.

*After removing the attachment, it is recommended that you replace the cotter pins (6) with washers and nut (5) in the same place on the frame.*

- Remove the two cotter pins (3) and remove the two bolts (2).
- Install the attachment on drawbar plate, adjusting the hole to sockets.
- Insert pins and secure them with cotter pins.
- Install the right under-run protection device.

## TRANSPORT THE TROMMEL SCREEN

- Drive loader or other machine to the ball hitch attachment. Hitch the trommel screen and secure using the chain from being accidentally unhitched.
- Install lateral and rear conveyor.
- Remove the chocks from the wheels and place them pockets on the fenders.
- Release parking brake.
- Raise the two front and rear legs.
- Pull the trommel screen to a desired position.
- After this operation prepare the trommel screen for normal operation.

## 4.15 OPERATE THE RADIATOR CLEANING SYSTEM


Automatic radiator cleaning system consists of a fan with adjustable blades and electrically driven air compressor. Depending on the time setting, the cleaning system periodically adjusts the fan blades of the engine radiator, causing backflow of air and as a result, cleaning of the radiator and air intake of pollutants. Depending on the operating conditions, you must choose the time setting, adjusting the timer switches. Table (4.1) shows the available settings combinations.

**Tabela 4.1.** The switch settings


INTERVAL (min)	SWITCH NUMBER		
	1	2	3
5	1	0	0
10	0	1	0
15	1	1	0
30	0	0	1
45	1	0	1
60	0	1	1
90	1	1	1

Switch panel is available after removing the cover of the electric compressor. If you set all four switches in the OFF position, the compressor controller will initiate a test run. In this case, the valve and the compressor will run for 1 second and then will be off for 1 second. The cycle will continue until the power supply is cut off or control panel buttons setting is changed.

The engine cooler cleaning mode can be initiated at any time by pressing the button (1) – figure (4.47), which is located below the main control panel.

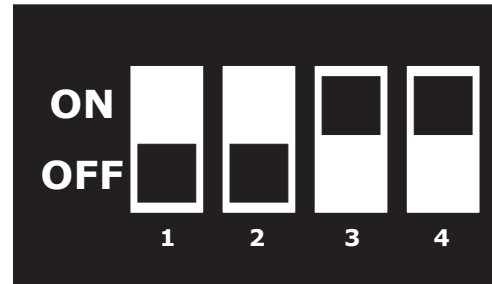

**Figure 4.46** Timer switches panel

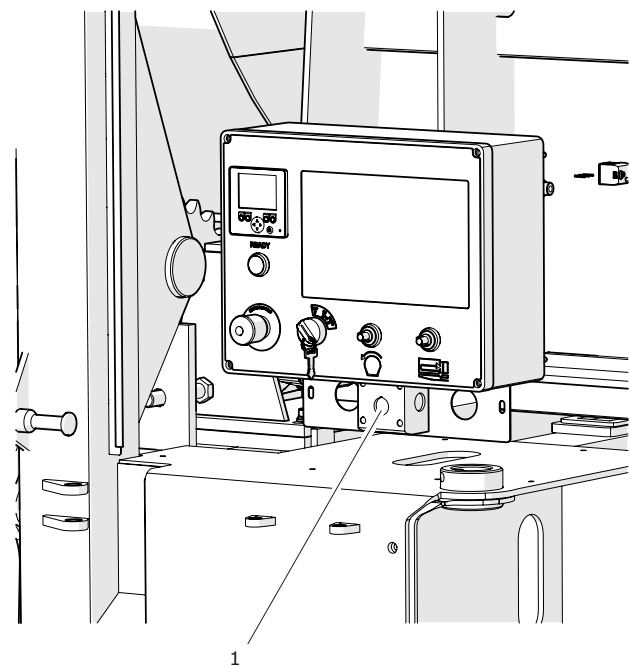

**Figure 4.47** Button to manually start the radiator cleaning

## 4.16 PREPARE THE TROMMEL SCREEN FOR PUBLIC ROAD TRANSPORT

- Clean the trommel screen before driving on the public roads.
- Fold the rear and lateral conveyor. If the machine IS equipped with magnetic rollers, you must first fold the chutes.
- Hitch the trommel screen to truck tractor.
- Release the trommel screen's parking brake and make sure that chocks are located in holders.
- Make sure that parking stand is maximally raised. Raise rear support (optional equipment).
- Check if drawbar eye is correctly attached and pneumatic leads and electric leads are properly connected.
- Check correctness of electrical system operation.
- When moving off check if the brakes operate correctly.
- When driving on public roads, respect the road traffic regulations, exercise caution and prudence.
- Before moving off, make sure that there are no bystanders, especially children, near the trommel screen and truck tractor. Take care that the driver has sufficient visibility.
- Vertical load borne by the trommel screen drawbar eye affects the steering of the tractor.
- When driving on public roads, do NOT carry any load in the trommel screen.
- Before driving on public roads, the trommel screen must be cleaned of dirt accumulated during the machine operation, which may cause fouling of roads.
- Permissible design speed and maximum speed allowed by road traffic law must not be exceeded. Speed of travel should be adjusted to prevailing road conditions and other conditions.
- In the event of machine or truck tractor malfunction, pull over on the hard shoulder avoiding any risk to other road users and position a reflective warning triangle according to traffic regulations.
- The tractor driver shall be equipped with a certified or approved reflective warning triangle.
- When driving, comply with all road traffic regulations, indicate an intention to turn using indicator lamps, keep all road lights and indicator lights clean at all times and ensure they are in good condition. Any damaged or lost lamps or indicator lights must be immediately repaired or replaced.
- Avoid ruts, depressions, ditches or driving on roadside slopes. Driving across such obstacles could cause the trommel screen or the tractor to suddenly tilt. Driving near ditches or canals is dangerous as there is a risk of the wheels sliding down the slope or the slope collapsing.
- Speed must be sufficiently reduced before making a turn or driving on an uneven road or a slope.
- When driving, avoid sharp turns especially

on slopes.

- Please note that the braking distance of the tractor and trommel screen combination is substantially increased at higher speeds.
- Monitor the trommel screen's behaviour when travelling on an uneven terrain and adjust driving speed to road and terrain conditions.
- If necessary, put additional weights on the truck tractor to achieve greater stability of the truck tractor-machine unit.


## 4.17 PROPER USE AND MAINTENANCE OF TYRES

- When working with tyres, the machine should be secured against rolling by placing chocks under the wheels. Wheels can be taken off the machine axle only when the machine is not loaded.
- Repair work on the wheels or tyres should be carried out by persons trained and entitled to do so. This work should be carried out using appropriate tools.
- Tightness of wheel nuts and air pressure in tyres should be regularly checked.
- Do not release air from warm tyres to adjust the pressure or the tyres will be underinflated when temperatures return to normal.
- Tyre valves should be protected with the appropriate caps to avoid soiling.
- Do not exceed the maximum design speed of the trommel screen.
- When sweeper is operated all day, stop working for a minimum of one hour in the afternoon.
- Take breaks during driving in order to cool down tyres.
- Avoid potholes, sudden manoeuvres or high speeds when turning.



## 4.18 WATER TANK (OPTION)

Water tank (1) is mounted in the front of the chassis, to the left of the trommel screen. The tank is not designed to carry drinking water and is intended solely for the sanitary purposes. There is a dispenser (2) with liquid soap container in the upper part of the tank. During winter it is recommended that the tank is not used, because the freezing water can cause damage to the tank, the soap dispenser or water valve (3).

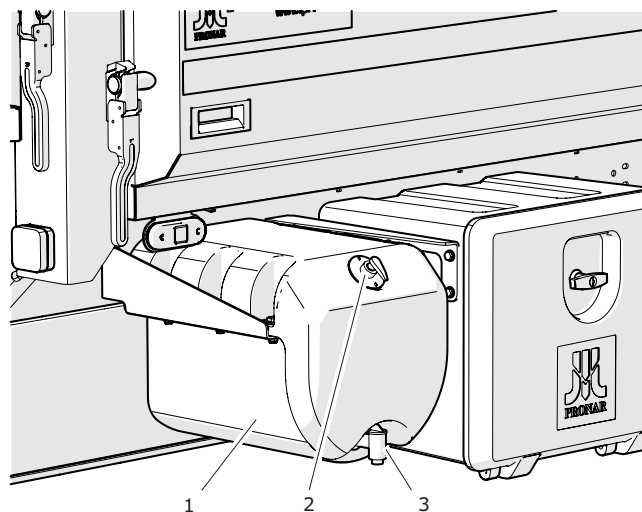

**Figure 4.48** Sanitary water tank  
 (1) tank  
 (2) soap dispenser  
 (3) water valve

### DANGER


The tank is designed for storage of water for sanitary purposes. Consuming this water can damage your health.

Never fill fuel tank with oil or chemicals.

Rinse the tanks and replace the water frequently to prevent the growth of bacteria.



## 4.19 FOLD AND UNFOLD CONVEYOR CHUTES

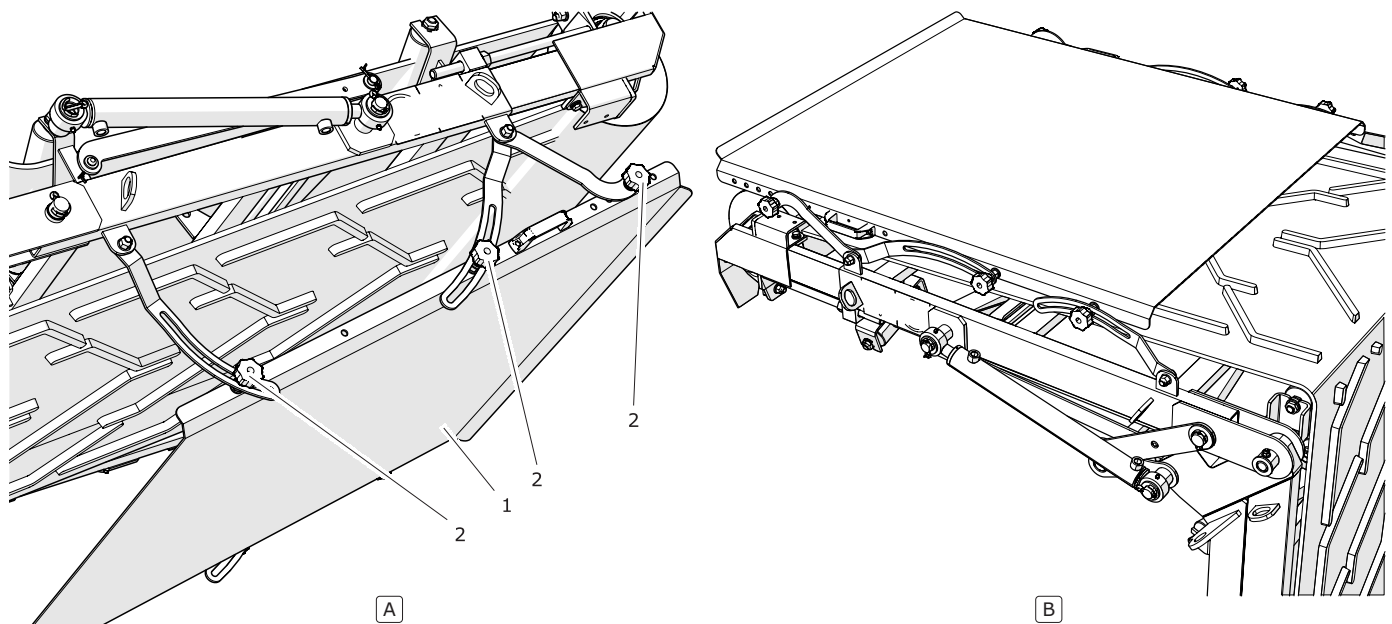

**Figure 4.49** Lateral conveyor chute

(1) chute

(2) knob

(A) working setting

(B) transport setting

Lateral and rear conveyors chutes are the components of the magnetic rollers. Be sure to fold the conveyors to transport position.


### LATERAL CONVEYOR CHUTE

- Loosen the 6 knobs (2).
- Fold the chute sheet as close to the conveyor belt as possible.
- Tighten knobs (2).
- When unfolding, proceed in reverse order. When chute is unfolded, adjust the chute sheet matching the settings to the separated material.

### REAR CONVEYOR CHUTE

- Loosen the 6 knobs (2).
- Remove tie rod (3) from knob bolt.
- Turn the chute on the other side of the around the bracket

- Place chute on 4 knob bolts (2) in the slots (5).
- Tighten knobs (2).
- Fold the conveyor.
- When unfolding, proceed in reverse order. When chute is unfolded, adjust the chute sheet matching the settings to the separated material.

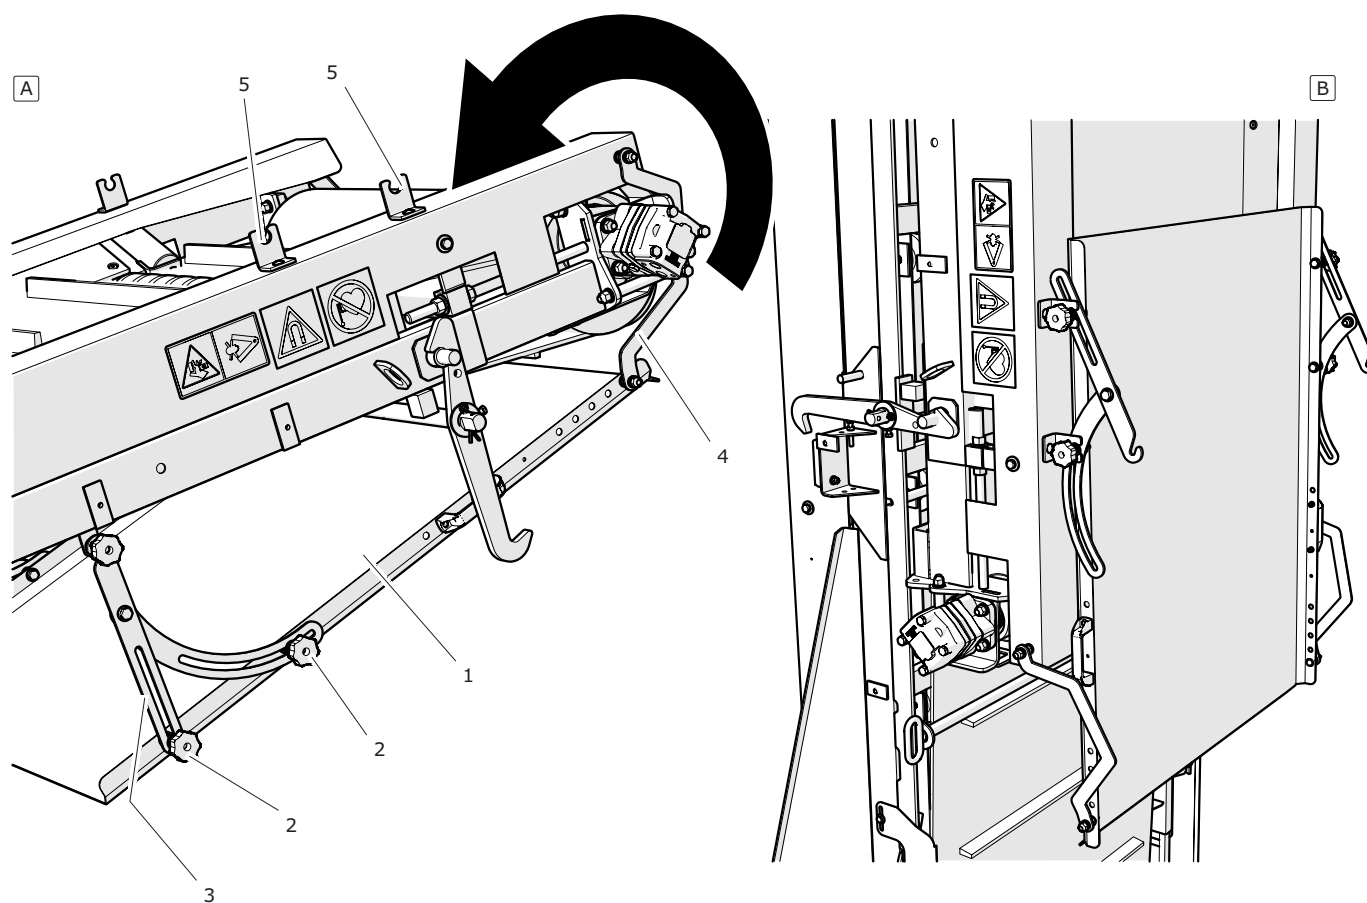

**Figure 4.50** Rear conveyor chute

(1) chute

(2) knob

(3) drawbar hitching hook

(4) support

(5) handle

(A) working setting

(B) transport setting



SECTION

**5**

---

**MAINTENANCE**

## 5.1 PRELIMINARY INFORMATION

When using the trommel screen, regular inspections of its technical condition and the performance of maintenance procedures are essential, which keep the machine in good technical condition. In connection with this the user of the trommel screen is obliged to perform all the maintenance and adjustment procedures defined by the Manufacturer.

Repairs during the warranty period may only be performed by authorised service points.

Detailed procedures and extent of activities which

the user may perform by himself are described in this section. In the event of unauthorised repairs, changes to factory settings and other actions, which are not regarded as possible for the trommel screen operator to perform, the user shall invalidate the warranty. The inspections specified in columns (A), (B) and (J) in table (5.1) must be conducted by the trommel screen operator. The remaining inspections are conducted by the Authorized Service Station.

## 5.2 TECHNICAL INSPECTION

Table 5.1. Maintenance schedule

REQUIRED SERVICING	SERVICE INTERVAL (TABLE 5.2)											
	A	B	C	D	E	F	G	H	I	J		
Check level of engine lubricating oil	•											4.3.3
Check fuel level	•											4.3.2
Check engine coolant level	•											4.3.6
Drain water from fuel tank		•										5.2.1
Replace and clean air filter			•	•							•	5.2.2
Oil change			•	•								5.2.3
Replace oil filter			•	•								5.2.4
Tighten bolts and nuts				•		•						5.9

REQUIRED SERVICING	SERVICE INTERVAL (TABLE 5.2)											
	A	B	C	D	E	F	G	H	I	J		
Cleaning and inspection of the radiator				•								5.2.5
Adjustment and inspection of the belt and tensioner			•	•								5.2.6
Lubrication				•								5.2.35
Replace fuel pre-filter				•	•							5.2.7
Replace the fine fuel filter.				•								5.2.8
Bleeding the fuel system					•						•	5.2.9
Draining water from fuel filter											•	5.2.10
Checking valve clearance					•							-
Inspecting the starter and the alternator			•			•					•	5.2.11
Cleaning the fuel tank (or once a year)					•							-
Inspecting the glow plugs					•							-
Cleaning the injection sprayers							•					-
Inspecting and cleaning the injectors								•				-
Coolant change										•		-
Inspect the battery											•	5.2.12
Adjust guidance and tension of conveyor belts	•		•	•							•	5.2.13
Clean and adjust scrapers	•			•							•	5.2.14
Inspecting and cleaning the belt conveyor rollers	•										•	5.2.20

REQUIRED SERVICING	SERVICE INTERVAL (TABLE 5.2)											
	A	B	C	D	E	F	G	H	I	J		
Inspecting and cleaning the brush	•			•							•	5.2.15
Adjust brush position				•							•	5.2.16
Inspecting and cleaning the supporting rollers	•		•	•							•	5.2.17
Inspecting the rear guide roller and the front guide roller	•		•	•							•	5.2.18
Inspect and adjust the screening drum drive wheel	•		•	•							•	5.2.19
Cleaning and lubricating the screening drum drive chain				•							•	5.2.35
Check hydraulic system tightness	•			•							•	5.2.21
Replacement of hydraulic conduits (every 4 years)												5.2.22
Hydraulic oil change							•					5.2.23
Hydraulic oil level check	•										•	4.3.1
Replace hydraulic oil filters			•									5.2.24
Clean and inspect the hydraulic oil cooler		•									•	5.2.25
Checking air tightness of pneumatic system			•	•							•	5.2.26
Cleaning the air filters, inspecting the connections		•									•	5.2.27
Draining water from air tank, cleaning the valve		•									•	5.2.28
Checking slackness of wheel axle bearings			•			•					•	5.2.29
Adjustment of slackness of wheel axle bearings											•	5.2.30
Inspecting tightness of nuts, mounting and dismounting wheel			•	•		•					•	5.2.31




REQUIRED SERVICING	SERVICE INTERVAL (TABLE 5.2)											
	A	B	C	D	E	F	G	H	I	J		
Checking air pressure in tyres, inspection of wheels	•			•							•	5.2.32.
Checking thickness of brake shoe linings				•							•	5.2.33
Cleaning the trommel screen											•	5.2.34
Checking grease level in the pump	•											4.3.5
Lubrication – according to a separate schedule												5.2.35
Checking oil level and changing oil in the gear			•		•							5.2.36

**Table 5.2.** Maintenance frequency

A	Daily maintenance	Inspection conducted daily before the first start or every 10 hours of continuous operation.
B	Every 50 working hours	Periodic inspection conducted every 50 working hours of the engine
C	After the first 50 working hours	One-time inspection conducted after 50 working hours of a new engine / machine or after 50 working hours following the repair of the trommel screen engine
D	Every 250 working hours	Periodic inspection conducted every 250 working hours
E	Every 500 working hours	Periodic inspection conducted every 500 working hours of the engine
F	Every 1000 working hours	Periodic inspection conducted every 1000 working hours
G	Every 1500 working hours	Periodic inspection conducted every 1500 working hours of the engine
H	Every 3000 working hours	Periodic inspection conducted every 3000 working hours
I	Every 2 years	Periodic inspection conducted every 2 working years of the engine
J	If needed	If inspections are required

## 5.2.1. DRAIN WATER FROM FUEL TANK

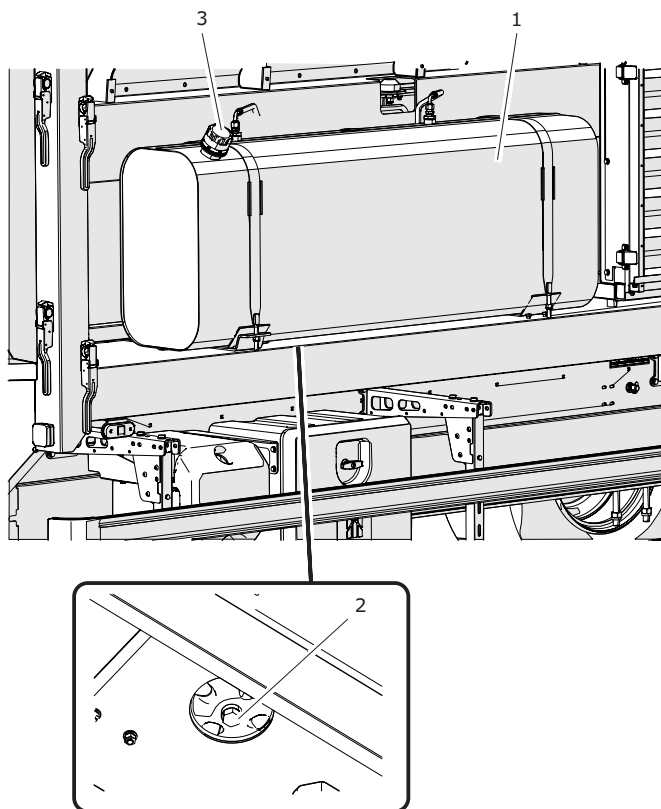

**Figure 5.1** Fuel tank  
 (1) tank (2) drain plug  
 (3) filler plug

Contaminated fuel may cause damage to or malfunction of the fuel system and the engine. Fuel tank should be periodically cleaned by draining 1 - 2 litres of fuel.

- Place a container with capacity of at least 2 litres under the fuel drain plug (2).
- Unscrew the fuel drain plug and drain at least 1 litre of fuel.
- Tighten the fuel drain plug (2).
- If fuel is still contaminated, drain another litre of fuel.

**DANGER**

Do NOT approach the tank with an open flame.

Wipe away spilt fuel until dry because it may cause fire.

5.2.2. REPLACE AND CLEAN THE AIR FILTER

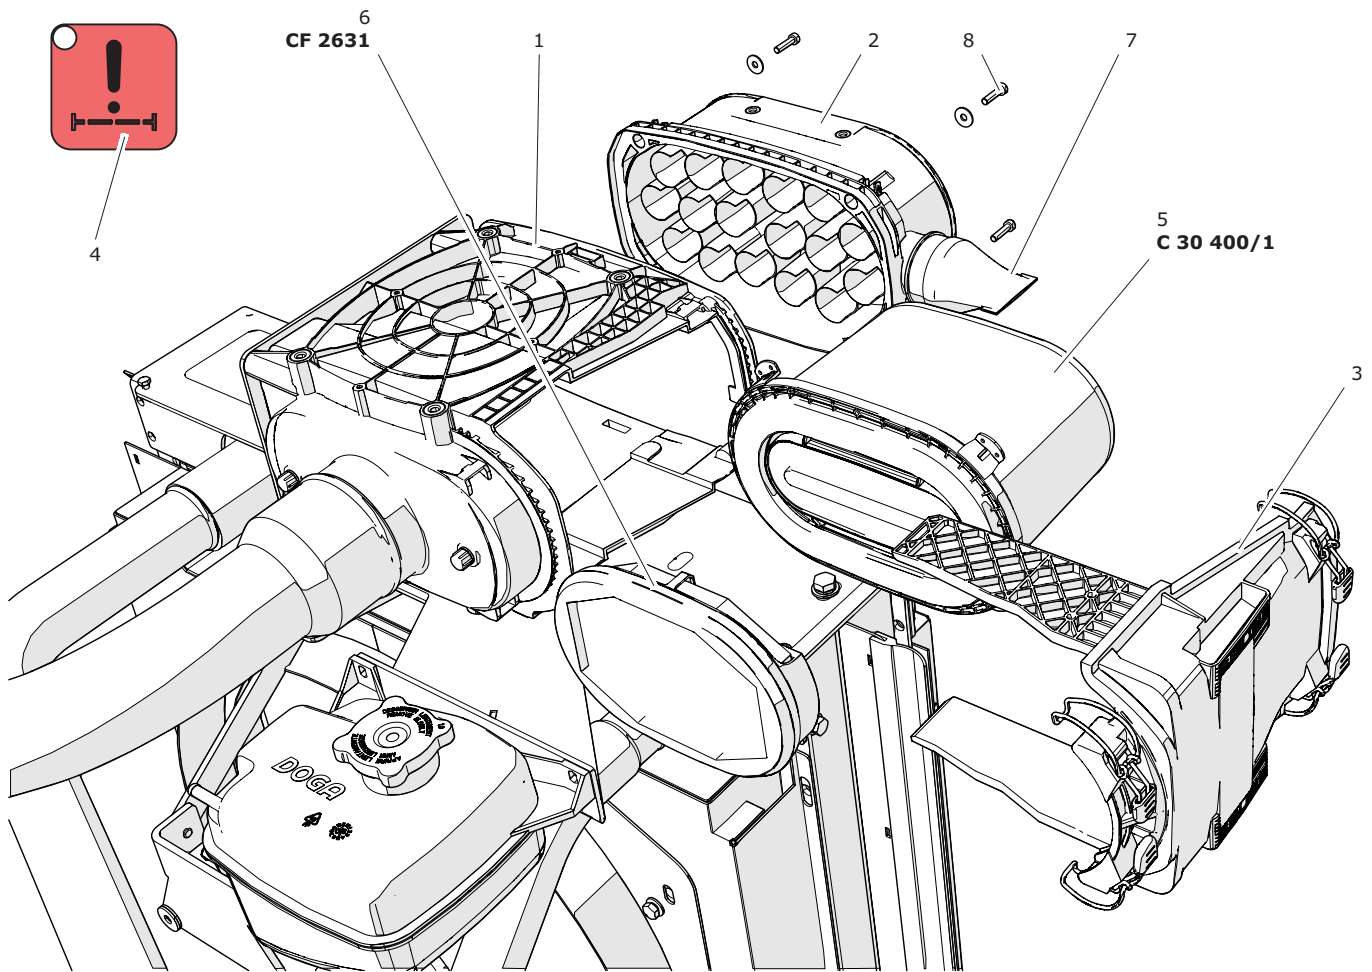


Figure 5.2 Air filter

- |                           |                    |                      |
|---------------------------|--------------------|----------------------|
| (1) filter body           | (2) pre-filter     | (3) cover            |
| (4) alarm indicator light | (5) primary filter | (6) secondary filter |
| (7) valve                 | (8) screw joint    |                      |

Alarm signalled by indicator light (4) may be generated if there is water in fuel (fuel filter) or if air filter is maximally contaminated. If there is no doubt as to the cleanliness of fuel, replace the primary filter element (5).

- Open the right shield of the engine and secure it by means of an interlock.
- Remove the filter cover (3).
- Remove the primary (5) and secondary (6) filter.
- Check the degree of soiling of secondary

filter (6), blow the secondary filter with compressed air.

- The secondary filter element (6) should be replaced every third replacement of the primary filter element (5).

*Replace the secondary filter cartridge each time in the event of a failure or significant soiling, regardless of the time from the last replacement.*

- Check the filter housing and cover. Blow the filter housing and cover with compressed air

but first cover the engine manifold intake opening.

- Remove the screws (8), remove the pre-filter.
- Blow the pre-filter chamber with compressed air.
- Make sure the valve (7) is not clogged. Clean the conduit, if necessary.
- Place bolts and tighten the filter.
- Install the secondary filter (6) and the main filter (5).
- Replace the air filter cover (3).

#### **FILTER CARTRIDGE NUMBERS**

Main filter element: C 30 400/1


Secondary filter element: CF 2631




#### **TIP**

The secondary filter element should be replaced every third replacement of the main filter element or when it is excessively contaminated or damaged.

5.2.3. REPLACE OIL

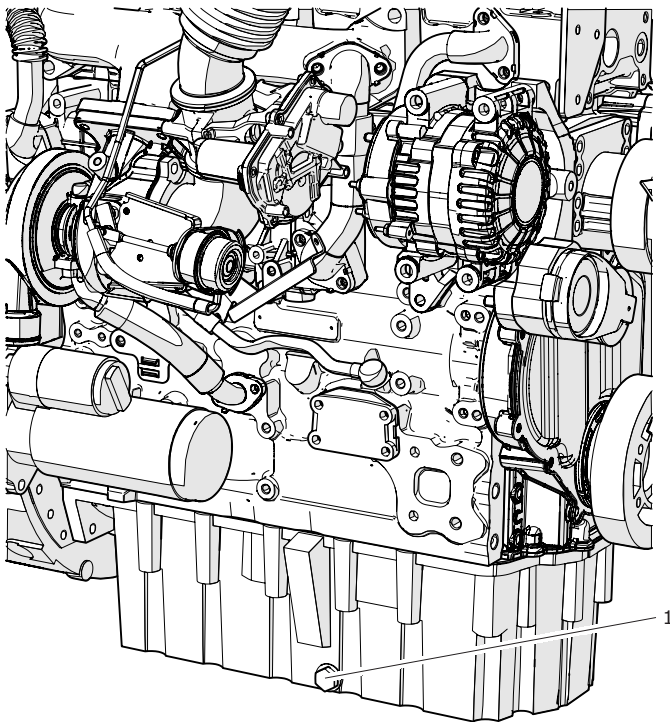

CATERPILLAR C4.4

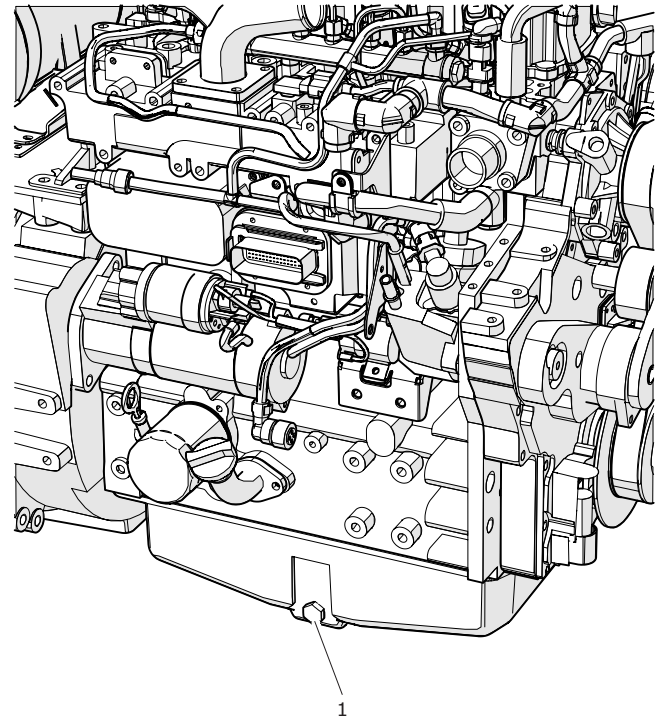


DEUTZ TCD 3.6 L4

**Figure 5.3** Oil change  
(1) oil drain plug

Oil and oil air filter must be replaced at the same time.


- Warm up the engine to nominal working temperature.
- Stop the engine, remove key from ignition.
- Place an appropriately sized container under the oil pan (drain plug).
- Unscrew oil drain plug.
- Drain oil to an appropriate receptacle. Install a new sealing ring. Tighten filler plug.
- Unscrew oil filler plug, fill the engine with new oil according to the Manufacturer's recommendations while regularly checking the oil level.
- Start the engine and warm up to the nominal operating temperature.

- Stop the engine and check the oil level after about a minute. If necessary, top up to the required amount.



**DANGER**

Exercise caution when draining. Hot engine oil may cause burns.



**ATTENTION**

Do NOT pour used oil into sewerage, water courses etc. Used oil should be disposed of according to regulations in force.

## 5.2.4. REPLACE OIL FILTER

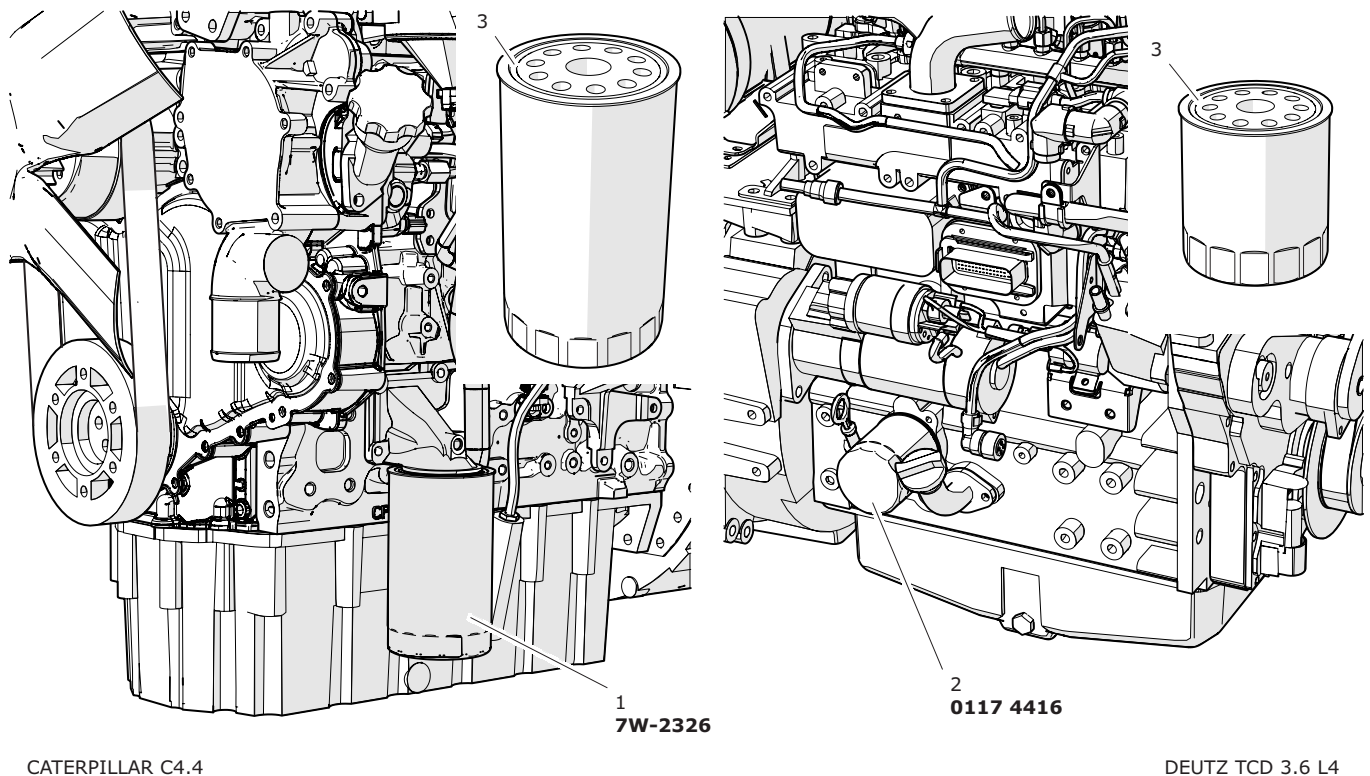


Figure 5.4 Oil filter

(1) CATERPILLAR oil filter

(2) DEUTZ oil filter

(3) seal

- Remove contamination from the filter area on the engine block.
- Drain the lubricating oil from the engine.
- Unscrew the oil filter using the wrench for filters.
- Cut oil filter, check that there is no excessive quantity of metal particles inside of the filter.
- Wipe the contact surface for the gasket on the engine block. Make sure that the old seal was completely removed.
- Confirm that the gasket is correctly placed in the filter. Apply small amount of oil to the gasket.
- Tighten the oil filter manually.
- After starting the engine, check the filter for leaks.

**FILTER CARTRIDGE NUMBERS**

CATERPILLAR: 7W-2326

DEUTZ: 0117 4416

**ATTENTION**

Before installing the filter, make sure that it is not damaged.

Do NOT tighten the oil filter using a wrench.

Before installing the filter do not immerse it in oil.

5.2.5. CLEAN AND INSPECT THE COOLER

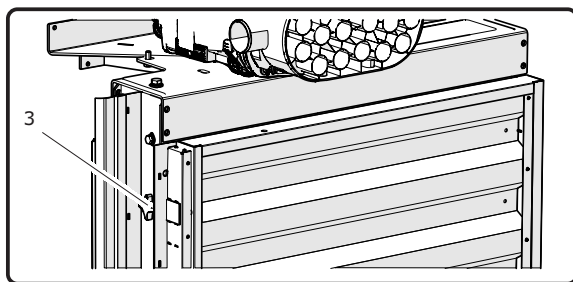
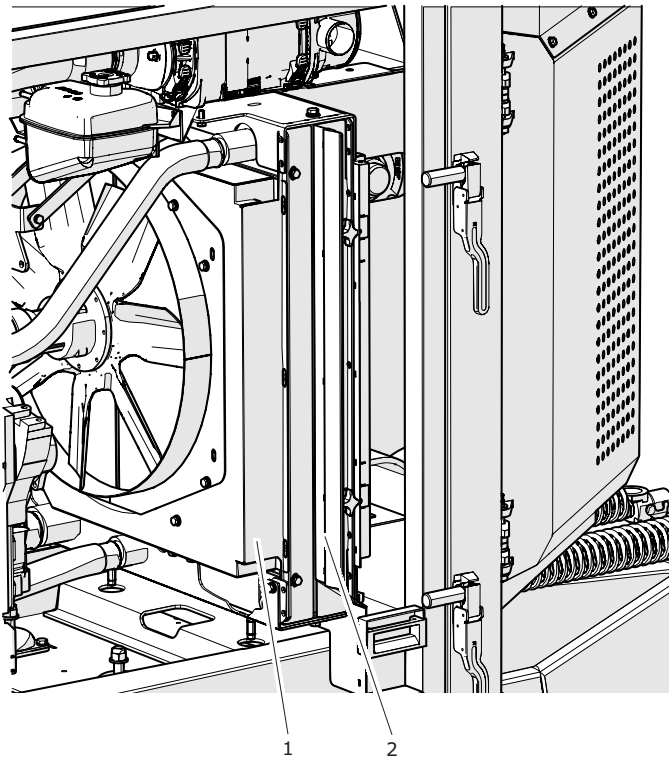


Figure 5.5 Engine radiator

- (1) radiator
- (2) guard
- (3) bolt

Due to difficult working conditions of the cooling system (possibility of quick contamination of the radiator), exchange of heat in the heat exchanger is considerably deteriorated. That is why cleanliness of radiator (1) and shield (2) should be periodically checked. If necessary, blow these two elements with compressed air.

- Open the right shield of the engine compartment and secure it by means of an

interlock.

- Open the front shield of the trommel screen and secure it by means of an interlock.
- Swing the engine frame.
- Unscrew two bolts (3) of shield (2) and open the radiator shield.
- Blow the radiator and the shield with compressed air in the direction opposite to normal air flow direction.
- Close all shields.

**ATTENTION**


The machine may be equipped with a radiator cleaning system. However, this does not relieve the operator from the periodic inspection radiator.



Before starting work, stop the engine and remove key from ignition.

Protect the shields against accidental closing using interlocks.

## 5.2.6. CHECK THE BELT TENSIONER AND REPLACE THE BELT

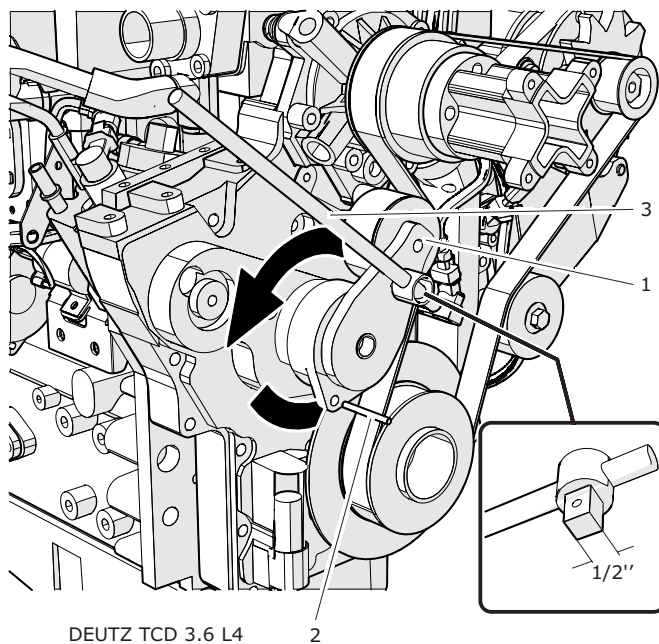


DEUTZ TCD 3.6 L4

2

Figure 5.6 Tightening the belt

(1) tensioner

(2) pin

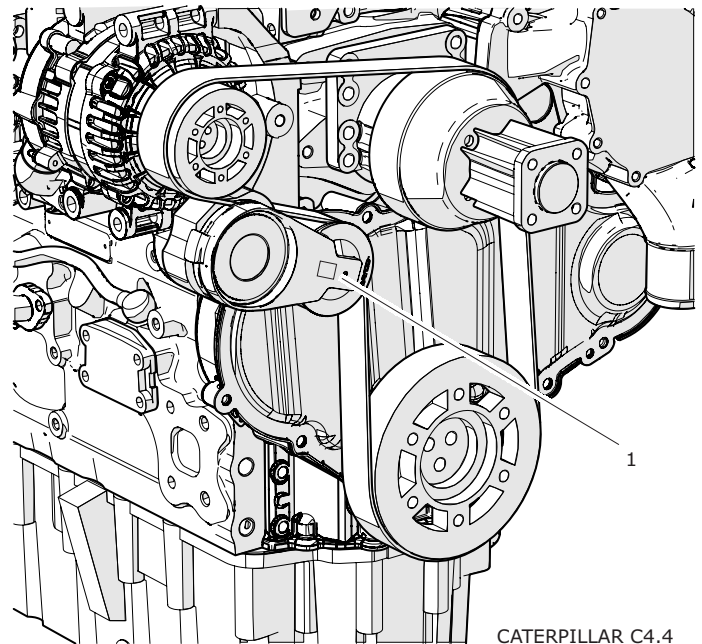

CATERPILLAR C4.4

(3) socket wrench

The engine is equipped with an automatic drive belt tensioning mechanism. Tension control involves checking the limit for belt elongation. The measure of elongation is the position of the tensioner arm (1) relative to the stops provided on the body.

## CHECKS

- Open the right shield of the engine compartment and secure it by means of an interlock.
- Visually inspect the belt for mechanical damage. Confirm that the belt is not cracked, cut or fuzzy.
- Make sure that the belt is not oily or greasy

with lubricant.

- Check the position of the tensioner (marker) relative to the stops on the body.

Belt that is mechanically damaged or elongated must be replaced.

## REPLACE

- Insert the square end of the socket wrench into tensioner socket.
- Pull the tensioner, insert the locking pin (2).
- Remove the belt and install a new one.
- Remove the pin and release the tensioner.
- Check the position of the belt.



5.2.7. REPLACE FUEL PRE-FILTER AND WATER SEPARATOR

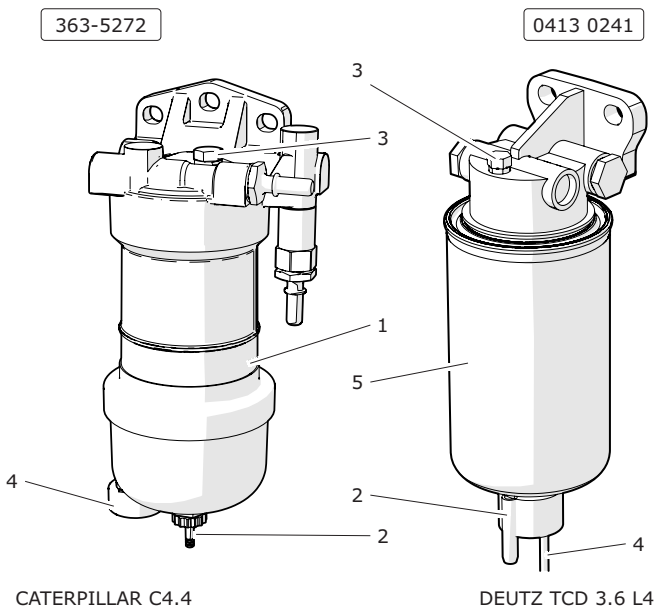


Figure 5.7 Fuel filter with water separator

- (1) casing with separator
- (2) drain valve
- (3) air vent plug
- (4) sensor wires
- (5) filter cartridge

- Close the fuel valve upstream of the filter (if machine is equipped with one).
- Clean the filter body.
- Prepare the appropriate size canister to drain the fuel and put it under the fuel filter.
- Disconnect sensor lead (4).
- Undo the fuel drain valve (2) and drain the fuel into the canister.
- Loosen the vent plug (3).
- After draining the fuel tighten the vent plug (3) and valve (2).
- Undo the upper part of the filter body (1) including the settler (C).
- unscrew the filter cartridge from casing (1) (C)
- Unscrew filter cartridge (5) (D).



**DANGER**

Before starting work, stop the engine and remove key from ignition of the trommel screen's control panel.

While working, do not approach the machine with an open flame.

- Clean the inside of the casing (1) (C).
- Install the new filter cartridge in the casing (C).
- Lubricate the filter cartridge seal with a little oil.
- Tighten the filter cartridge (D).
- Tighten the filter casing with a separator (C).
- Connect the sensor wires.
- Wipe spilled fuel with a cloth or dry with compressed air.
- Replace the fine fuel filter.

**FILTER CARTRIDGE NUMBERS**

CATERPILLAR: 363-5272

DEUTZ: 0413 0241



**ATTENTION**

Before installing the filter, make sure that it is not damaged.

Replace fuel pre-filter together with primary fuel filter.




**TIP**

(C) - applies to CATERPILLAR engine

(D) - applies to DEUTZ engine

## 5.2.8. REPLACE FINE FUEL FILTER

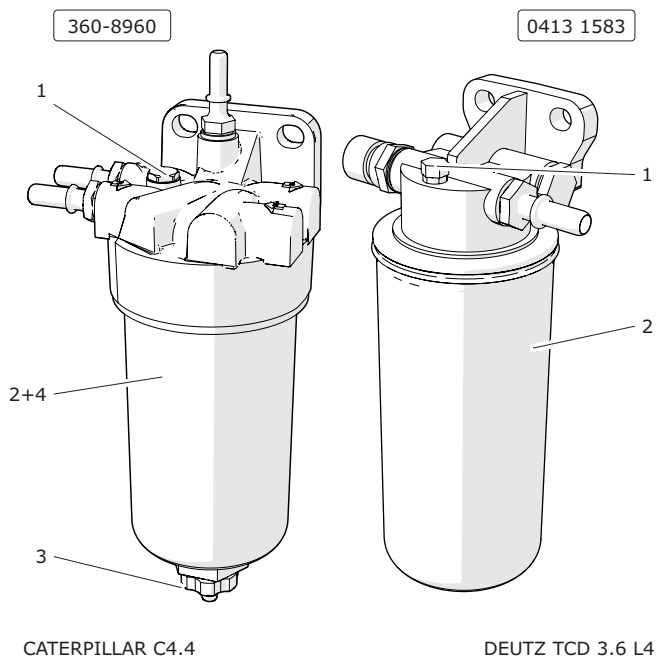

**Figure 5.8** Fine fuel filter

- (1) air vent plug      (2) filter cartridge  
 (3) drain valve      (4) filter body

- Open the right shield of the engine compartment and secure it by means of an interlock.
- Close the fuel valve upstream of the filter (if machine is equipped with one).
- Clean the filter body.
- Prepare the appropriate size canister to drain the fuel and put it under the fuel filter.
- Loosen the vent plug (1).
- Undo the fuel drain valve (3) and drain the fuel into the canister (C).
- After draining the fuel tighten the vent plug (1).
- Undo the upper part of the filter body (4) (C).
- Unscrew the filter cartridge from casing (2) (C)

- Unscrew the filter cartridge (2) and drain the fuel into a canister (D).
- Clean the inside of the casing (4) (C).
- Install the new filter cartridge in the casing(C).
- Lubricate the filter cartridge seal with a little oil.
- Tighten the filter cartridge (D).
- Tighten the filter casing with cartridge (C).
- Open the fuel valve upstream of the filter (if machine is equipped with one).
- Dry the engine with compressed air or wipe with a cloth.
- Bleed air from fuel system.
- Start the engine and check fine filter and fuel pre-filter for leaks, tighten if necessary.

**FILTER CARTRIDGE NUMBERS**

CATERPILLAR: 360-8960

DEUTZ: 0413 1583

**ATTENTION**

Be especially careful when unhitching the trommel screen from the tractor. If it is not necessary, do not stand between the machines.



Ensure proper visibility and make sure that nobody is present in the hazard zone when unhitching the machines.

**TIP**

(C) - applies to CATERPILLAR engine

(D) - applies to DEUTZ engine

### 5.2.9. BLEED THE FUEL SYSTEM


Venting system must be carried out in the following cases:

- fuel filters were replaced,
- engine stopped because it ran out of fuel,
- fuel system repairs were carried out,
- engine has not been started for a long period of time.

Used electric feed pump to bleed the fuel system. To ensure that there is no error message during the venting process, do not attempt to start the engine.

- Switch the ignition key to the ON position.  
*The fuel pump will run for a period of several seconds to bleed the system and generate the appropriate pressure*
- Wait until the controller turns off the fuel pump.
- Switch the ignition key to the OFF position.
- Repeat the bleeding process twice more, and then attempt to start the engine.
- After starting the engine, do not increase the speed for five minutes. Engine should run at idle. The system is then bled of air.

## 5.2.10. DRAIN FUEL PRE-FILTER WATER SEPARATOR

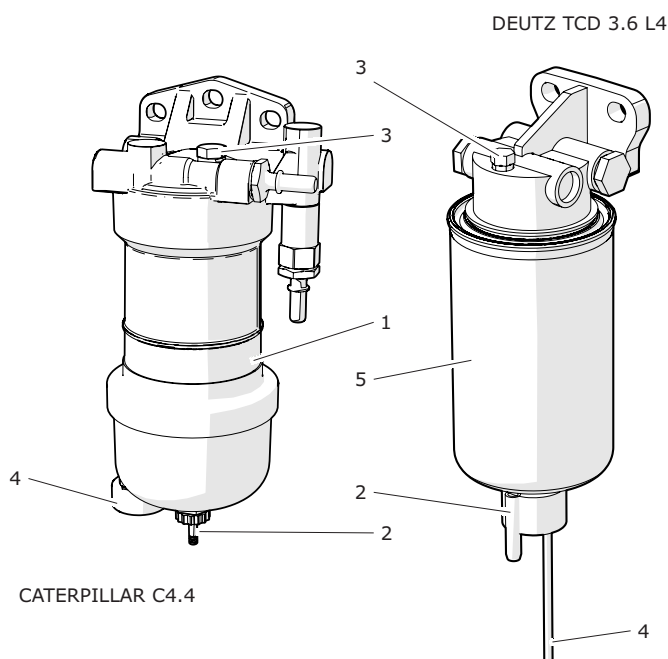

**Figure 5.9** Drain separator pre-filter

- (1) casing with separator    (2) drain valve  
 (3) air vent plug            (4) sensor wires  
 (5) filter cartridge


**DANGER**

Before starting work, stop the engine and remove key from ignition.


While working, do not approach the machine with an open flame.

- Close the fuel valve upstream of the filter (if machine is equipped with one).
- Clean the filter body.
- Prepare the appropriate size container to drain the water and put it under the fuel filter.
- Undo the fuel drain valve (2) and drain the water into a container. Leave the valve open until clean fuel begins to flow.
- Loosen the vent plug (3).
- Tighten the vent plug (3) and valve (2).

5.2.11. INSPECT THE STARTER AND THE ALTERNATOR

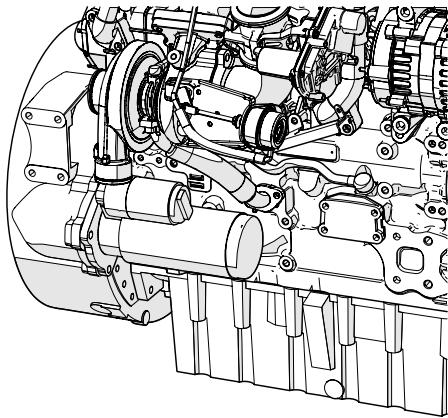

CATERPILLAR C4.4

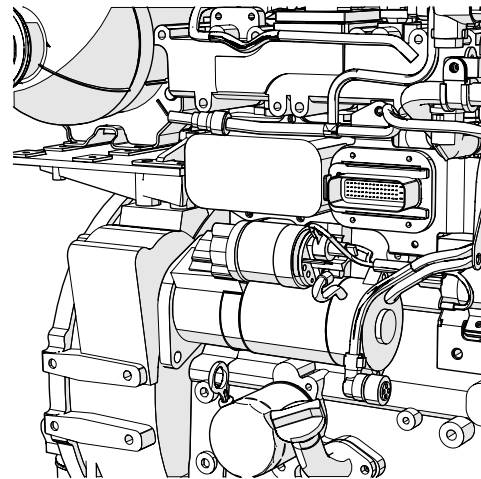


DEUTZ TCD 3.6 L4


Figure 5.10 Starter motor

Inspection of these elements involves visual inspection of the technical condition. During the inspection, check condition of housing, correctness of connection of electric leads, belt tension (in case of alternator) and cleanliness. Check the parts for loose connections and check for correctness of the alternator charging. Contaminated subassemblies should be cleaned by blowing them with compressed air. The Manufacturer should be notified about the

damage to alternator or starter in order to repair them.

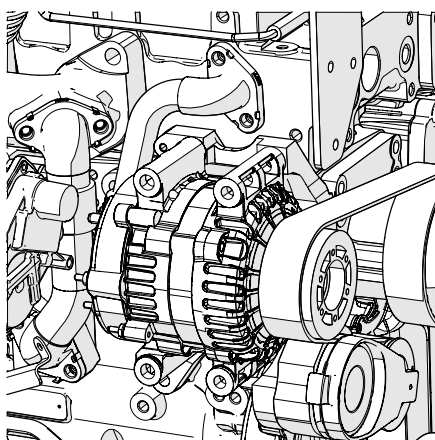

CATERPILLAR C4.4

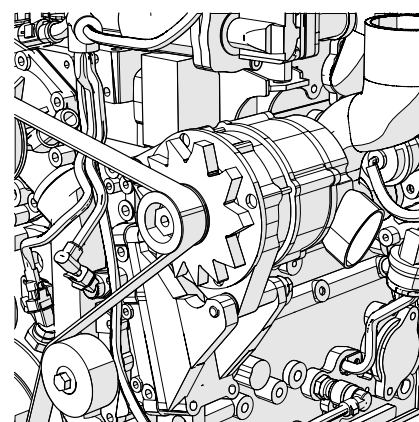

DEUTZ TCD 3.6 L4

Figure 5.11 Alternator

## 5.2.12. INSPECT THE BATTERY

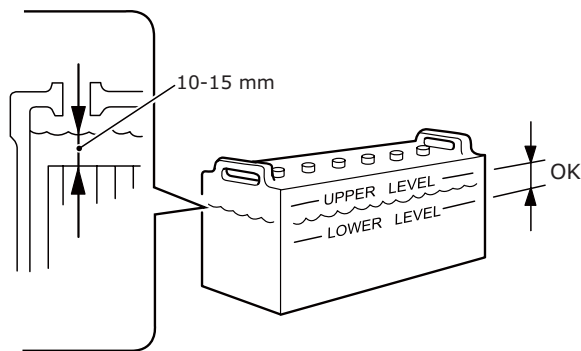


Figure 5.12 Checking electrolyte level

## ELECTROLYTE LEVEL

Electrolyte evaporates during battery use. Electrolyte level should be between the marks of the upper and lower level or, if there are no marks, electrolyte level should be 10 – 15 mm above the upper part of the battery electrodes. If loss of electrolyte is large, add only distilled water to the battery cells.

## ELECTROLYTE DENSITY

Using a densimeter, check density of electrolyte in each battery cell. Density of liquid in a properly charged battery should be  $1.28 \text{ g/cm}^3$  (not more than  $1.28 \text{ g/cm}^3$ ). If density of electrolyte is lower than  $1.26 \text{ g/cm}^3$ , charge the battery. Make the measurement at temperature of  $25^\circ\text{C}$ .

## CHARGING

If the battery is maintenance-free and you cannot check the electrolyte density, check the battery no-load voltage. If voltage drops below 12.5 V, you must charge the battery.

- The battery should be charged using current with value not higher than 10% of the battery's rated capacity (e.g. 4.5A at

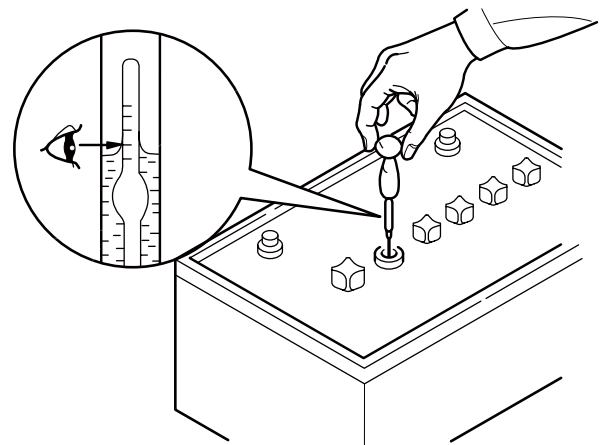


Figure 5.13 Checking density of electrolyte

**DANGER**

Do not approach the battery with an open flame during battery charging (or just after charging). Danger of explosion.



Electrolyte contained in the battery is a strongly caustic acid. Wear safety goggles and proper working clothes during battery maintenance.

Stop battery charging when temperature of electrolyte exceeds  $55^\circ\text{C}$ .

capacity of 45Ah). The charging time should be at least 10 hours.

- Disconnect lead (-) from the battery.
- Disconnect lead (+) from the battery.
- Dismantle the battery.
- Place the battery in a well-ventilated place.
- Remove plugs and check level and density of electrolyte.
- If necessary supplement electrolyte with

distilled water.

- Connect lead (+) of the rectifier and then connect lead (-). Set charging current and connect the rectifier to the mains.
- Charge the battery until electrolyte reaches constant density 1.28 g/cm<sup>3</sup> or the voltage on the unloaded clamps is 12.5V

During operation of the trommel screen note that battery life is affected by many factors. Important factors include:

- technical condition of the alternator,
- tension on vee-belt driving alternator;
- operating temperature.

In the even the trommel screen is not be operated for an extended period of time, we recommend to remove the battery and store it in a warm and ventilated room and to periodically check if it is properly charged. Before installing the battery, check the voltage.

#### REPLACE THE BATTERY

- Turn off the engine and remove key from ignition.
- Set the main switch to OFF position.
- Disconnect lead (-) from the battery.
- Disconnect lead (+) from the battery.
- Dismantle the battery.
- Install a new battery.
- Connect the (+) lead to the battery.
- Connect the (-) lead to the battery.
- Set the main switch to ON position.


### 5.2.13. ADJUST GUIDANCE AND TENSION OF CONVEYOR BELTS

#### CHECK AND ADJUST CONVEYOR BELT GUIDANCE

Exercise due care and keep a safe distance from working machine while checking guidance of conveyor belts. The inspection involves checking whether the moving conveyor belt tends to shift outwards. If it does, first make certain that the rolls (the guiding roll and the return roll) are clean. Cleanliness of the rolls may be checked and, possibly, the rolls may be cleaned only when the conveyor drive and the trommel screen's engine are switched off. After cleaning, check again whether the belt guidance is correct. If the belt still tends to shift outwards, adjust the rolls. The adjustment principle is to shift the side of the roll to which the belt shifts to direction (B).

#### ADJUST CONVEYOR ROLLERS

- Check correctness of belt guidance on the drive roll side and the return roll side.

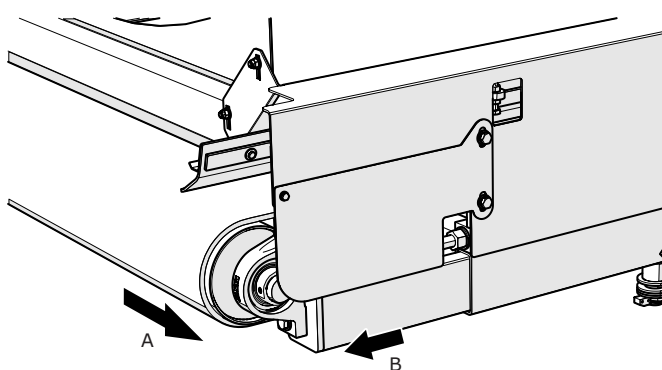

**Figure 5.14** Principle of adjustment


(A) belt shifting direction

(B) desirable direction of tensioner adjustment

- If adjustment is required, stop the conveyor drive and turn off the trommel screen engine.

- Turn adjusting nut (1) in order to slide the tensioner in or out.
- Start the engine, start the conveyor drive. If another adjustment is required, repeat all the above mentioned activities.

All conveyor belts are adjusted in the same way. The only exception is the return roller (lower one)

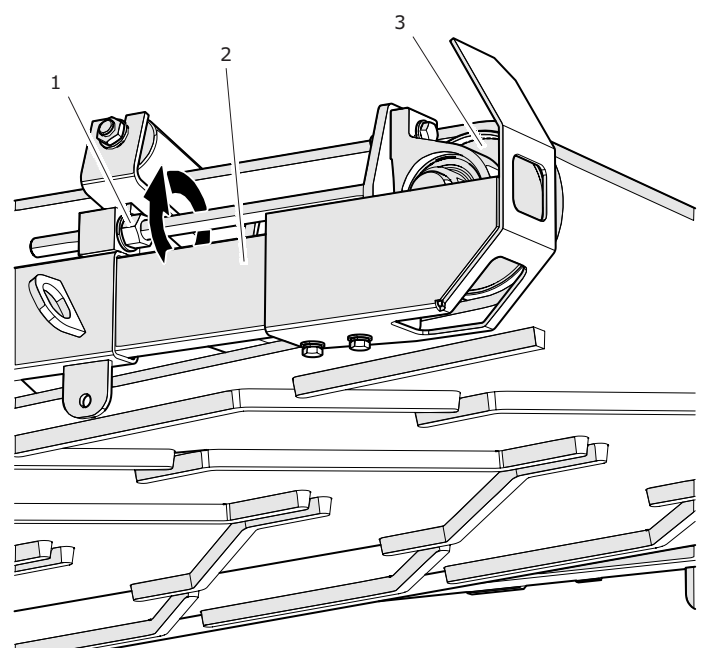

**Figure 5.15** Adjustment

(1) adjusting nut

(2) tensioner


(3) roller

of the side conveyor. Before adjustment, loosen bolt (2) on both sides of the conveyor. Then, start the adjustment.

#### ADJUST TENSION OF CONVEYORS BELTS

The conveyors belts tend to lengthen during normal operation of the trommel screen. This is a normal phenomenon. Correctness of operation of these subassemblies should be regularly checked.



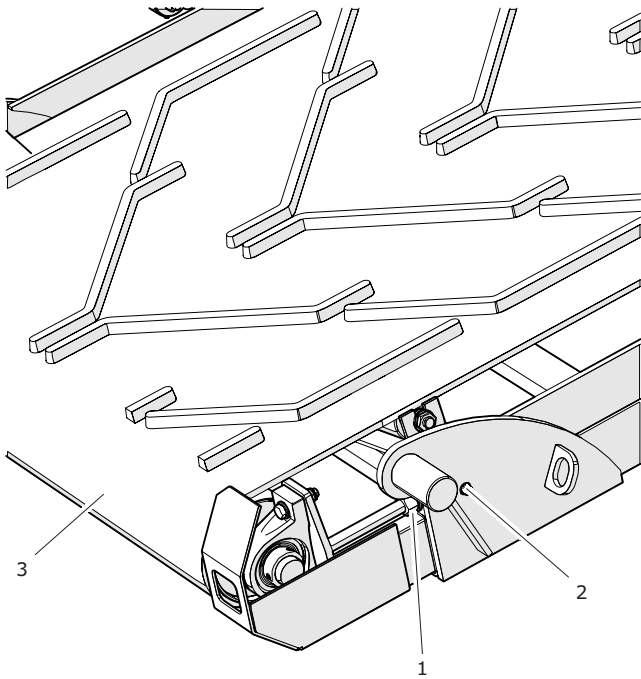

**Figure 5.16** Lateral conveyor reverse roller

- (1) adjusting nut
- (2) bolt
- (3) reverse roller (lower)

**DANGER**

Keep a safe distance and exercise caution when checking the belts.

Before adjustment, stop the conveyor drive and turn off the trommel screen engine.

correctness of belt tension.

- If necessary, repeat all adjustment activities.
- Check correctness of belt guidance, adjust if necessary.

Before adjustment of the rear conveyor, loosen counter nuts (4) – figure (5.18). Make the adjustment using the wrench included in the machine equipment.

**TIP**

During adjustment of belt tension, turn all adjustment nuts by the same number of turns (e.g. by 2 full turns).

When tightening the reverse roller of the lateral conveyor, loosen two locking bolts (see figure LATERAL CONVEYOR REVERSE ROLLER).

Tighten and adjust the belts using the attached wrench.


**TIP**

After adjustment of the reverse roller of the lateral conveyor, tighten bolt (2) only until the spring washer is completely tensioned.


If the belt is strongly tensioned, it can be adjusted by loosening the tensioning nuts on this side of the roller from which the belt shifts away - the reverse situation than shown in figures (5.14) and (5.15)

If conveyor belt slips on the drive roller, adjust the belt tension.

- Stop the conveyor drive.
- Stop trommel screen engine.
- Screw in adjusting nuts (1) in order to shift the drive roller and return roller outwards.
- Start the conveyor drive and check

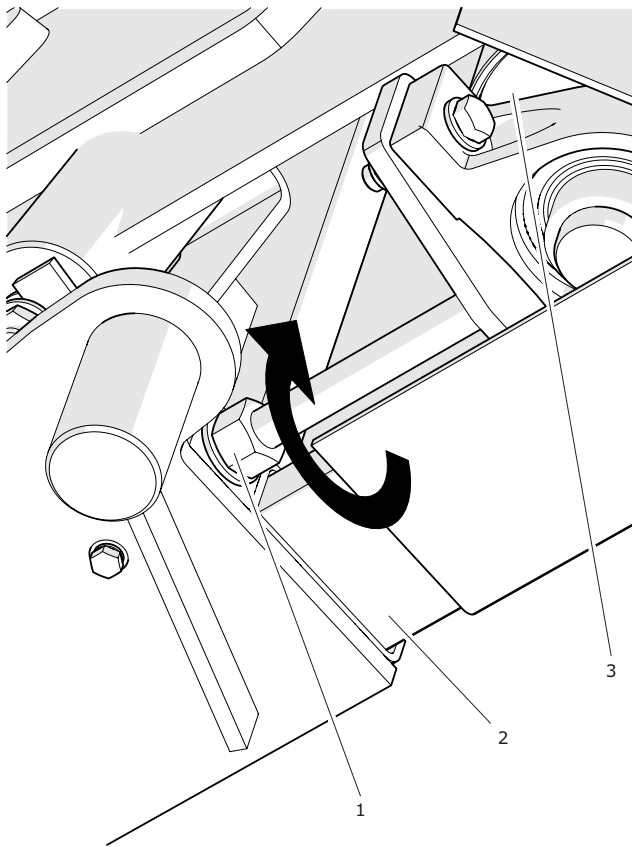

**Figure 5.17** Lateral conveyor reverse roller  
 (1) adjusting nut (2) tensioner  
 (3) reverse roller

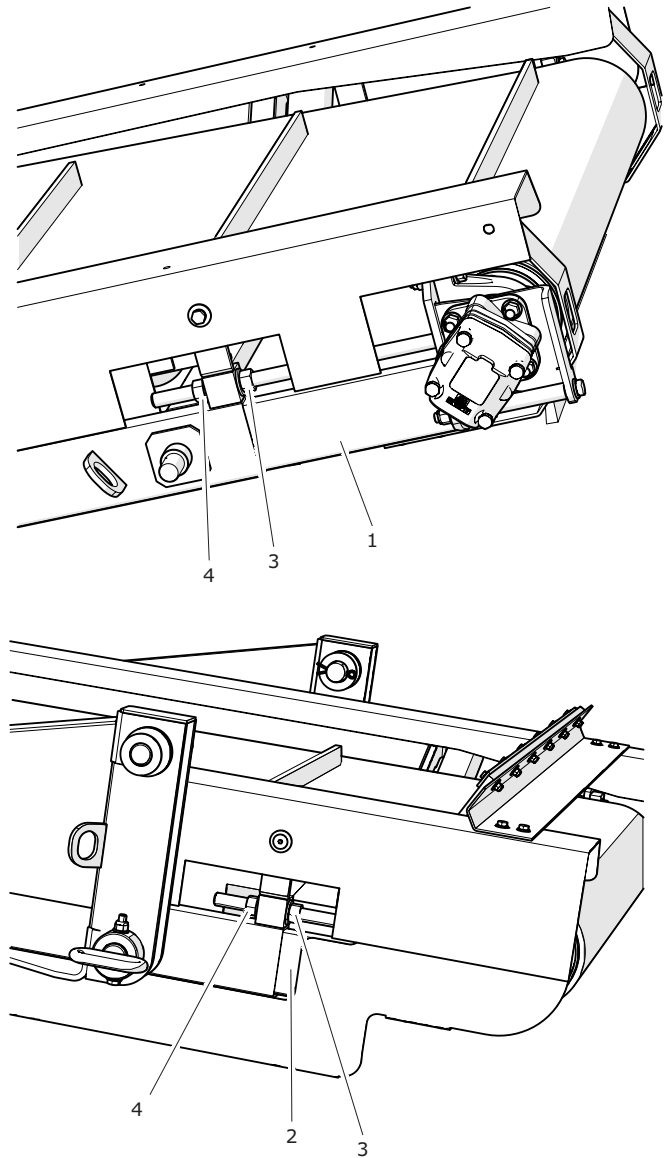

**Figure 5.18** Tensioner of rear conveyor  
 (1) upper tensioner (2) lower tensioner  
 (3) adjusting nut (4) counter nut;




### ATTENTION

Excessive extension of tensioners will cause lowering of the return roll and drive roller which means that the belt is excessively worn. The conveyor belt should be replaced.

Check conveyor belt guidance each time after the trommel screen set in new position.


5.2.14. CLEAN AND ADJUST SCRAPER

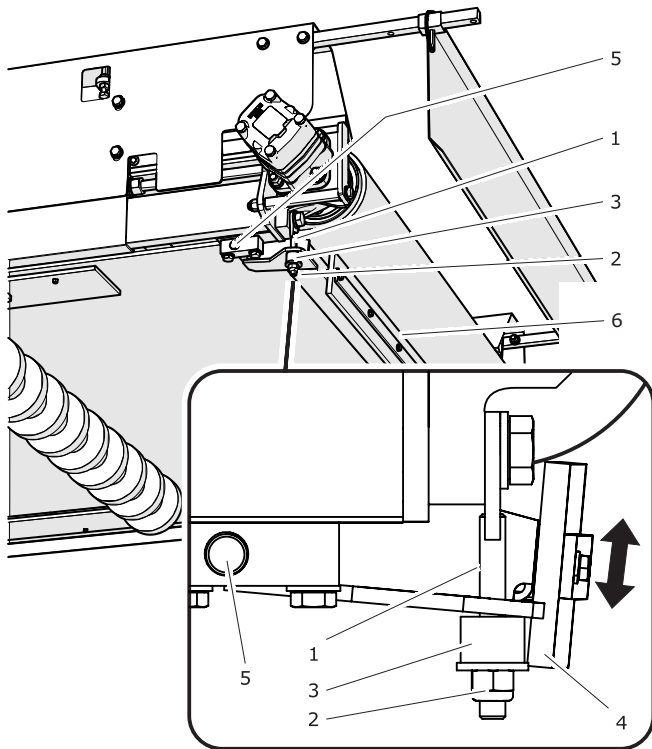

**Figure 5.19** Adjusting the position of the longitudinal conveyor's scraper

- (1) adjusting bolt
- (2) nut
- (3) shock absorber
- (4) scraper
- (5) pin

new ones. In case of the longitudinal conveyor's scraper, the strip can be turned by 180 degree.

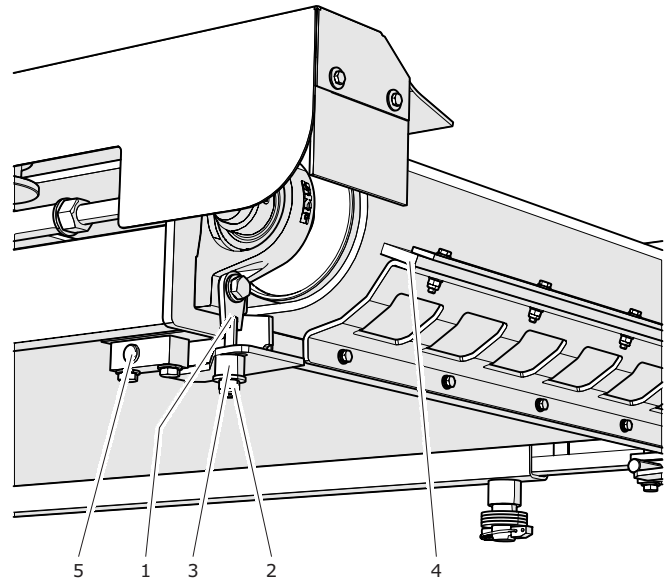

**Figure 5.20** Adjusting the position of the transverse conveyor's scraper

- (1) adjusting bolt
- (2) nut
- (3) shock absorber
- (4) scraper
- (5) pin

Each time before starting work, check and, if necessary, clean the external scraper of the longitudinal conveyor (located under the screening drum) and the scraper of the side conveyor. Remove accumulated sediment using available tools. High-pressure washer may be also used for this purpose.

Scraper strips wear down gradually during normal operation of belt conveyors. Proper operation of these elements extends the life of the complete conveyor and limits contamination of remaining elements of the trommel screen. If the adjustment scope is too small, replace the scraper strips with

**ATTENTION**

Excessive pressing of the scraper strip will lead to premature wear of the strip and conveyor.


**Do not operate the trommel screen without scrapers.**

- Clean the scrapers of the longitudinal conveyor and transverse conveyor.
- Start the drive of the longitudinal conveyor and transverse conveyor.
- Visually inspect if the scraper is positioned correctly with regard to the conveyor belt.

*The conveyor belt should be lightly pressed by the scraper. When the belt connection (belt boss) is moving by the scraper, the scraper should be slightly lowered on the shock absorber (3).*

- If the clearance is too large, adjust the scraper.
- Stop the conveyors' drive, turn off the engine and remove key from ignition.
- Screw in nut (2) on the left side and the right side of the conveyor in order to raise the scraper.
- Make sure that the scraper strip edge is parallel to the belt, if necessary correct the arrangement.
- Repeat all the above-mentioned activities while adjusting the second scraper.
- After adjusting scrapers check belt guides and adjust, if necessary.

5.2.15. CHECK AND CLEAN THE BRUSH

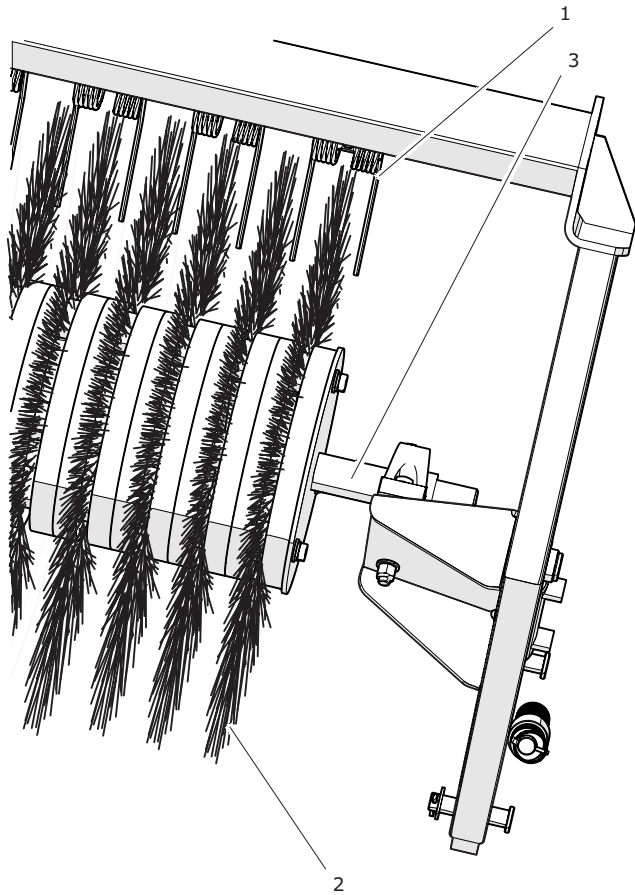

**Figure 5.21**      **Cleaning the brush**  
 (1) spring                      (2) brush  
 (3) axle


**DANGER**

Exercise particular caution while working at heights.

The brush installed above the screening drum should be periodically cleaned. When performing the inspection, use ladders or platforms with proper height and load capacity.

The places between individual brushes as well as axles and springs are especially exposed to contamination. Screened waste may be accumulated and wrapped in these places. Use generally available tools to clean the waste. While cleaning, check completeness of springs (1), their fixing and degree of wear of brushes (2).

## 5.2.16. ADJUST BRUSH POSITION

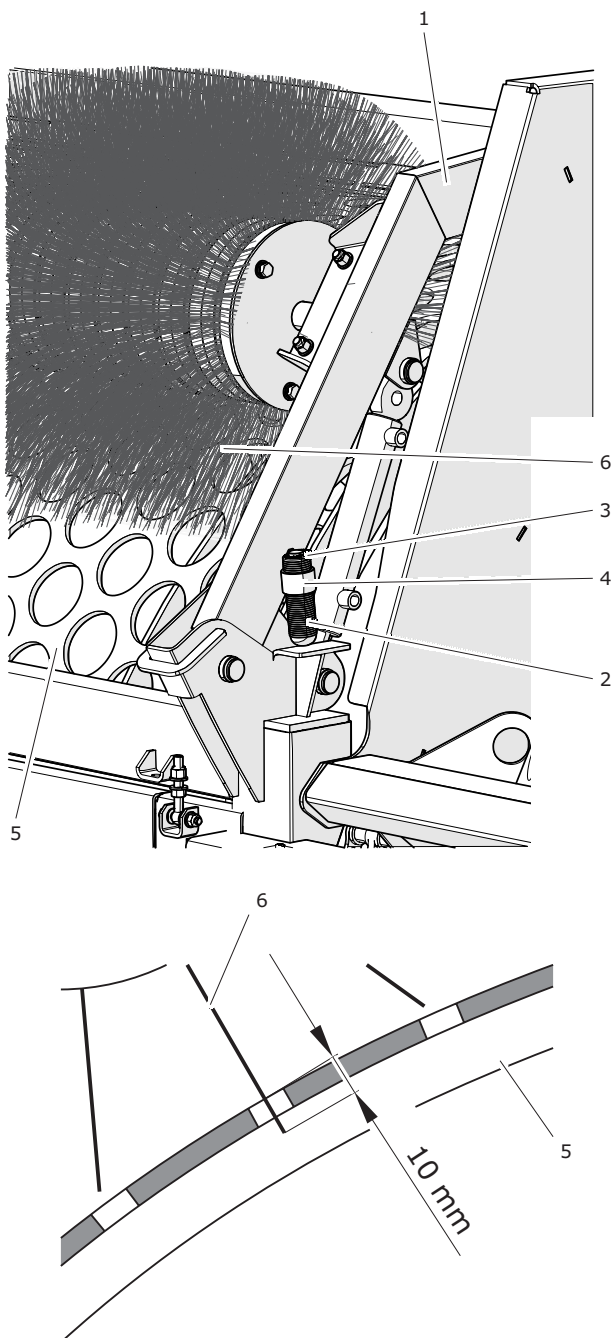

**Figure 5.22** Height adjustment

- |                 |             |
|-----------------|-------------|
| (1) brush frame | (2) washers |
| (3) cotter pin  | (4) socket  |
| (5) drum        | (6) brush   |


The brush wears out normally during normal use. The brush tips wear off and become fuzzy. Consequently, the brush works inefficiently or it

does not perform its function at all.

- Raise the brush by means of hydraulic system.
- Turn off the engine and remove key from ignition.
- Remove securing cotter pin (3), remove all washers located above socket (4).
- Remove pin and take out several washers located under socket (4) and relocate them to a higher position.
- Install cotter pin (3).
- Repeat the activities on the other side of the brush and ensure that the number of washers under the socket on both sides is the same.
- Start the engine and lower the brush.
- Start the drum drive and check correctness of the adjustment after stopping the drum. If necessary, adjust brush position again.

During the machine operation, the brush should be positioned in such a manner as to ensure that the brush bristle enters maximally 10 mm into the drum openings.

5.2.17. INSPECT AND CLEAN THE SUPPORTING ROLLERS

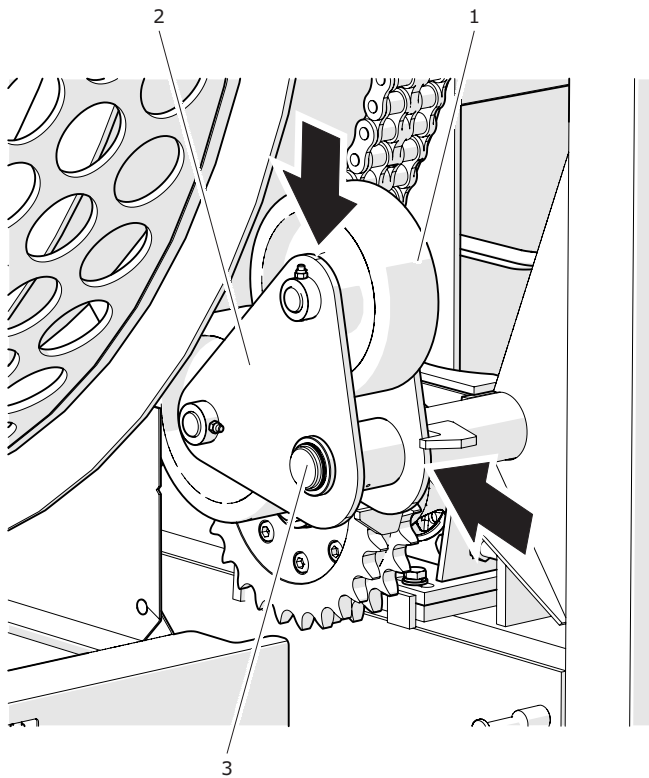

- Check condition and uniformity of wear of the rollers.  
*Contaminated rollers may be blocked and stop rotating.*
- Repeat the activities for the three remaining sets of rollers.
- Close the screening drum shields.

Excessively or unevenly worn rollers should be replaced.



**DANGER**

Before starting work, protect the trommel screen against accidental starting by unauthorized persons.


Figure 5.23 Roller inspection

- (1) roller
- (2) body
- (3) axle

Due to very difficult working conditions of the rollers, check their technical condition and cleanliness daily. If necessary, clean the rollers before starting the trommel screen.

- Open the left shield of the drum and secure it by means of interlock.
- Check cleanliness of rollers, in particular the space between body (2) and rollers (1) and roller axle (3).
- Remove accumulated material using available tools.
- Check whether lubricating conduits are correctly fixed.
- Check the screening drum surface in the place of contact with rollers and clean if necessary.

## 5.2.18. CHECK AND CLEAN THE REAR GUIDE ROLLER AND THE FRONT GUIDE ROLLER

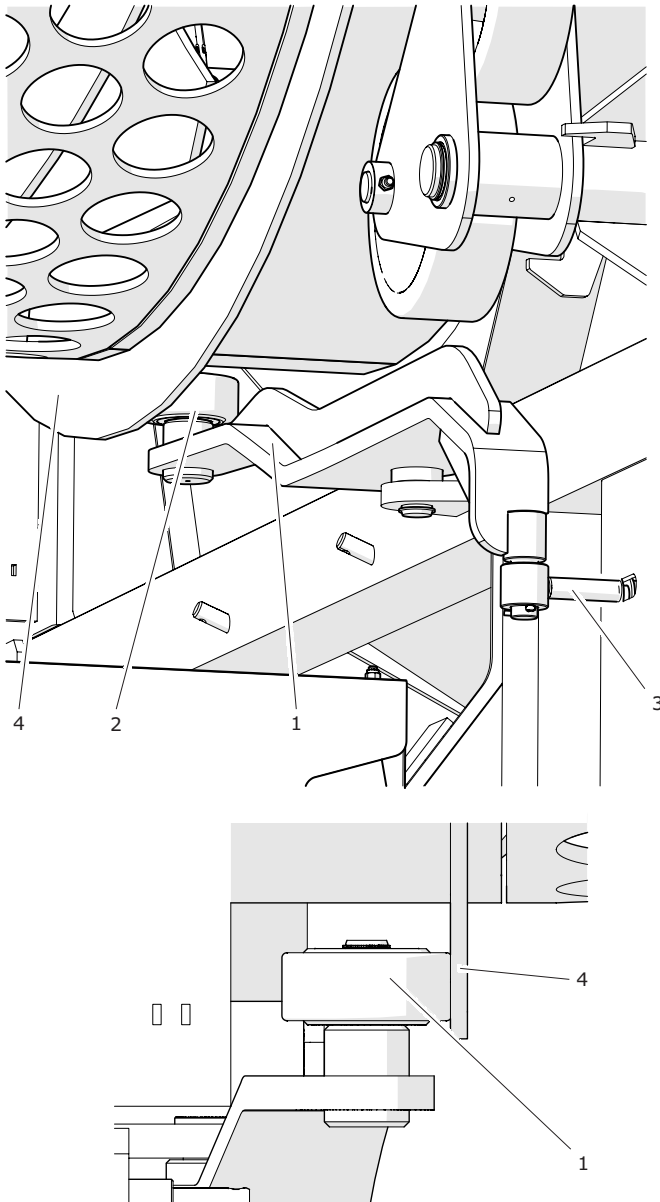


**Figure 5.24** Rear guide roller  
 (1) roller arm (2) roller  
 (3) tensioner (4) drum flange

Similarly as in case of support rollers, degree of wear and contamination of the front guide roller and the rear guide roller should be also checked.

- Check correct adjustment of the screening drum drive wheel (see section INSPECT AND ADJUST THE SCREENING DRUM DRIVE WHEEL).

- Check cleanliness of rollers. Check technical condition of the rear roller tensioner (3).
- Remove accumulated material using available tools.
- Check whether lubricating conduits are correctly fixed.

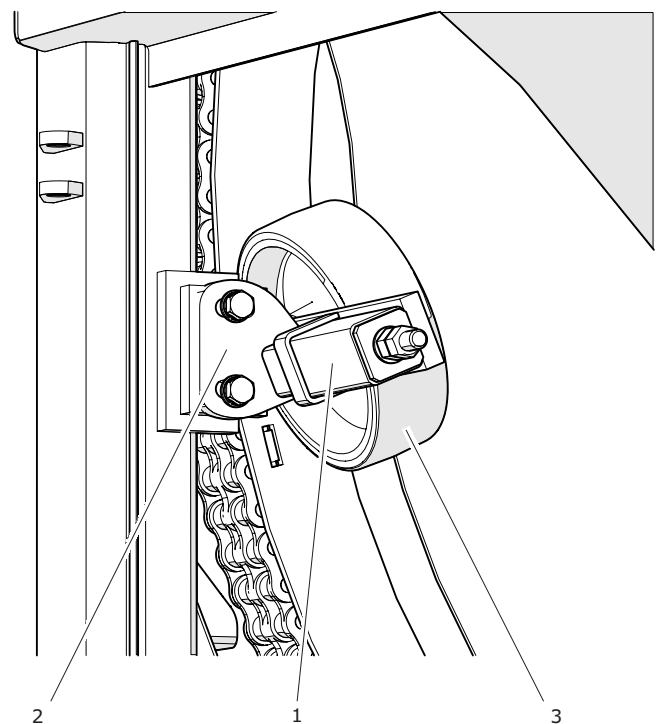


**Figure 5.25** Front guide roller  
 (1) movable bracket (2) fixed bracket  
 (3) roller

- Check the screening drum flange surface in the place of contact with rollers and clean if necessary.
- Check condition and uniformity of wear of the rollers.

*Contaminated rollers may be blocked and stop rotating.*



5.2.19. INSPECT AND ADJUST THE SCREENING DRUM DRIVE WHEEL

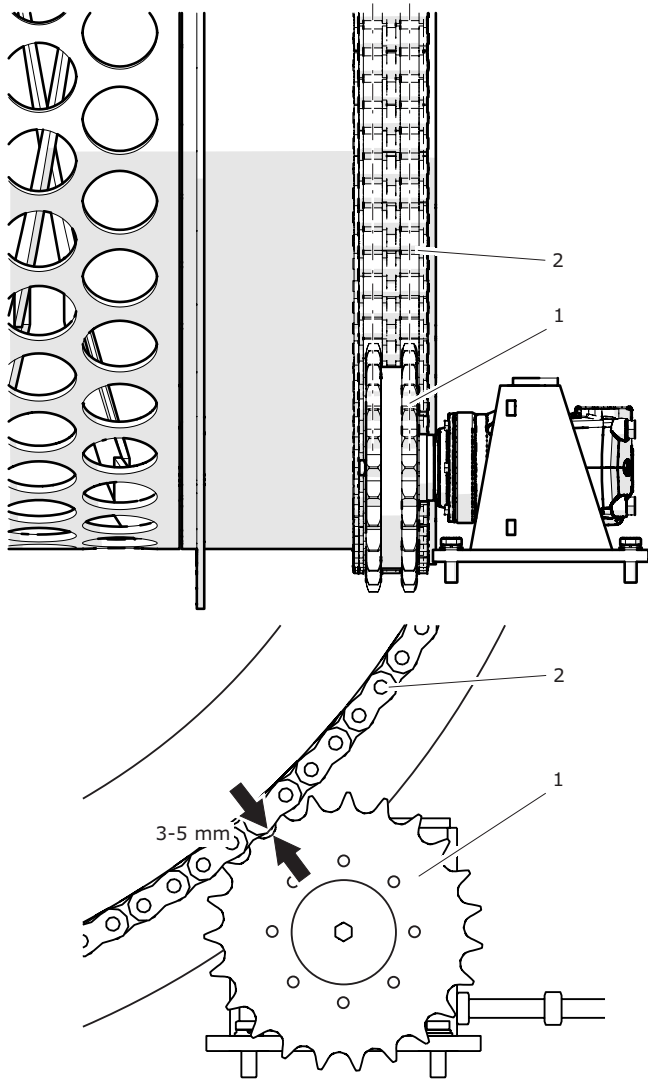

**Figure 5.26** Inspecting the position of the screening drum drive wheel

(1) drive wheel (2) chain

INSPECT THE POSITION OF THE DRIVE WHEEL AND THE DRUM

- Check position of drive wheel with regard to chain.


*The drive wheel should be positioned symmetrically with regard to the chain.*

- If the drive wheel position is not symmetrical, adjust the drum position by means of the rear and front guide rollers.

- Check clearance between the drive wheel and the chain rollers. Proper clearance range should be 3 to 5 mm.

*If measured clearance is outside the above range, adjust position of drive engine.*

ADJUST DRUM POSITION

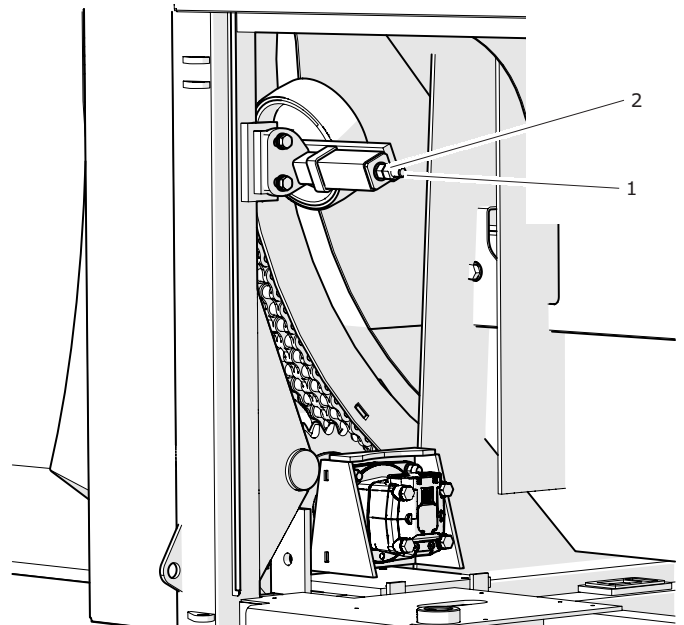


**Figure 5.27** Adjustment of drum position

(1) nut (2) counter nut  
(3) adjusting nut (4) polyurethane spring

- Loosen nut (1) and counter nut (2) of the front guide wheel.
- Screw nut (4) in if the drum is excessively withdrawn or screw the nut out if the drum is moved too much forward.

*One full rotation of the nut moves the drum by 2 mm.*

- Move the front guide wheel to the drum flange and tighten counter nut (2) until slight resistance is felt.
- Tighten nut (1).
- Start the drum. After several rotations stop the drum and the engine and check the drum position again. If necessary, repeat the adjustment.

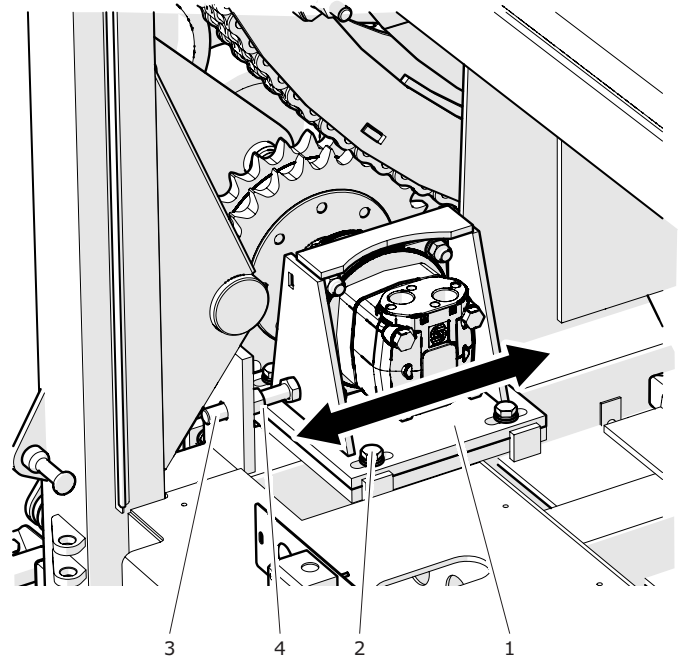

**Figure 5.28** Adjust drive wheel position

(1) base

(2) bolt

(3) bolt

(4) locking nut


#### ADJUST DRIVE WHEEL POSITION

- Loosen nut (4).
- Loosen bolts (2).
- Rotate bolt (3) in order to move the drum drive system in chosen direction while measuring the clearance between the wheel and the chain.
- Tighten bolts (2) when proper setting is achieved.

*Make sure that bolt (3) always presses against the engine bracket.*

- Tighten locking nut (4)
- Start the drum. After several rotations stop the drum and the engine and check the clearance again. If necessary, repeat the adjustment.

5.2.20. INSPECT AND CLEAN THE BELT CONVEYOR ROLLERS

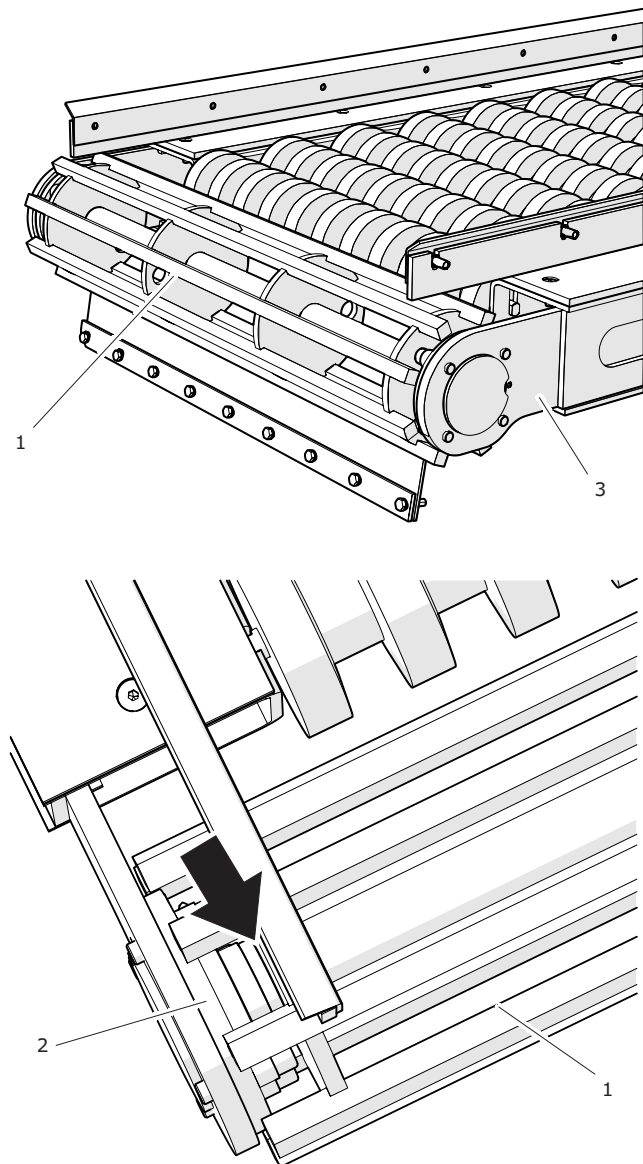

**Figure 5.29** Charging hopper conveyor - inspection points

- (1) reverse roller
- (2) bearing
- (3) tensioner bracket

Each time after finished work or after 10 hours of screening, stop the machine and check cleanliness of all conveyors. Due to diversity of screened materials, the user should choose by himself the conveyor cleaning method. Remains of material (especially ash) may solidify under influence of humidity and may form compact and difficult-

to-remove lumps in free space of the machine. Material wound between the roller and bearing should be immediately removed using available tools.



**ATTENTION**

Contamination of rollers and shafts is the most common cause of failures of belts and bearings.

CHECK CLEANLINESS OF ROLLERS

- Finish the charging hopper filling. Wait until the screening is completed. Stop the trommel screen engine and remove key from the ignition of the main control panel.
- Check cleanliness of rollers in all conveyors. Pay particular attention to openwork rollers of the charging hopper conveyor which are most exposed to contamination.
- Check the space between roller and bearing (indicated by arrow).
- In extreme cases, disassembly of a conveyor may be necessary. The openwork drive roller of the charging hopper conveyor can be cleaned after sliding the hopper out by means of cylinder – see section REPLACE DRUM.



**ATTENTION**

Regularly check cleanliness of the machine's conveyors, especially the charging hopper conveyor.

## 5.2.21. CHECK HYDRAULIC SYSTEM TIGHTNESS

**TIP**

Bleeding of the hydraulic system is not required during normal operation of the trommel screen.

- Prepare the trommel screen for inspection. Clean connections of conduits, bodies and seals of hydraulic cylinders, bodies of pumps and engines.
- Start the combustion engine and then start all conveyors, fold and unfold the side conveyor and the rear conveyor.
- Turn off the engine and remove key from ignition.
- Check the machine for tightness of the systems.

The hydraulic system must be completely tight. Replace damaged leak stoppers of pumps and

**Table 5.3.** Tightening torque for terminals of hydraulic conduits

CONDUIT SIZE	TORQUE
DN	[Nm]
6	30÷50
8	30÷50
10	50÷70
13	50÷70
16	70÷100
20	70÷100
25	100÷150
32	150÷200

hydraulic cylinders. If leaks appear at connections then try to tighten the connections. Tightening torques of hydraulic conduits are given in table (5.3). If the leak at connections is not removed, replace conduit, connector and seals (depending on place of leakage). Hydraulic oil leaks may occur also in rubber conduits, as a result of their delamination or abrasion. A conduit must be replaced with a new one.

**ATTENTION**

Do NOT use the trommel screen if the hydraulic system is unreliable.

### 5.2.22. REPLACE THE HYDRAULIC LINES

Rubber hydraulic conduits must be replaced every 4 years regardless of their technical condition. This should be entrusted to specialised workshops.


Information concerning hydraulic conduits can be found in the spare parts list.

Tightening torques of the conduits are given in table (5.3).

**ATTENTION**

Flexible hydraulic conduits must be replaced every 4 years due to their working characteristics and material (ageing, high pressure, variable loads).

## 5.2.23. CHANGE HYDRAULIC OIL

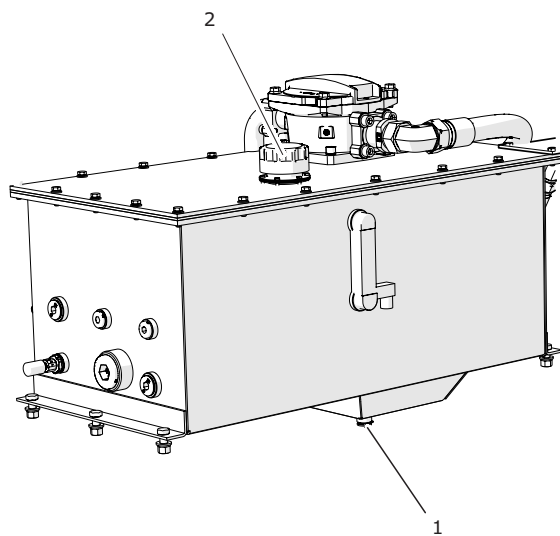

**Figure 5.30** Hydraulic oil tank

(1) drain plug

(2) drain valve

**TIP**

Information concerning recommended hydraulic oil is given in section CONSUMABLES.

- Prepare a container for used oil (about 100 litres).
- Open the right shield of the engine compartment and secure it by means of an interlock.
- Unscrew filler plug (2),
- Install the tip of the GN880G 1-26B connector with conduit on the drain valve drain oil into the container.
- Replace oil filters.
- Remove strainer (from under the filler plug) and blow it with compressed air.
- Install strainer and pour new oil to the maximum level.
- Check the filler plug seal, confirm that vent openings in the plug are not blocked. Tighten filler plug.
- Used hydraulic oil should be disposed of according to local regulations.

5.2.24. REPLACE OIL FILTERS

REPLACE RETURN-SUCTION FILTER CARTRIDGE

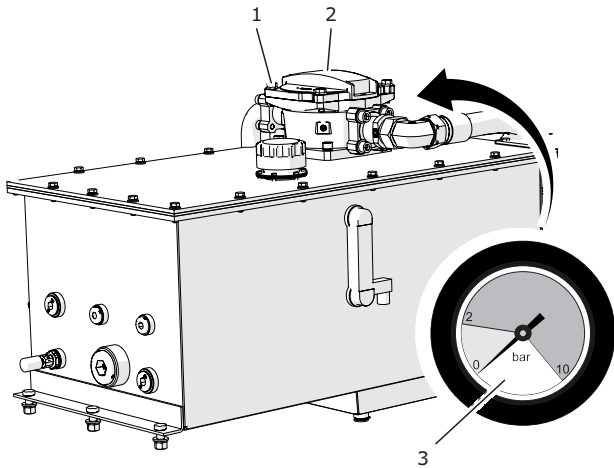


Figure 5.31 Return-suction oil filter

- (1) bolt
- (2) cover
- (3) contamination indicator

- Unlock and slide out the engine frame.
- Clean the filter cover area.
- Unscrew 4 bolts in the filter cover (2).
- Dismantle cover (2).
- Remove filter element.
- Install new filter element, check cover seal.
- Install cover and bolt it with 4 bolts.
- Start the engine and check operation of contamination indicator (3).

Filter element number: 0300 RK 010

REPLACE BY-PASS FILTER CARTRIDGE

- Clean the filter body.
- Unscrew filter element (1) using a wrench.
- Check seal of the new filter element.
- Clean the surface where the filter element and filter body join.
- Fix new filter element with bolts.

- Start the engine and check indication of filter contamination indicator (2).

Filter element number: CSD 050 0 A10

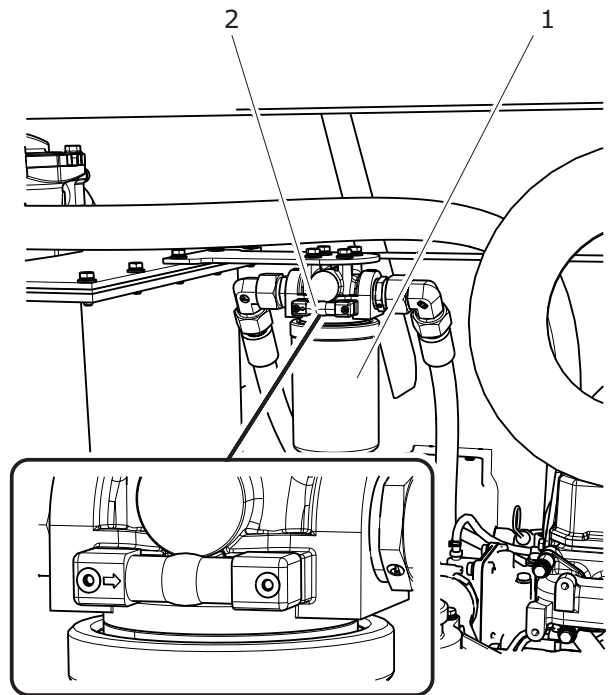


Figure 5.32 FIGURE 5.33 Oil filter bypass


- (1) filter element
- (2) contamination indicator



**ATTENTION**

Check technical condition of filter element before its installation. Damaged filter elements are not suitable for use.

## 5.2.25. CLEAN AND INSPECT THE HYDRAULIC OIL COOLER

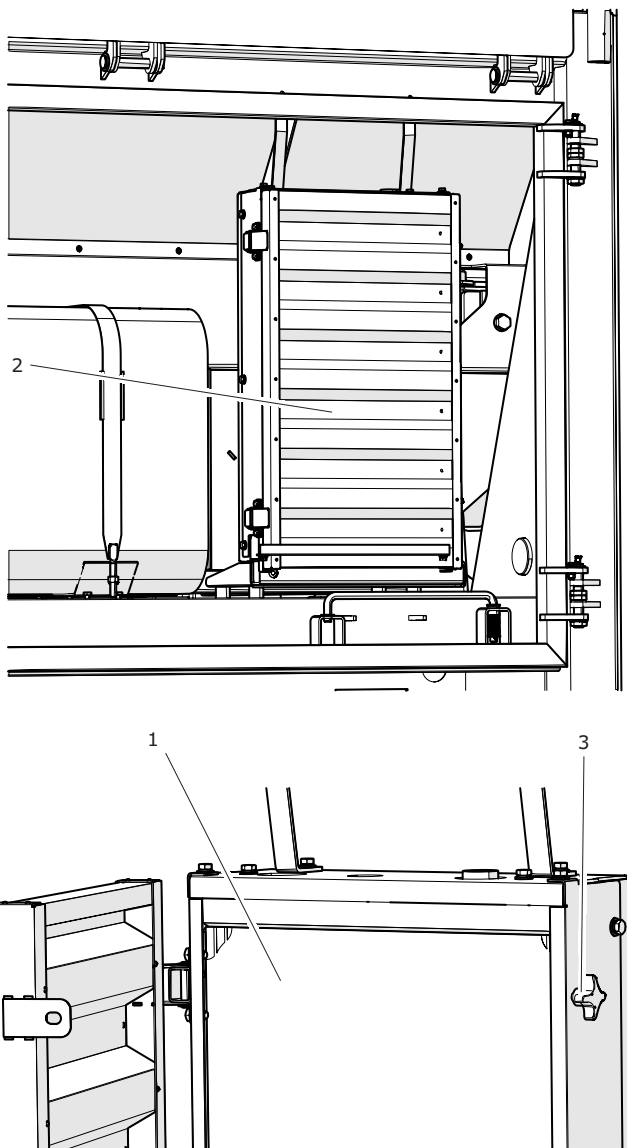

**Figure 5.33** Hydraulic oil cooler

(1) radiator

(2) guard

(3) bolt

Due to difficult working conditions of the cooling system (possibility of quick contamination of the radiator), exchange of heat in the heat exchanger is considerably deteriorated. That is why cleanliness of radiator (1) and shield (2) should be periodically checked. If necessary, blow these two elements with compressed air.

- Open the left shield of the engine compartment

and secure it by means of an interlock.

- Unscrew two bolts (3) of shield (2) and open the radiator shield.
- Blow the radiator and the shield with compressed air in the direction opposite to normal air flow direction.
- Close the engine compartment shield.

**ATTENTION**

Before starting work, stop the engine and remove key from ignition.



### 5.2.26. CHECK AIR TIGHTNESS OF PNEUMATIC SYSTEM

**ATTENTION**

Do NOT hitch and tow the trommel screen if its brake system is out of order.

Contact of pneumatic conduit seals etc. with oil, grease, petrol etc. may cause damage and accelerate the ageing process. Bent, permanently deformed, cut or worn conduits should be replaced.

- Hitch the trommel screen to truck tractor. Park machine and tractor on level surface.
- Protect the trommel screen against rolling by placing chocks under the wheels. Immobilise truck tractor and trommel screen with parking brake.
- Start the truck tractor engine and supplement air in the brake system tank. Turn off tractor engine.
- Check system components by releasing brake pedal in tractor.
- Give particular attention to conduit connections and brake cylinders.
- Repeat system check with depressed tractor brake pedal.

In the event of the appearance of leaks, compressed air will escape at the places of damage, with a characteristic hiss. Lack of system tightness may be exposed by covering checked elements with washing fluid or other foaming preparations, which will not react aggressively with system components. It is recommended to supply preparations commercially available designed to facilitate discovering air leaks. Damaged components should be replaced or repaired. If leaks appear at connections then tighten the connections. If air continues to escape replace connection component or seal.

During tightness inspection attention should additionally be given to technical condition and degree of cleanness of the system components.

## 5.2.27. CLEAN AIR FILTERS, INSPECT THE CONNECTIONS


Filter elements are reusable and are not subject to changing unless they are mechanically damaged.

- Turn cover (2) by 90° to the left.
- Remove filter element.
- Wash filter element and interior of connection body, blow them with compressed air.
- Install filter element and cover (2).
- Check technical condition of seal (3) and shield (4).

Connection with damaged body should be replaced. In event of damage to cover or seal, change these elements for new reliable elements. Contact of pneumatic connector seals with oils, grease, petrol etc. may cause damage and accelerate ageing process.

If the trommel screen is unhitched from the truck tractor, connections should be protected by covers or placed in their designated holding sockets. Before the winter period it is recommended to preserve the seal with a special preparation (e.g. silicon grease for rubber elements).

Each time before hitching the machine, inspect technical condition and cleanness of connections and sockets in truck tractor. If necessary clean or repair tractor socket.

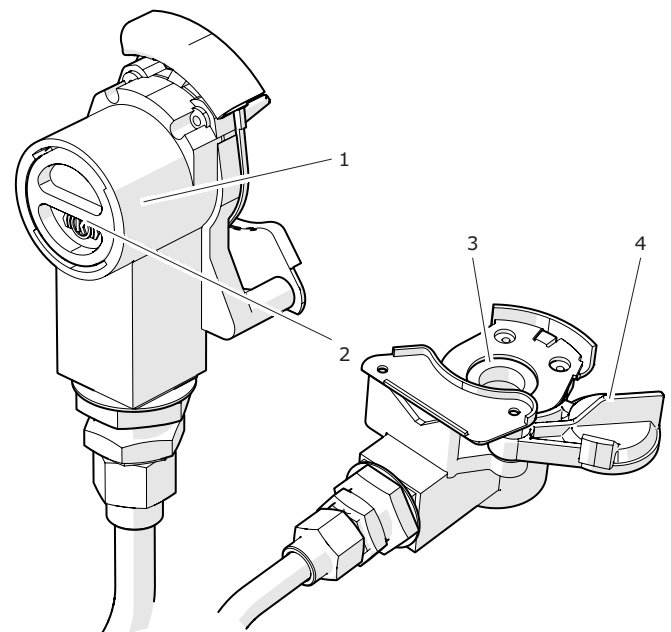

**Figure 5.34** Pneumatic connection with air filter

(1) body

(2) cover

(3) seal


(4) guard



### DANGER

Unreliable and contaminated trommel screen connections may cause malfunctioning of the brake system.

5.2.28. DRAIN WATER FROM AIR TANK, CLEAN DRAIN VALVE

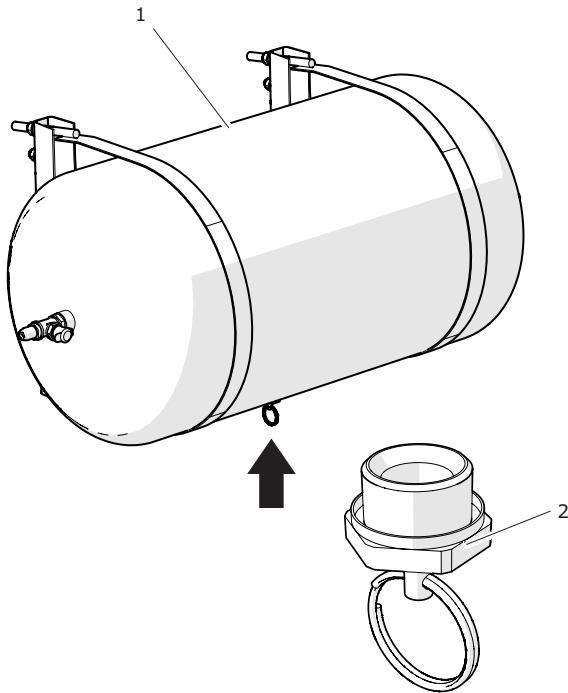

**Figure 5.35** Air tank  
 (1) tank (2) drain valve

DRAIN THE TANK

- Press drain valve stem (2) located in the lower part of tank (1).

The compressed air in the tank causes the removal of water to the exterior.



**DANGER**

Before dismantling drain valve release air from tank.

- Released valve stem should automatically close and stop flow of air from the tank.

In the event, that the valve stem resists returning to its setting, then the whole drain valve must be unscrewed and cleaned, or replaced.


CLEAN DRAIN VALVE

- Reduce pressure in air tank.  
Reduction of pressure in tank is achieved by tilting the drain valve stem.
- Unscrew drain valve.
- Clean the valve and blow it with compressed air.
- Check condition of spring and valve stem, replace the valve if necessary.
- Check the condition of gasket.
- Screw valve in, fill tanks with air, check tightness.

## 5.2.29. CHECK WHEEL AXLE BEARING PLAY

## PREPARATORY STEPS

- Hitch the trommel screen to agricultural tractor or truck tractor.
- Immobilise tractor with parking brake.
- Position the trommel screen on hard, level and stable surface.
- Tractor must be placed to drive forward.
- Place chocks under the trommel screen's wheel that will not be raised. Ensure that machine will not move during inspection.
- Raise the wheel (opposite to the side where chocks are placed).
- Lifting jack should be positioned in the place indicated by the arrow in the below figure. Lifting jack must be suitable for the weight of the trommel screen.

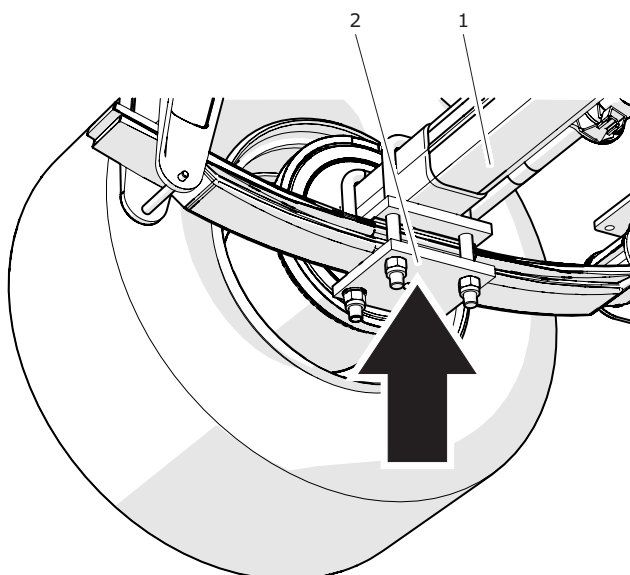


**Figure 5.36** Recommended lifting jack supporting points

(1) wheel axle

(2) axle backing

## CHECK WHEEL AXLE BEARING PLAY

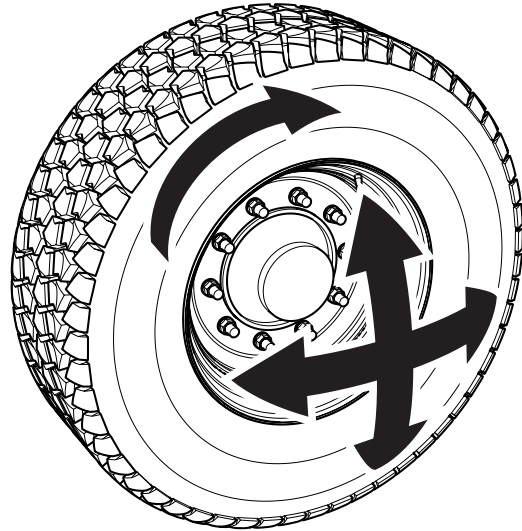

**Figure 5.37** Checking slackness

- Turning the wheel slowly in both directions check that movement is smooth and that the wheel rotates without excessive resistance.
- Turn the wheel so that it rotates very quickly, check that the bearing does not make any unusual sounds.
- Holding the wheel above and below, try to feel any slackness.

*You may use a lever placed under the wheel supporting the other end on the floor.*

- Lower the lifting jack, relocate the chocks to the other wheel and repeat the inspection procedure for the other wheels.

If play is felt, adjust bearing. Unusual sounds coming from bearing may be symptoms of excess wear, dirt or damage. In such a case, the bearing and sealing ring should be replaced with new parts (if they are not suitable for further operation) or

**DANGER**

Use a lifting jack that is suitable for the weight of the trommel screen. Position the lifting jack on hard and stable surface.

Lifted machine must be additionally secured using sufficiently high and strong supports. The machine must not be supported using fragile elements (bricks, hollow bricks etc.).



Before commencing work the user must read the instructions for lifting and adhere to the manufacturer's instructions.

The lifting jack must be stably supported by the ground and so must the axle.

Ensure that the trommel screen shall not move during inspection of axle bearing slackness.

**TIP**

If hub cover is damaged or missing, contamination and dampness enter the hub, which causes significantly faster wear of bearing and hub seals.




Bearing life is dependent on working conditions of the trommel screen, loading, speed of travel and lubrication conditions.

cleaned and greased again.

Check condition of hub cover, if necessary replace with new cover. Inspection of bearing slackness may only be conducted when the trommel screen is hitched to the truck tractor. The machine may not be loaded.

## 5.2.30. ADJUST WHEEL AXLE BEARING PLAY

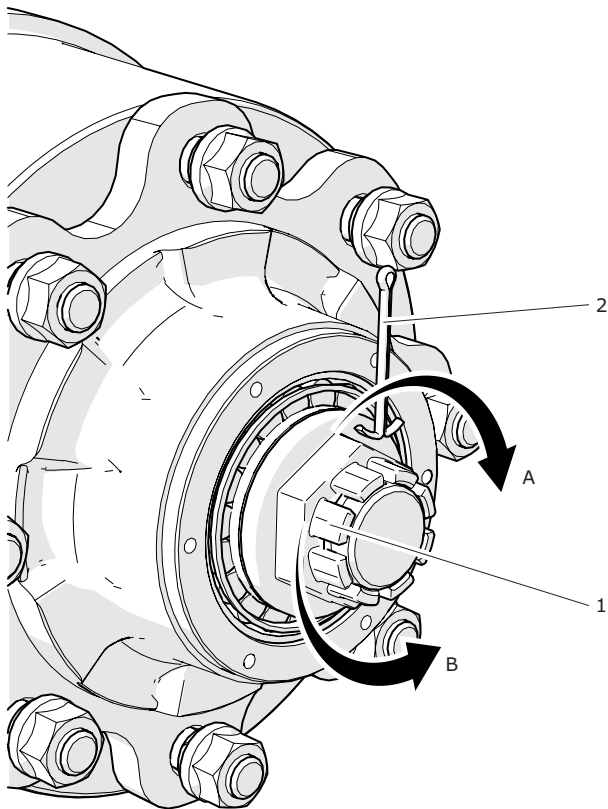

**Figure 5.38** Adjustment of play

(1) castellated nut                      (2) cotter pin

(A) tighten                                (B) unscrew

The wheel should turn smoothly without stiffness or detectable resistance. Adjustment of bearing slackness may only be conducted when the trommel screen is not loaded and is hitched to the tractor.

- Ensure that the trommel screen is properly secured and will not move during adjustment.
- Remove hub cover.
- Take out split cotter pin (2) securing castellated nut (1).
- Tighten castellated nut in order to eliminate slackness (right-hand thread).

*Wheel should rotate with some*

*resistance.*

- Undo the nut until resistance is reduced and wheel rotates smoothly. Turn the nut to align the nearest nut groove with opening in wheel axle stub.

*Nut may not be excessively tightened.*

*Do not apply excessive pressure because working conditions of the bearings may deteriorate.*

- Secure castellated nut with cotter pin and mount hub cap.
- Delicately tap hub cap with rubber or wooden hammer.

5.2.31. INSPECT TIGHTNESS OF NUTS, INSTALL AND REMOVE THE WHEEL


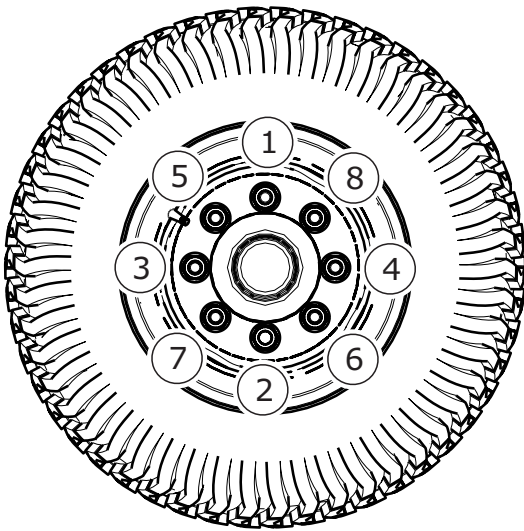


Figure 5.39 Sequence of undoing and tightening nuts

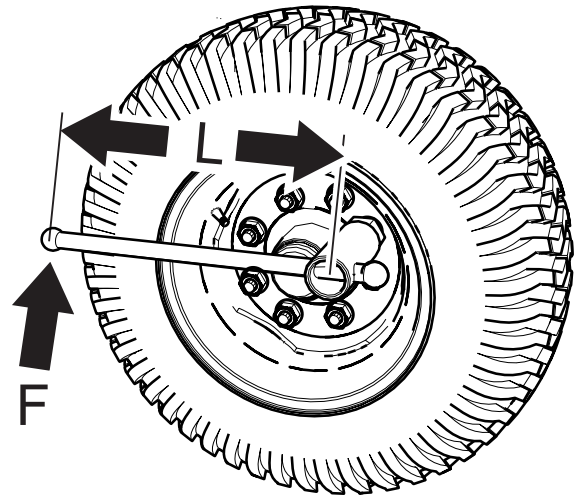

M20x1.5 415-450 Nm

Figure 5.40 Tightening method  
(F) - weight of the person tightening the nut  
(L) spanner arm length

REMOVE THE WHEEL

- Place chocks under wheel that will not be dismantled.
- Ensure that the trommel screen is properly secured and will not move during wheel dismantling.
- Loosen wheel nuts according to the sequence given in the above figure.
- Place lifting jack and lift the trommel screen.
- Unscrew the nuts. Remove the wheel and remove the 2 spacer rings.

INSTALL THE WHEEL

- Clean axle pins and nuts of dirt contamination.  
Do not grease thread of nuts and pins.
- Check condition of pins and nuts, if necessary replace.
- Install 2 spacer rings (on the opposite pins), for example (1) and (2), see figure (5.39).
- Install wheel on hub.
- Tighten nuts so that wheel rim tightly fits the

hub.

- Lower the trommel screen, tighten nuts according to recommended torque and given sequence.

**ATTENTION**

Axle nuts may not be tightened with impact wrench, because of danger of exceeding permissible tightening torque, the consequence of which may be breaking the thread connection or breaking off the hub pins.



The greatest precision is achieved using a torque spanner. Before commencing work, ensure that correct tightening torque value is set.

## TIGHTEN NUTS

Nuts should be tightened gradually diagonally, (in several stages, until obtaining the required tightening torque) using a torque spanner. If a torque spanner is not available, one may use an ordinary spanner. The arm of the spanner (L) should be selected according to the weight of the person (F) tightening the nuts. Remember that this method of tightening is not as accurate as the use of a torque spanner.

**Table 5.4.** Selection of spanner arm length

<b>TORQUE</b>	<b>BODY WEIGHT (F)</b>	<b>LENGTH ARM LENGTH (L)</b>
[Nm]	[kg]	[m]
415÷450	90	0.46÷0.50
	85	0.48÷0.53
	80	0.52÷0.56
	75	0.53÷0.60
	70	0.59÷0.64



### 5.2.32. CHECKING THE AIR PRESSURE AND ASSESS THE CONDITION OF THE WHEELS

**TIP**

Tyre pressure values are specified in information decal, placed on wheel or on the frame above machine wheel.

**DANGER**


Damaged tyres or wheels may be the cause of a serious accident.

Tyre pressure should be checked each time after changing spare wheel and according to guidelines presented in table (5.1). In the event of intensive use, air pressure in tyres should be checked more frequently. The trommel screen must be unloaded during checking. Checking should be done before travelling when tyres are not heated, or after an extended period of parking.

While checking pressure pay attention to technical condition of wheels and tyres. Look carefully at tyre sides and check the condition of tread. In case of mechanical damage consult the nearest tyre service and check whether the tyre defect requires tyre replacement. Wheels should be inspected with regard to distortion, breaking of material, breaking of welds, corrosion, especially in the area of welds and contact with tyre.

### 5.2.33. CHECK THICKNESS OF BRAKE SHOE LININGS

During the trommel screen operation, drum brake linings are subjected to wear. In such a case, the complete brake shoes should be replaced with new ones. Excessive wear of brake shoes is the condition in which the thickness of linings which are glued or riveted to steel structures of brake shoes is smaller than the minimum value. This condition is indicated by extended cylinder piston stroke. Check technical condition of brake shoe linings through inspection openings (3). Minimum thickness of brake shoe linings is 2 mm.

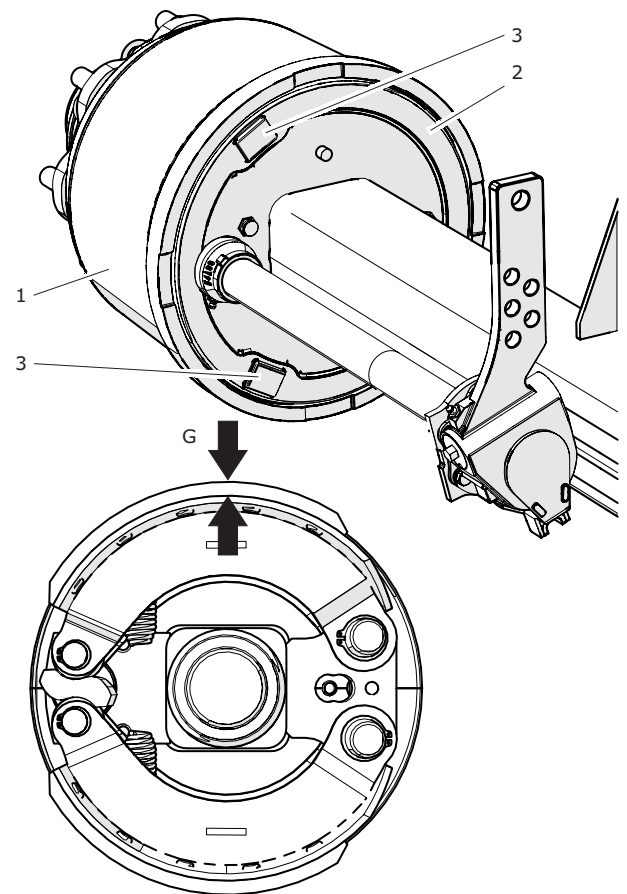

**Figure 5.41**      Checking brake shoe linings  
(1) brake drum      (2) disc  
(3) inspection openings      (G) thickness of brake shoe lining

### 5.2.34. CLEAN THE TROMMEL SCREEN

- The trommel screen should be cleaned as needed. In particular, clean the trommel screen before driving on the public roads. Before using pressure washer the user is obliged to acquaint himself with the operating principles and recommendations concerning safe use of this equipment.
- Before washing, remove manually and as accurately as possible the remains of screened material (in particular, from the charging hopper, screening drum and conveyors). Dry sediment should be removed using compressed air.
- The trommel screen may only be cleaned with clean running water. Cleaning detergents with neutral pH may be used, which do not react aggressively with the trommel screen's structural elements.
- Using pressure washer increases washing effectiveness, but particular care must be taken during work. During washing, washer nozzle may not be closer than 50 cm from the surface being cleaned.
- Water temperature shall not exceed 55°C.
- Do not direct water jets at system and equipment elements of the trommel screen i.e. control valves, braking force regulator, brake cylinders, hydraulic cylinders, pneumatic, electric and hydraulic plugs, lights, electrical connections, information and warning decals, identification plate, conduit connections, lubrication points, leaf springs, control panels, safety switches etc. High pressure water jet may get inside the machine and cause mechanical damage or corrosion.
- For cleaning and maintenance of plastic coated surfaces it is recommended to use clean water or special preparations designed for this purpose.
- Do not apply organic solvents, preparations of unknown origin or other substances, which may cause damage to lacquered, rubber or plastic surfaces. In the event of doubt it is recommended to make a test on an unseen surface area.
- Surfaces smeared with oil or grease should be cleaned by application of benzene or other degreasing agents and then washed with clean water with added detergent. Comply with recommendations of the Manufacturer.
- Washing detergent should be kept in original containers, optionally in replacement containers, but very clearly marked. Preparations may not be stored in food and drink containers.
- Unsure cleanliness of elastic conduits and seals. The plastic from which these elements are made may be susceptible to organic substances and some detergents. As a result of long-term reaction of some substances, the ageing process may be accelerated and risk of damage increased. Rubber elements should be maintained with the aid of special preparations after previous thorough washing.
- Observe environmental protection principles and wash the trommel screen in a place

designed for this purpose.

- Washing and drying the trommel screen must take place at temperatures above 0°C.
- Leaf springs should be cleaned using a hard brush. The space between spring leaves should be blown using compressed air.
- Each time after washing, lubricate the trommel screen. In case of central lubrication system, carry out 3 working cycles (pump activation push-button is located on the lubrication pump housing).
- Before washing, sediment accumulated on the conveyor rollers should be mechanically removed. Pay special attention to pins near the bearings. If necessary, clean these places.
- Checking cleanliness of openwork rollers (drive roll and return roller) of the charging hopper conveyor. If necessary, remove and clean the feeder.

**DANGER**

Carefully read the instructions for application of washing detergents and maintenance preparations.

While washing with detergents wear appropriate protective clothing and goggles protecting against splashing.

### 5.2.35. LUBRICATION

#### GENERAL INFORMATION

Lubrication of the trommel screen should be performed with the aid of a manually or foot operated grease gun, filled with recommended grease. Before commencing work insofar as is possible remove old grease and other contamination. Remove and wipe off excess oil or grease.

#### LUBRICATION OF WHEEL AXLES

Grease in wheel axle hub bearings should be replaced by specialised service points. In order to conduct this lubrication, the complete hub should be disassembled as well as bearings and individual sealing rings should be removed. After careful washing and inspection, mount lubricated elements. If necessary, bearing and seals should be replaced with new parts. Lubricate the remaining elements of the axle.

#### SPRINGS

Before greasing leaf springs, clean them and blow with compressed air. Do not wash leaf springs using a pressure washer because water may enter between spring leaves. Lubricate this area using commonly available aerosol preparations which have lubricating and anti-corrosion properties. The outer leaf spring surface should be covered with a very thin layer of lithium or lime grease. For this purpose, silicone aerosol preparation can be also used. Sliding surface of leaf spring and leaf spring pin should be lubricated according to recommendations contained in table (5.5).

#### DRAWBAR

Drawbar hitching eye should be lubricated each time before hitching the trommel screen to truck tractor. Due to character of load, the use of greases for heavily loaded parts with addition of graphite or molybdenum is recommended.

#### SCREENING DRUM CHAIN

Before lubricating, remove remains of old grease from the chain. Use special washing preparations or extraction naphtha for cleaning. After cleaning, check correctness or rotation of chain rollers and joint connecting the chain and drum. After completed inspection, lubricate the chain.

#### SHIELD LOCKS

Clean the locks and blow them with compressed air. Lubricate all cooperating elements.



#### TIP

Grease nipples and areas requiring lubrication are indicated by black arrows on the lubrication plan drawing.

Table 5.5. Lubrication schedule

ITEM	LUBRICATION POINT	NUMBER OF LUBRI-CATION POINTS	TYPE OF GREASE	FREQUENCY
1	Hub bearing	12	A	24M
2	Expander levers	4	A	3M
3	Expander shaft slide bearings	8	A	3M
4	Leaf spring absorbers	4	C	1M
5	Rocker arm pin	2	B	1M
6	Leaf spring absorber pin	4	B	1M
7	Leaf spring absorber sliding surfaces	4	B	1M
8	Shield locks	10	D	3M
9	Shield pins	6	A	3M
10	Drawbar hitching eye	1	B	14D
11	Engine tipping frame pin	2	A	3M
12	Support	1	A	6M
13	Hydraulic cylinder eyes	10	A	3M
14	Screening drum chain	1	B	10D
D- day M - month				

Table 5.6. Recommended lubricants (symbols from Table 5.5)

A	Machine general-purpose grease (lithium, lime).
B	Grease for heavily loaded elements with addition of MoS <sub>2</sub> or graphite, chain grease.
C	Anti-corrosion and penetrating preparation in aerosol.
D	General-purpose machine oil, grease in aerosol.


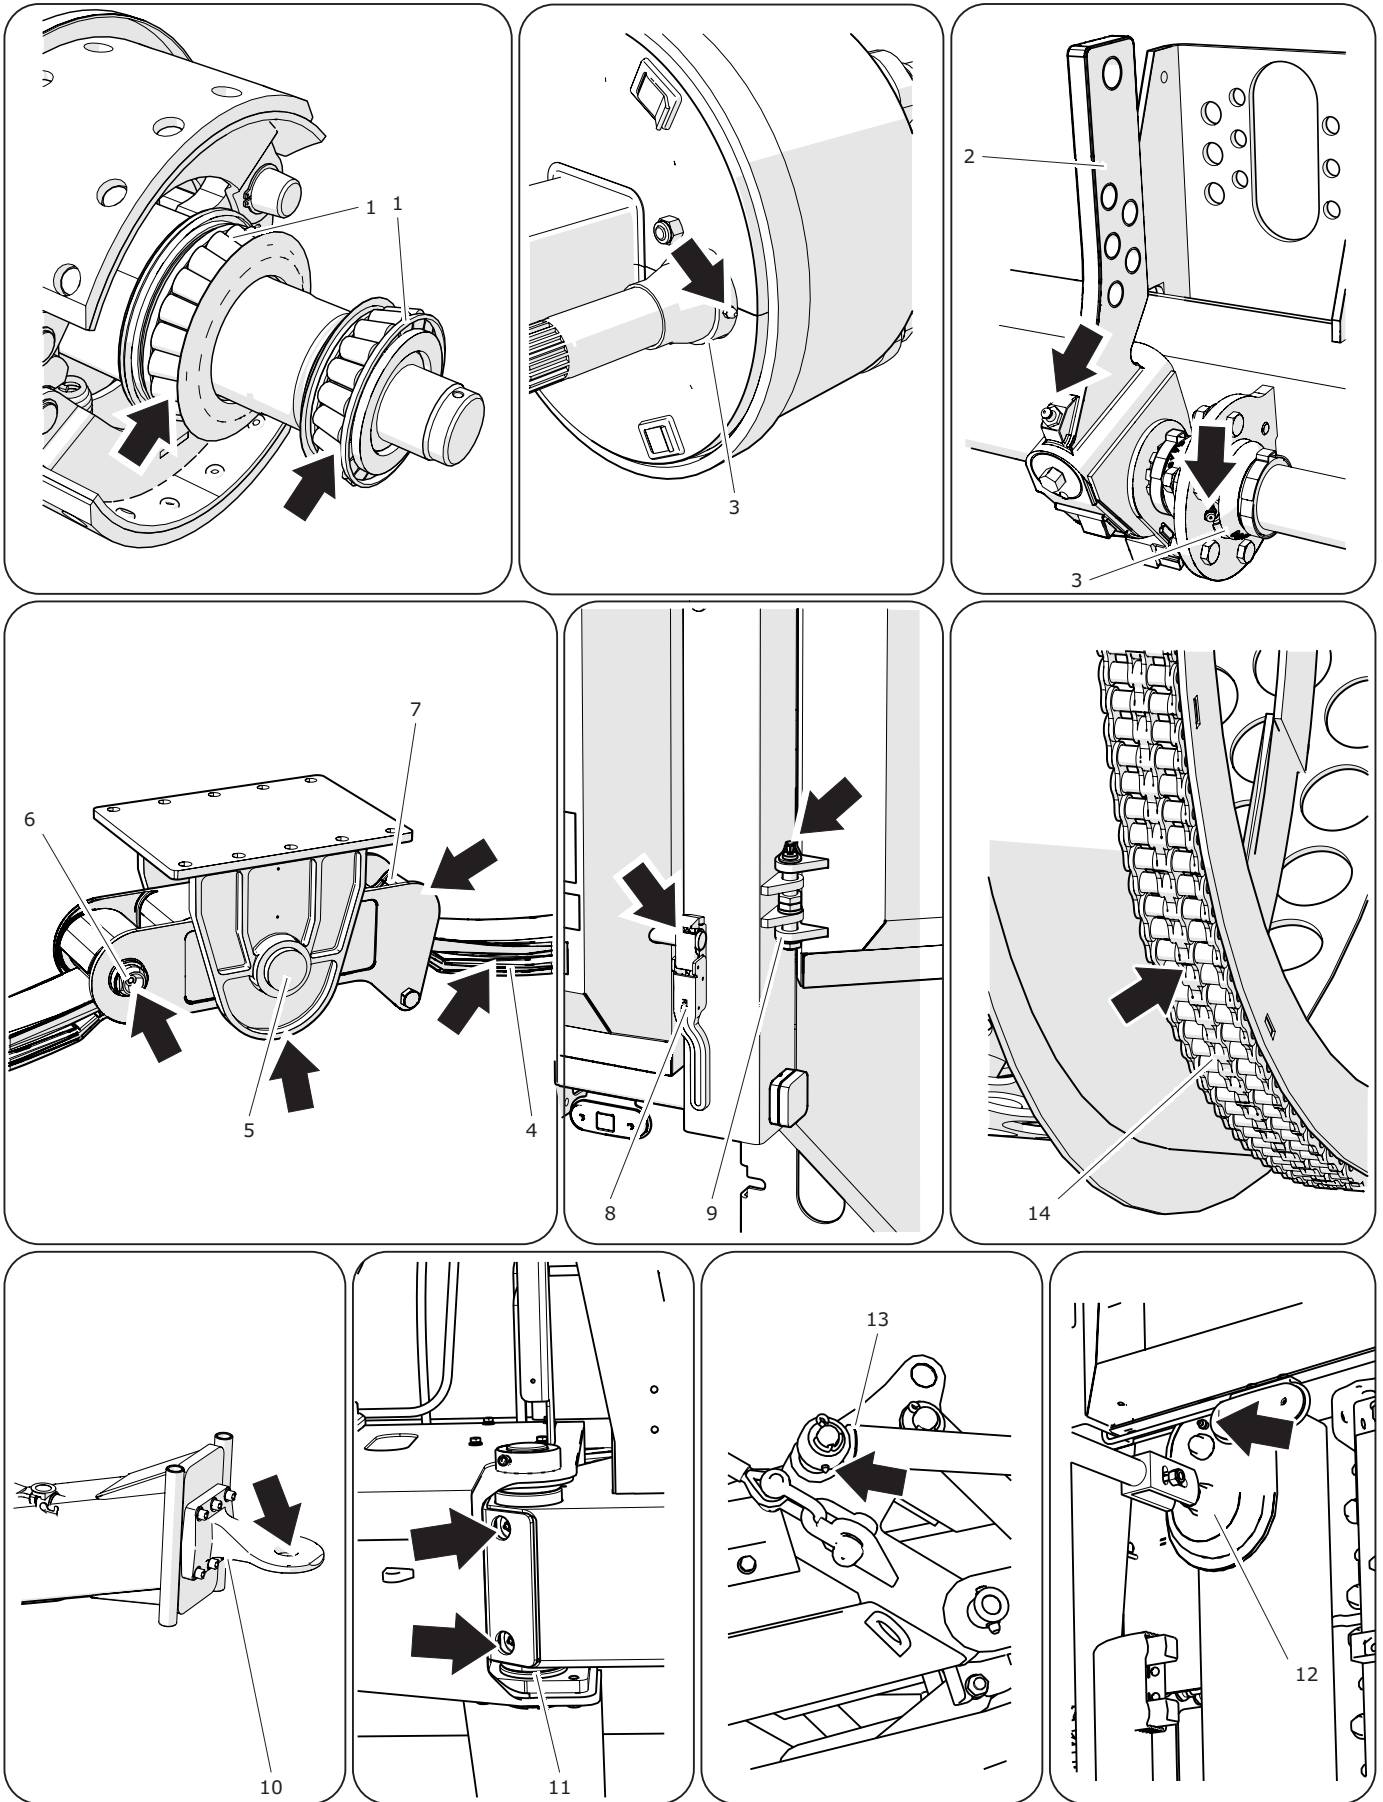


Figure 5.42 Lubrication points on the trommel screen


**ATTENTION**  
 Empty grease or oil containers should be disposed of according to the recommendations of the lubricant Manufacturer.

**TIP**  
 The remaining lubrication points do not require manual lubrication (they are lubricated automatically).

Press button (1) to run a single cycle of the central lubrication system pump. In GROENEVELD systems hold the red button TEST (2) for 1 second (1 forced lubrication cycle) or 6 seconds (10 lubrication cycles). The pump must be started manually each time after washing the trommel screen.

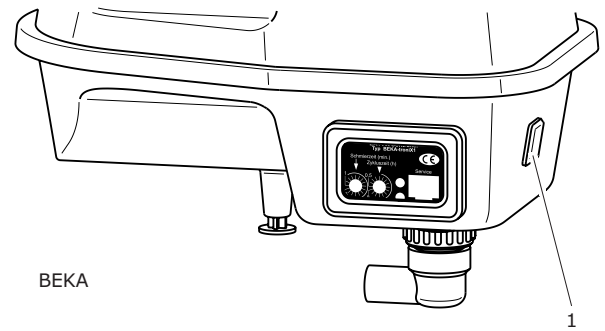

BEKA

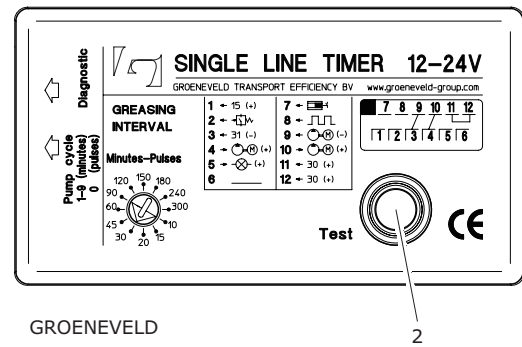

GROENEVELD

**Figure 5.43** Central lubrication system pump  
 (1) manual lubrication button (2) TEST button




5.2.36. CHECK OIL LEVEL AND CHANGE TRANSMISSION OIL

CHECK OIL LEVEL AND ADD OIL


- Open the front shield of the charging hopper.
- Check oil level in the gear

*Oil level should be approximately at the half of the height of the oil level indicator (1).*

- Unscrew filler plug (2) and add oil to the required level.

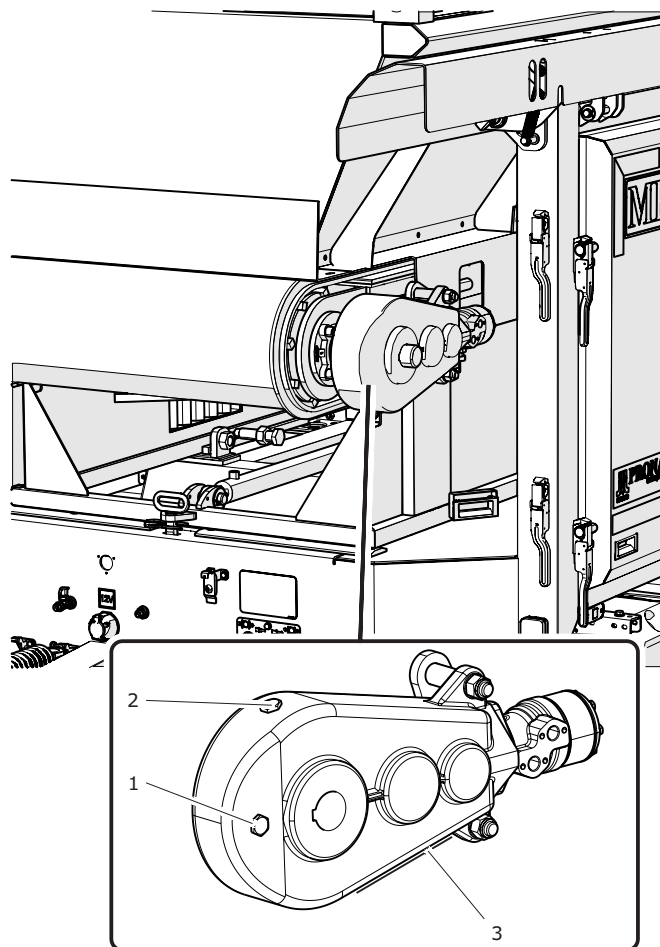

**Figure 5.44** Reduction gear  
 (1) oil level indicator (2) filler plug  
 (3) cover



**ATTENTION**  
 Significant oil leakages can cause damage to the transmission seal or rupture of its casing. Check the transmission for oil leaks.

- Check the filler plug seal, replace if necessary.
- Close the charging hopper shield.

REPLACE OIL

- Start the charging hopper conveyor drive for several minutes.
- Stop the drive, turn off the trommel screen engine.
- Open the front shield of the charging hopper.
- Loosen bolts of cover (3).
- Pour oil to a container. Unscrew the lower cover completely. Check technical condition of gear wheels.
- Replace seal and tighten cover.
- Unscrew filler plug and add oil to the required level.
- Check the filler plug seal, replace if necessary.
- Close the charging hopper shield.

## 5.3 REPLACE DRUM

- Protect the trommel screen against rolling by placing chocks under the wheels and immobilize the machine with parking brake.
- Start the trommel screen's engine.
- Unfold the side conveyor and the rear conveyor.
- Open and lock the front shield of the charging hopper (at the maximum opening angle).
- Remove the cotter pin (1) and pin (2) - figure (5.45), safety hopper.
- Slide out the charging hopper.
 

*Slide the charging hopper in until flange (3) slides out completely from the screening drum.*
- Raise the brush (4).
- Turn off the engine and remove key from ignition.
- Open and lock the left shield of the screening drum (at the maximum opening angle).
- Open the engine compartment, loosen the drum drive motor.
- Retract the rear guide roller from the drum.
- Fasten the drum using steel slings, belt slings or endless sling. Attach the slings to spreader boom.
- Disconnect slings and attach them to the other drum.
- In order to install the drum perform the above activities in reverse sequence.
- After installing the drum, check and adjust drum position and drum drive engine.

### DANGER

Before beginning work, make sure that lifting devices, slings and accessories have proper lifting capacity and are not damaged.

Do NOT replace the drum in strong gusty winds conditions.



Operator of lifting equipment should have the required authorisation.

Exercise particular caution while working, do not stand under lifted drum.


Disassembled drum should be immediately transported to the storage area and protected against rolling.



### TIP

Permissible weight of the screening drum is 1 800 kg.

- Lift the drum above the height of stake (6).
- Take the drum out of the chamber and move it to the left side of the trommel screen.
- Put the drum on the ground and secure it against rolling.

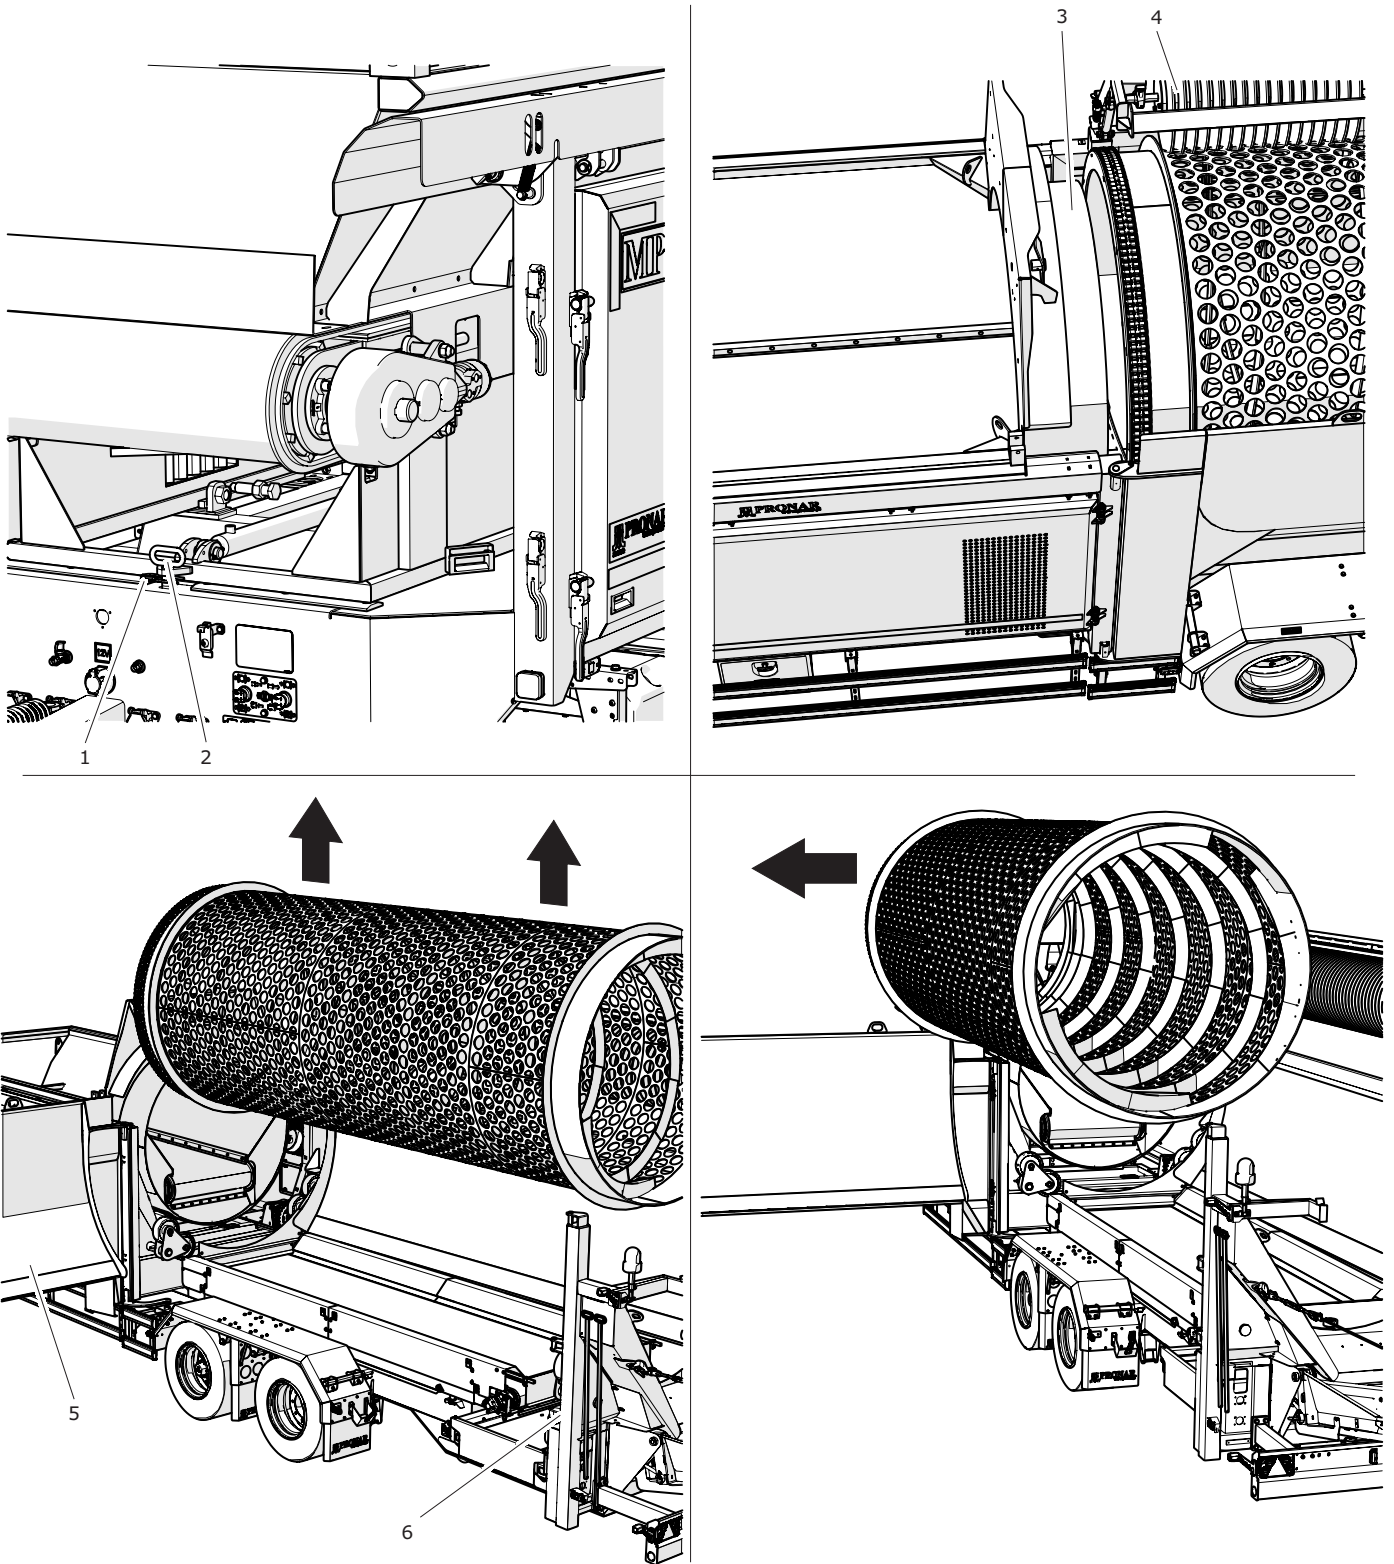

**Figure 5.45** Disassembly of the screening drum

(1) cotter pin

(2) pin


(3) flange

(4) brush

(5) left shield of screening drum

(6) stake

## 5.4 EMERGENCY RELEASE OF DIAPHRAGM-SPRING ACTUATOR

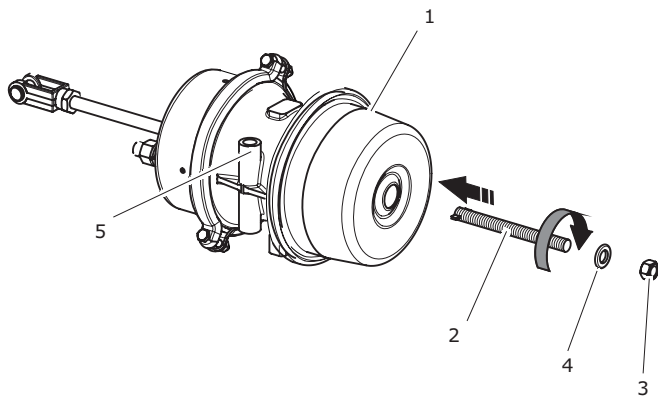

**Figure 5.46** Diaphragm-spring actuator  
 (1) actuator (2) tensioning bolt  
 (3) nut (4) washer  
 (5) tensioning bolt holder

Air may enter the brake system, including brake cylinders, and the machine's brakes may be locked as a result of pneumatic system failure or after extended parking of the trommel screen. Emergency release of these actuators involves putting a spring under tension by means of a tensioning bolt. During normal operation, the bolt is located in the actuator holder (5).

### EMERGENCY RELEASE OF DIAPHRAGM ACTUATOR

- Immobilise the trommel screen by placing wheel chocks under the wheels.
- Remove stopper from the opening of the rear actuator.
- Insert tensioning bolt (2) into rear opening of the diaphragm actuator (1).
- Turn the bolt by 90°.
- Install washer (4) and screw nut (3) on.
- Tighten the nut until resistance is felt,

- Repeat the above steps for the other actuator.

In order to return to actuator normal operation mode, undo nut (3) and take tensioning bolt (2) out of the actuator. After completion of the activities, place the bolt together with other elements in the actuator holder (5) and protect the rear opening with a plastic stopper.



### DANGER

Exercise caution while working. When placing actuator spring under tension, the trommel screen is not immobilised with parking brake. That is why chocks must be placed under the machine wheels in order to secure the it against rolling.

## 5.5 EMERGENCY AERATION OF BRAKE SYSTEM

The purpose of the brake system aeration is to supply air to diaphragm-spring actuators in order to release the trommel screen brakes. The brake system aeration is performed mainly when the trommel screen brake system can not be correctly connected to tractor.

### PROCEDURE

- Hitch the drawbar hitching eye of the trommel screen to the truck.
  - Connect air conduit to valve (1).
  - Using an external source of compressed air aerate the brake system until the trommel screen's parking brake is completely released.
  - Disconnect air conduit and move the trommel screen.
  - Press valve head (1) in order to bleed the actuators.
- If the valve plug is not pressed, the screen will not be braked.*
- Unhitch the drawbar hitching eye and drive tractor away from the machine.

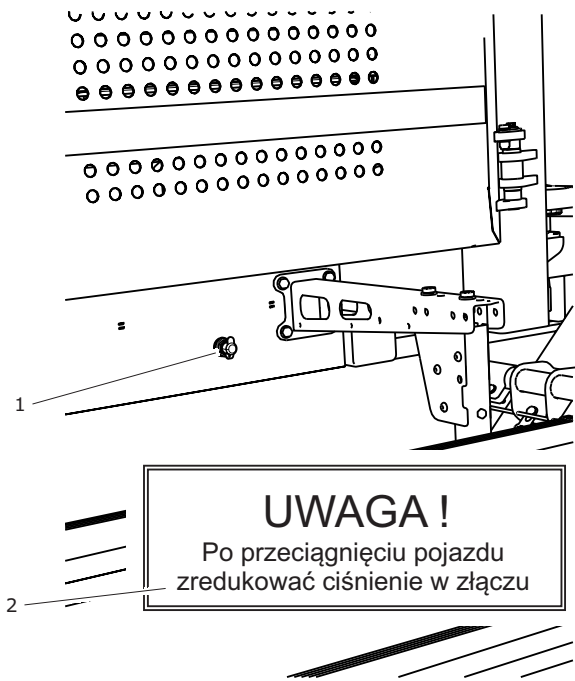


Figure 5.47

Aeration valve

(1) valve

(2) decal


### DANGER

After unhitching the trommel screen, necessarily bleed the brake system by pressing valve head (1).



If the trommel screen is unhitched from tractor and the brake system is aerated by means of valve (1), parking brake of the machine does not work. There is a risk that the trommel screen will unintentionally move.

## 5.6 ADJUST REAR CONVEYOR

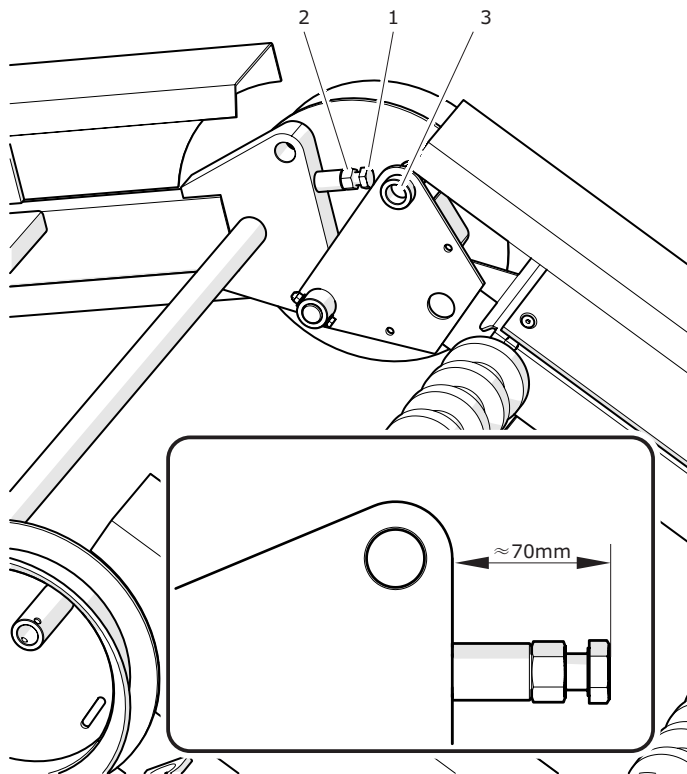

**Figure 5.48** Adjustment of conveyor  
 (1) adjusting bolt (2) counter nut  
 (3) pin socket

Adjustment of foldable part of the rear conveyor is required when this part of the conveyor can not be locked after unfolding. This happens when the openings of the sockets of the fixed part and the foldable part of the conveyor are not aligned.

### PROCEDURE

- Unfold the rear conveyor to such a position as to ensure comfortable access to adjusting bolt (1).
- Measure the distance between the bolt head and the bracket to which the sleeve is welded.
- Unscrew counter nut (2) and screw in or screw out bolt (1) to adjust the distance of

70 mm.

- Repeat this activity on the other side of the conveyor.
- Unfold the conveyor completely. Check whether it is possible to lock the conveyor. If it is not possible, adjust the length of bolt (1) on both sides of the conveyor.
- Check once again whether it is possible to lock the conveyor.
- After completion of the adjustment activities, tighten counter nut (2).



### TIP

One full rotation of adjusting bolt (1) is equal to the stroke of 2 mm.

## 5.7 CONSUMABLES

**Table 5.7.** List of recommended consumables

PLACE OF APPLICATION	CAPACITY	NAME	NOTES
Fuel tank	300 litres	Diesel oil	PN-EN 590+A1:2010
Engine (CATERPILLAR)	14 litres	CAT DEO-ULS	
DEUTZ engine	approximately 10 litres	see Annex B	10W40
Engine cooling system (CATERPILLAR)		CAT ELC	
Engine cooling system (DEUTZ)	approximately 15 litres	see Annex C	
Hydraulic system	100 litres	Lotos HLP32 HLP46 HLP68 <sup>(1)</sup>	purity class 10-12 microns
Reduction gear	4.3 kg	Lotos Titanis	GL5 80W90 (SAE90EP)
Automatic lubrication pump (BEKA)	4 kg	NLGI1	NLGI1, NLGI2 <sup>(2)</sup>
Automatic lubrication pump (GROENEVELD)	4 litres	Greenlube EPO	NLGI 0

<sup>(1)</sup> - Depending on the weather

<sup>(2)</sup> - In the summer

## 5.8 STORAGE

- The trommel screen should be kept in a roofed building.
- Immobilise the trommel screen with parking brake (release (pull out) the red push-button of the loosening-parking valve).
- If the machine will not be used for a long time, it is essential to protect it from adverse weather conditions, especially those which initiate corrosion of steel, have aggressive impact on anticorrosion coating of the tank and accelerate ageing of tyres and belt conveyors. During this time the machine must be unloaded. The trommel screen should be very carefully washed and dried.
- Corroded places should be cleaned of rust, degreased and protected using undercoat paint and then painted with surface paint according to colour scheme.
- In the event of prolonged work stoppage, it is essential to lubricate all elements regardless of the period of the last lubrication process.
- Wheel rims and tyres should be carefully washed and dried. During a longer storage of the trommel screen, it is recommended that every 2 to 3 weeks the machine should be moved a bit so that the place of contact of tyres with ground is changed. The tyres will not be deformed and maintain proper geometry. Also tyre pressure should be inspected from time to time, and if necessary, inflate the tyres to the appropriate pressure.
- During extended periods of inactivity, remove the battery and periodically check the charge level. If you need to charge the battery. Do not allow to fully discharge.



## 5.9 CHECK THE TIGHTENING TORQUE OF NUT AND BOLT CONNECTIONS


**Table 5.8.** Tightening torque for nut and bolt connections

THREAD	8.8	10.9
	M [Nm]	
M10	49	72
M12	85	125
M14	135	200
M16	210	310
M20	425	610
M24	730	1,050
M27	1,150	1,650
M30	1,450	2,100

Unless other tightening parameters are given, during maintenance repair work apply appropriate torque to tightening nut and bolt connections. Recommended tightening torques of the most frequently used bolt and nut connections are given in the table. Given values apply to non-lubricated steel bolts.

**Table 5.9.** Tightening torque for hydraulic conduit connections


SIZE CABLE	TIGHTENING TORQUE
DN	[Nm]
8	30÷50
10	50÷70
13	50÷70
16	70÷100
20	70÷100
25	100÷150
32	150÷200

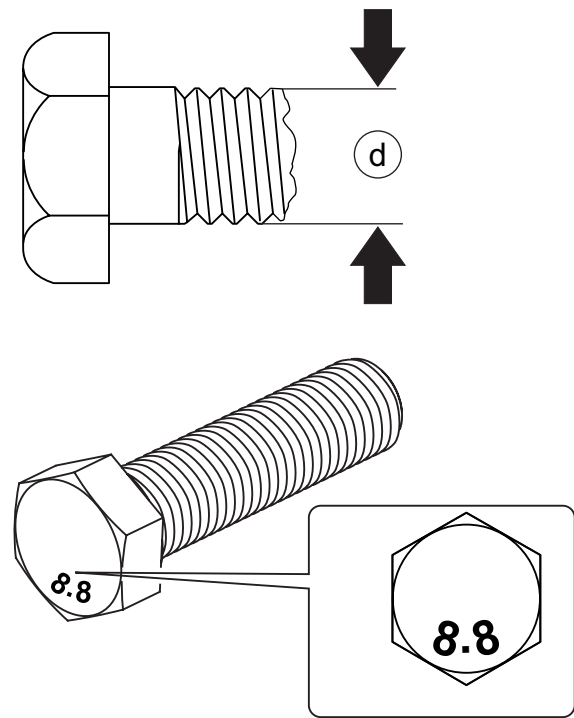

**Figure 5.49** Bolt with metric thread  
(1) resistance class (d) thread diameter

If you need to replace the connection hardware (bolts, nuts), the smallest allowable strength class is 8.8 (8). Do use hardware of the lower strength class.

## 5.10 ENGINE ERROR CODES

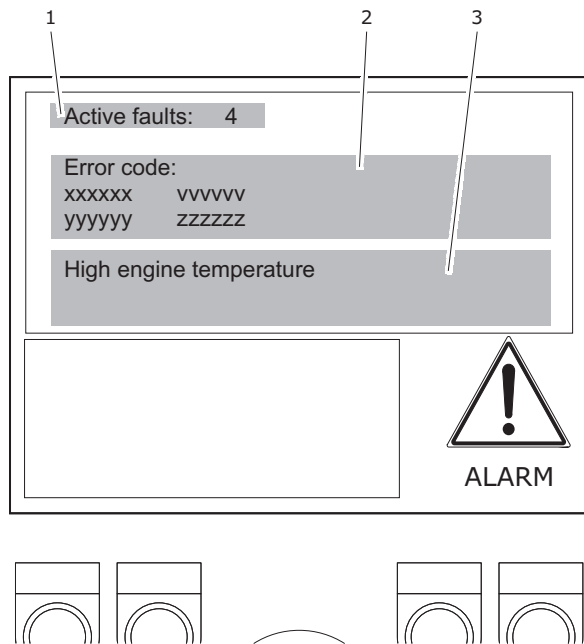

**Figure 5.50** LCD display

(1) number of errors      (2) error codes

(3) text messages

Driving engine parameters are continuously monitored by the control circuit. If there is an alarm condition, which does not necessarily mean a faulty drive, a message appears on the display panel.

**Table 5.11.** Text message codes

MESSAGE	CODE NUMBER	DESCRIPTION
High engine temperature	110	High engine temperature
Water in fuel	97	Water in fuel pre-filter tray
Air filter pollution	107	Contaminated air filter.
High temperature air inlet	105	High intake air temperature
Low engine oil pressure	100	Low engine oil pressure
Low coolant level	111	Low engine coolant level

**Table 5.10.** Panel description

FIELD NUMBER	NAME	DESCRIPTION
1	Active faults	Number of active faults
2	Error code	Fault code
3	Text messages	Text description of the error

Basic errors are displayed in the form of texts in the field (3), and error code (2) is also displayed – see table (5.11). If you notice any other errors, please contact your dealer to rectify the fault.

## 5.11 TROUBLESHOOTING

Table 5.12. Description of alarms on the main control panel

ALARM	CAUSE	REMEDY
Damaged alternator	Damaged voltage regulator	Repair regulator
	Damaged rectifier system	Repair system
	Worn brushes.	Replace brushes, check rings.
	Broken alternator drive vee-belt	Replace vee-belt.
Contaminated fuel filter or air filter.	Water in fuel filter decanter	Drain water from fuel filter
	Water in fuel tank	Drain water from fuel tank
	Contaminated air filter.	Replace air filter.
High coolant temperature	Insufficient amount of coolant in the system.	Check coolant level and add coolant.
	Leak in engine cooling system	Check and seal engine cooling system. Replace damaged parts.
	Damaged thermostat	Replace thermostat.
	Contaminated radiator.	Clean the radiator
	Dirty radiator cover	Clean the cover.
	Sensor circuit shorted	Repair sensor lead.
	Broken cylinder head, damaged cylinder head gasket.	Repair engine.
Low engine oil pressure	Damaged oil pump	Repair or replace.
	Low oil level	Check oil level and add oil
	Contaminated (clogged) oil filter	Replace filter, check cause of clogged filter

ALARM	CAUSE	REMEDY
Low engine oil pressure	Short-circuit of sensor lead to ground.	Repair sensor lead.
	Worn bearings of crank-piston system	Replace bearing shells
Low hydraulic oil level.	Loss of oil	Check hydraulic system for tightness, check condition of hydraulic conduits and connections. Check tightness of tank and oil cooler.
High hydraulic oil temperature.	Dirty oil cooler	Blow oil cooler with compressed air
	Fan does not work	Check the fuse (30A) in the main control panel box.
	Dirty oil cooler cover	Blow oil cooler cover with compressed air
	Overloaded trommel screen drive system	Check and remove clogging, reduce amount of charge material loaded to the charging hopper.
	Mechanically damaged pump	Repair pump
	Damaged thermostat Faulty temperature sensor	Replace.
Faulty engine cooler cleaning system.	Overheated radiator cleaning system control.	Wait at least one operation cycle. If blade setting does not change repair the controller. If the fan is activated, the system has been overheating and internal fuse cooled down to allow the system to operate.
	The LED on the controller does not light up, the radiator cleaning system does not start.	Check the controller power supply wires. Check the controller ground wire.
	The LED on the controller flashes once every 12 seconds.	Compressor error. If the DIP switch (first from right) is set in ON position, it may mean earth fault, exceeding the maximum operating temperature of the circuit or interruption of the compressor circuit.

ALARM	CAUSE	REMEDY
Faulty engine cooler cleaning system.	The LED on the controller flashes twice every 12 seconds.	Valve circuit error If the DIP switch (first from right) is set in ON position, it may mean earth fault, exceeding the maximum operating temperature of the circuit. If the DIP switch (first from right) is set in OFF position it may mean interruption of the valve circuit.
Low fuel level.	Low fuel level.	Add fuel
	Disconnect sensor lead.	Check and repair
Red LED blinking on IFM controller (inside the main control panel housing)	IFM controller fault	Replace controller.
	Output short circuit	Check insulation of leads, check tightness of housing.

Table 5.13. Light codes of the central lubrication system pump (BEKA)

LED COLOUR	CODE DESCRIPTION	MEANING OF CODE
Green LED	Lights up for 1,5 second and then goes off	Pump is ready for work.
Red LED	Lights up for 1,5 second and then goes off	
Green LED	Lights up during lubrication cycle	Pump is on, lubrication process
Red LED	Off	
Green LED	Off	Low grease level in the tank
Red LED	Lights up all the time after power on	
Green LED	Lights up all the time after power on	Excessive pressure increase in lubrication system.
Red LED	Blinks every 1 second	
Green LED	Off	Pump does not rotate.
Red LED	Blinks every 1 second	

LED COLOUR	CODE DESCRIPTION	MEANING OF CODE
Green LED	Off	Controller memory error
Red LED	Blinks every 0.5 second	


Table 5.14. Other faults

FAULT	CAUSE	REMEDY
Problem with moving off	Brake system conduits not connected	Connect brake conduits.
	Parking brake applied	Release parking brake.
	Damaged pneumatic system connection conduits	Replace.
	Leaking connections.	Tighten, replace washers or seal sets, replace conduits.
	Control valve or braking force regulator damaged	Check valve, repair or replace.
	No air in brake system	Aerate brake system.
Noise in axle hubs	Excessive play in bearings	Check play and adjust if needed
	Damaged bearings.	Replace bearings.
	Damaged hubs.	Replace.
Poor reliability of braking system	Insufficient pressure in system	Check pressure on tractor pressure gauge, wait till compressor fills tank to required pressure. Damaged air compressor in tractor Repair or replace. Damaged brake valve in tractor. Repair or replace. Leaking system conduits or connections. Check system for tightness.
Excessive heating of axle hubs	Damaged self-regulator of expander lever	Replace.
	Worn brake linings.	Change brake shoes

FAULT	CAUSE	REMEDY
Incorrect hydraulic system operation.	Improper hydraulic oil viscosity.	Check quality of oil. Change oil.
	Damaged or contaminated ram cylinder	Check cylinder ram piston (bending, corrosion), check ram cylinder for tightness (piston seal), in case of need repair or replace ram cylinder.
	Excessive cylinder loading.	Check and reduce cylinder loading if necessary
	Damaged hydraulic lines.	Check and ascertain that hydraulic conduits are tight, not fractured and properly tightened. If necessary replace or tighten.
	Contaminated hydraulic oil	Check cleanliness of oil, replace filters, replace oil, clean up reservoir.
Excessive wear of left and right tyre shoulders on both sides.	Too low air pressure in tyres. Excessive speed of travel on turns. Too fast loss of air due to damaged wheel, valve, puncture.	Check air pressure. Regularly check correctness of air pressure in tyres. Reduce speed of travel while driving on turns on hardened surface. Check wheel and valve. Replace damaged parts.
Excessive wear of central part of tyre.	Excessive air pressure in tyres.	Check air pressure. Regularly check correctness of air pressure in tyres.
Excessive wear of left or right tyre shoulder, on one side	Incorrect toe-in. Incorrectly positioned wheel axles.	Damaged leaf spring on one side of the suspension system. Replace leaf springs.
Worn tyre tread.	Damaged suspension system, broken leaf spring. Damaged brake system, blocking of brakes, incorrectly adjusted brake system. Too frequent and violent braking.	Check suspension system for looseness, check leaf springs. Replace damaged or worn elements. Check brake system for malfunctions. Adjust expander lever.
Side crack.	Prolonged use of tyre with low air pressure. Excessive loading of the trommel screen.	Regularly check air pressure in tyres. Check weight of load while loading.
Abrasions on external side edge of tyre.	Too frequent driving over sharp or high obstacles (e.g. curbs).	Control driving technique.
Damaged rim (hardening and cracking near rim), brittleness of tyre.	Incorrect braking technique. Too frequent violent braking. Damaged brake system.	Check brake system. Control braking technique. Damage occurs due to excessive heating of hub which leads to heating of wheel.

<b>FAULT</b>	<b>CAUSE</b>	<b>REMEDY</b>
Various functions of the trommel screen do not operate	Burnt out fuse	Replace fuse with a correct one.
	Damaged relay.	Check and replace.



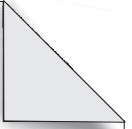

A series of horizontal lines spanning the width of the page, providing a template for writing. The lines are evenly spaced and extend across most of the page's width, leaving a small margin on the left and right sides.



# ANNEX A

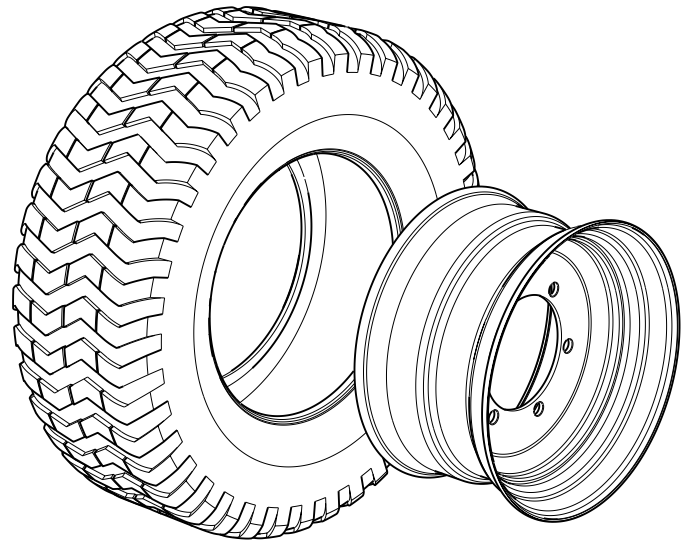


Table 6.1. Tyres

ITEM	TYRE	WHEEL RIM
1	435/50 R19.5 160J	19.5x14.0 8xM20x1.5 ET=0 ø221/275



# ANNEX B

**Table 7.1.** Reference list of lubricating oil for Deutz engines

<b>MANUFACTURER</b>	<b>COMMERCIAL NAME</b>	<b>SAE VISCOSITY CLASSIFICATION</b>
DEUTZ AG	DEUTZ OEL TLX 10W40 FE	10W-40
	DEUTZ ENGINE OIL 15W40	15W-40
AGCO	Fendt Ultra Grade 10W-40	10W-40
	Fendt Ultra Grade 15W-40	15W-40
ADDINOL	ADDINOL Super Longlife MD 1047	10W-40
	ADDINOL Super Truck MD 1049	10W-40
ARAL AG	ARAL Mega Turboral 10W-40	10W-40
	ARAL Super Turboral 5W-30	5W-30
	ARAL Turboral 10W-40	10W-40
Atlantic Grease & Lubricants FCZ	Atlantic Super Top Fleet Engine Oil SAE 15W-40	15W-40
AVIA	Turbosynth CFE 10W-40	10W-40
AVISTA OIL Refining & Trading Deutschland GmbH	MOTOR GOLD Turbotec SAE 15W-40	15W-40
	MOTOR GOLD Performance Truck	10W-40
	Pennasol Performance Truck	10W-40
	Pennasol Turbo Super	15W-40
AXCL GULF FZC	AXCL XDi 2 API CI-4 / CH-4 SAE 15W40	15W-40
Bahrain Petroleum Company	FRONTIER TURBO	15W-40
BayWa AG	TECTROL HDC 1540	15W-40
	TECTROL Turbo 4000	10W-40
	TECTROL Super Multisyn Plus	10W-40
	TECTROL Super Truck 1040	10W-40
	TECTROL Super Truck 1540	15W-40
	TECTROL Super Truck FE 1040	10W-40
BITA Trading GmbH	BIZOL Diesel Ultra	10W-40
	Bizol Truck Essential	10W-40
BP Plc.	BP TERRAC Advanced Motor 10W-40	10W-40
	BP Vanellus Agri 10W-40	10W-40
	BP Vanellus Agri 15W-40	15W-40
	BP Vanellus Max 5W-30	5W-30
	BP Vanellus Max 10W-40	10W-40
	BP Vanellus Multi A 10W-40	10W-40
	BP Vanellus Multi A 15W-40	15W-40
	BP Vanellus Multi-Fleet 10W-40	10W-40

<b>MANUFACTURER</b>	<b>COMMERCIAL NAME</b>	<b>SAE VISCOSITY CLASSIFICATION</b>
Bucher AG Langenthal	MOTOREX Farmer MC MOTOREX MC Power Plus	10W-40 10W-40
Carl Harms Mineralöle	Oilfino Econ T 8000 10W-40	10W-40
Castrol Limited	Castrol Agri Power Ultra Castrol Vecton 10W-40 Castrol Vecton Arctic 5W-30 Castrol Vecton Fuel Saver 5W-30 E7 Castrol Vecton Long Drain 10W-40 Castrol Vecton Long Drain 10W-40 E7	10W-40 10W-40 5W-30 5W-30 10W-40 10W-40
Chevron Lubricants	Caltex Delo 400 Multigrade 15W-40 Delo XLD Multigrade 10W-40 Chevron Delo 400 Multigrade 15W-40 Delo 400 Multigrade SAE 15W-40 Texaco Ursa Premium TD 10W-40 Texaco Ursa Premium TD 15W-40 Ursa Premium TDX (E4) 10W-40 Texaco Ursa Ultra MG 15W-40 Ursa Premium TD 10W-40 Ursa Ultra MG SAE 15W-40	15W-40 10W-40 15W-40 15W-40 10W-40 15W-40 10W-40 15W-40 10W-40 15W-40
CLAAS	Claas Agrimot SDX 15W-40 Claas Agrimot SDX FE 15W-30 Claas Agrimot Ultratec 10W40	15W-40 15W-30 10W-40
Classic Schmierstoff GmbH & Co. KG	Classic Meduna LT 1040	10W-40
CONDAT Lubrifiants	VICAM EXEL 10W40	10W-40
Deutsche Ölwerke Lubmin GmbH	AVENO HC PT Diesel SAE 10W-40	10W-40
EMKA Schmiertechnik GmbH	EMKA Cargo 10W40	10W-40
ENOC Lubricants	ENOC Vulcan 770X, SAE 15W-40, CI-4	15W-40
ENI S.p.A.	Eni i-Sigma performance E7 15W-40 Eni i-Sigma top 10W-40	15W-40 10W-40
ELF Lubricants	EKF Agritec ELF Agritec FE ELF Agritec Syn FE ELF Agritec Syn	15W-40 15W-30 10W-30 10W-40
Finke Mineralölwerk GmbH	Aviaticon Turbo D 10W/40	10W-40


<b>MANUFACTURER</b>	<b>COMMERCIAL NAME</b>	<b>SAE VISCOSITY CLASSIFICATION</b>
Fuchs Petrolub SE	AGRIFARM STOU 10W-40 MC Pro	10W-40
	TITAN Cargo MC	10W-40
	TITAN Truck plus	15W-40
	TITAN UNIMAX ULTRA MC	10W-40
Gazpromneft – Lubricants	G-Profi GT 10W-40	10W-40
	G-Profi MSI 10W40	10W-40
	G-Profi MSI Plus 15W40	15W-40
GERMAN MIRROR LUBRICANTS & GREASES Co.	MIRR TURBO PLUS DIESEL OIL API CI-4 SAE 10W40	10W-40
	MIRR TURBO PLUS DIESEL OIL API CI-4 SAE 15W40	15W-40
Gulf Western Premium Lubricating Oils (Australia) P/L	TOP DOG XDO	15W-40
Hessol Lubrication Gmbh	Hessol Super Longlife	10W-40
	Hessol Dimo	10W-40
Kuwait Petroleum	Q8 T750 15W-40	15W-40
	Q8 T800 10W-40	10W-40
	Q8 T860 10W-40	10W-40
Liqui Moly GmbH	Liqui Moly LKW Langzeit Motoröl	10W-40
LOTOS S.A.	TURDUS POWERTEC 1000 15W40	15W-40
	TURDUS POWERTEC 3000 10W40	10W-40
LUKOIL Lubricants	LUKOIL Avantgarde Professional	10W-40
	LUKOIL Avantgarde Ultra 15W-40	15W-40
Meguin GmbH & Co. KG	Megol Motorenoel Super Leichtlauf FAMO	10W-40
	Megol Motorenoel Super LL DIMO Premium	10W-40
Minerva Oil	LONG TRUCK 10W-40	10W-40
MOL-LUB Kft.	MOL Dynamic Synt Diesel E4 10W40	10W-40
MORRIS Lubricants	Fendt Ultra Grade UHPD	10W-40
	Ring Free XHDS 10W/40	10W-40
MOTUL S.A.	MOTUL Tekma Ultima 10W-40	10W-40
NORDLUB Deutschland GmbH	NORDLUB XP-HDX SAE 10W-40	10W-40
Olie Maatschappij Anglo Nederland bv (OMAN Lubricants)	OMAN Multifleet UHPD	10W-40
OMV	OMV super truck SAE 10W-40	10W-40
OMV Petrol Ofisi	PO Maximus Turbo Diesel Extra 15W40	15W-40
Opet Fuchs Madeni YAG SAN. VE TIC. A.S	FullPro HT	10W-40
	FullPro HT	15W-40

<b>MANUFACTURER</b>	<b>COMMERCIAL NAME</b>	<b>SAE VISCOSITY CLASSIFICATION</b>
Petronas Lubricants International	Akros Synt Gold URANIA 100K	10W-40 10W-40
PHI Oil GmbH	Motodor EQ Silver 10W40 Motodor Silver 10W40	10W-40 10W-40
Ravensberger Schmierstoffvertrieb	RAVENOL Expert SHPD RAVENOL Performance Truck RAVENOL Turbo Plus SHPD	10W-40 10W-40 15W-40
REPSOL	REPSOL DIESEL TURBO THPD 10W40 REPSOL DIESEL TURBO THPD 15W40	10W-40 15W-40
ROWE Mineralölwerk GmbH	ROWE HIGHTEC FORMULA GT SAE 10W-40 HC ROWE HIGHTEC TURBO HD SAE 15W40 PLUS	10W-40 15W-40
Shell International	Shell Rimula R3 X Shell Rimula R4 X Shell Rimula RT4 X Shell Rimula R5 E	15W-40 15W-40 15W-40 10W-40
SRS Schmierstoff Vertrieb GmbH	SRS Cargolub TFE SRS Cargolub TFG plus SRS Cargolub TFX SRS Turbo-Rekord	10W-40 10W-40 10W-40 15W-40
Suprema Oil Co. Ltd.	Suprema Performance Truck	10W-40
Techno-Einkauf GmbH	TECAR Hightec HC 10W-40	10W-40
TEDEX S.A.	Tedex Diesel Truck SHPD Motor Oil	15W-40
TOTAL Lubricants	TOTAL Rubia Works 1000 TOTAL Tractagri HDX TOTAL Tractagri HDX FE TOTAL Tractagri HDX Syn FE TOTAL Tractagri HDX Syn	15W-40 15W-40 15W-30 10W-30 10W-40
Valvoline	Valvoline All Fleet Extra SAE 15W-40 Valvoline All Fleet Extreme NTI 10W-40	15W-40 10W-40
YPF S.A.	Extravida XV 500	10W-40
Zeller -Gmelin GmbH & Co. KG	Divinol Multimax Extra 10W40	10W-40
Wolf Oil Corporation N.V.	WOLF OFFICIALTECH 10W40 S2	10W-40

Oil reference list was developed on the basis of the document:

*DEUTZ Quality Class, DEUTZ Compact Engines, Release List - issue 02/2015.*

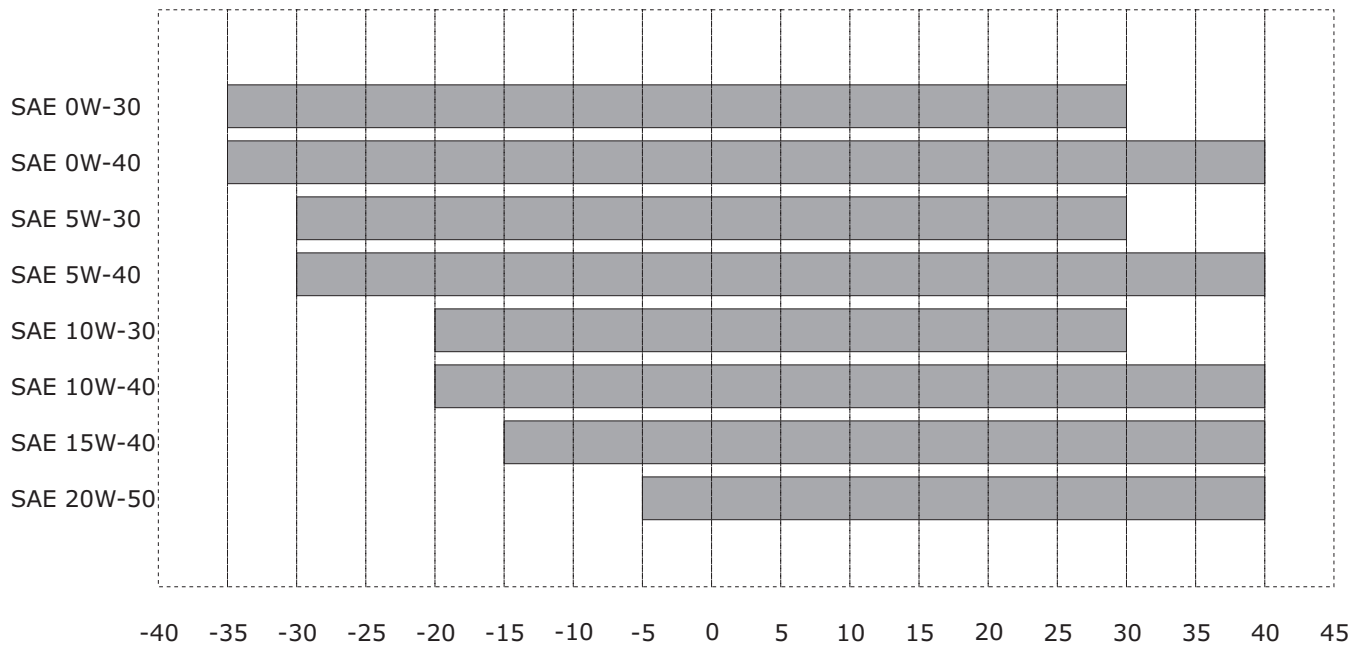

**TIP**

Current reference lists of oils used in DEUTZ engines are available on the DEUTZ website:



[http://www.deutz.com/service/operating\\_liquids\\_brand\\_additives/deutz\\_quality\\_class.en.html](http://www.deutz.com/service/operating_liquids_brand_additives/deutz_quality_class.en.html)



# ANNEX C

**Table 8.1.** Deutz coolant concentrates

<b>PACKAGING</b>	<b>PART NUMBER</b>
5 litre container	0101 1490
20 litre container	0101 4616
210 litre container	1221 1500

**Table 8.2.** Reference list of Deutz coolant concentrates

<b>MANUFACTURER</b>	<b>COMMERCIAL NAME</b>
DEUTZ AG	DEUTZ Kühlsystemsenschutzmittel
BayWa AG	TECTROL COOLPROTECT
Bucher AG Langenthal	MOTOREX COOLANT G48 Concentrate
CLASSIC Schmierstoff GmbH	CLASSIC Kolda UE G48®
EUROLUB GmbH	EUROLUB® Kühlerschutz D-48 Extra
Finke Mineralölwerk GmbH	Aviaticon Finkofreeze F48
Fuchs Petrolub SE	MAINTAIN FRICOFIN MAINTAIN FRICOFIN -35

Oil reference list was developed on the basis of the document:

*DEUTZ Quality Class Coolant System Protective Agents, DEUTZ Compact Engines, Release List - issue 02/2015*

In exceptional cases, other coolants may be used. To do this, contact an authorized DEUTZ service.

## TIP



Current reference lists concentrates used in DEUTZ engines are available on the DEUTZ website:

[http://www.deutz.com/service/operating\\_liquids\\_brand\\_additives/cooling\\_system\\_conditioner.en.html](http://www.deutz.com/service/operating_liquids_brand_additives/cooling_system_conditioner.en.html)

Table 8.3. Prepare the coolant

COOLANT CONCENTRATE CON- TENT	WATER CONTENT	MINIMUM AMBIENT TEMPERA- TURE
min 35%	65%	-22°C
40%	60%	-28°C
45%	55%	-35°C
maks. 50%	50%	-41°C

DEUTZ coolant should be prepared using the proportions shown in the following table. The other allowed concentrates should be diluted according to the manufacturer's recommendations.

If used in temperatures below -41°C, consult

authorised DEUTZ service.

Water used in preparation of the coolant must not contain impurities (especially solid), and should have the parameters listed in the following table.

Table 8.4. Water to prepare the coolant

WATER PARAMETER	UNIT	MIN	MAX.
Ph value	-	6.5	8.5
Chlorine (Cl)	mg/l	-	100
Sulfates (SO <sub>4</sub> )	mg/l	-	100
Total hardness (CaCO <sub>3</sub> )	mmol/l		3.56
	mg/l		356
	°dGH		20
	°e		25
	°fH		35.6